

# U-Boot for Freescale i.MX5X

U-Boot has been ported to the i.MX5X 3-stack board, Babbage board. This document describes how to load, run and build U-Boot images on the board(s).

## 1 Overview

The U-Boot utility is a multi-platform, open-source, universal boot-loader with comprehensive support for loading and managing boot images, such as the Linux kernel. It supports the following features:

- Network download: TFTP, BOOTP, DHCP, NFS
- Serial download: s-record, binary (via Kermit)
- Flash management: copy, erase, protect, cramfs, jffs2
- Flash Types: CFI NOR-Flash, NAND-Flash, SPI Flash
- Memory utilities: copy, dump, crc, check, mtest
- Mass Storage Devices: USB
- Boot from disk: raw block, ext2, fat, reiserfs
- Interactive shell: choice of simple or "busybox" shell with many scripting features

For more information on U-Boot, refer to <http://www.denx.de/wiki/U-Boot/WebHome>.

## 2 Board Dip Switches Setup

Be sure to follow the switch settings required for the board in order to have U-Boot up and running properly.

### 2.1 i.MX51 3-stack Switch Settings

The i.MX51 3-Stack consists of a CPU board, a Personality board and a Debug board. The Debug board has a RS232 interface and an Ethernet connector.

#### 2.1.1 CPU Board Dip Switch Settings

The following table shows the dip switch settings for the CPU boardip switch settings for the CPU board.

**Table 2.1.1.1: i.MX51 TO 2.0, CPU#6 Board Switch Setup for NAND Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	N/A	N/A	N/A	N/A
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
SW3	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
SW4	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.1.1.2: i.MX51 TO 2.0, CPU#6 Board Switch Setup for MMC Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	N/A	N/A	N/A	N/A
SW2	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
SW4	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.1.1.3: i.MX51 TO 2.0, CPU#6 Board Switch Setup for SPI-NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	N/A	N/A	N/A	N/A
SW2	ON	ON	OFF	OFF	OFF	OFF	ON	ON
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON

**Table 2.1.1.3: i.MX51 TO 2.0, CPU#6 Board Switch Setup for SPI-NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW4	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF

## 2.1.2 Debug Board Dip Switch Settings

The following tables shows the dip switch settings for the Debug board.

**Table 2.1.2.1: i.MX51 Boot Mode Switch Settings**

	SW5	SW6	SW7	SW8	SW9	SW10
Internal Boot	0	0	0	0	0	0
External Boot	0	0	0	0	1	0

**Table 2.1.2.2: Debug Board SW4 settings**

Switch	1	2	3	4	5	6	7	8
SW4	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON

## 2.2 i.MX51 Babbage Switch Settings

The following tables shows the dip switch settings for the i.MX51 Babbage 2.0 board.

**Table 2.2.0.1: Dip Switch Setup for MMC Boot**

Switch	S-1	S-2	S-3	S-4	S-5	S-6	S-7	S-8	S-9	S-10
	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF

**Table 2.2.0.2: Dip Switch Setup for SPI-NOR Boot**

Switch	S-1	S-2	S-3	S-4	S-5	S-6	S-7	S-8	S-9	S-10
	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF

The following tables shows the dip switch settings for the i.MX51 Babbage 1.0 board.

**Table 2.2.0.3: Boot Mode**

Switch	Internal Boot
SW6	OFF(Towards the MMC/SD card slot)
SW7	OFF(Towards the MMC/SD card slot)

**Table 2.2.0.4: Dip Switch Setup for MMC Boot**

Switch	1	2	3	4	5	6	7	8
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW4	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW5	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

**Table 2.2.0.5: Dip Switch Setup for SPI-NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW4	ON	ON	OFF	OFF	OFF	OFF	ON	ON

**Table 2.2.0.5: Dip Switch Setup for SPI-NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW5	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

## 2.3 i.MX53 evk Switch Settings

### 2.3.1 i.MX53 evk board dip switch settings

**Table 2.3.1.1: Dip Switch Setup for SD Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.1.2: Dip Switch Setup for SD bit width**

SW3	6
1-bit	OFF
4-bit	ON

**Table 2.3.1.3: Dip Switch Setup for MMC Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.1.4: Dip Switch Setup for MMC bus width**

SW3	6	7	8
1-bit	OFF	OFF	OFF
4-bit	ON	OFF	OFF
8-bit	OFF	ON	OFF
4-bit DDR	ON	OFF	ON
8-bit DDR	ON	ON	OFF

**Table 2.3.1.5: Dip Switch Setup for ESDHC Slot Selection**

SW2	5	6
Slot 1	OFF	OFF
Slot 2	ON	OFF
Slot 3	OFF	ON
Slot 4	ON	ON

**Table 2.3.1.6: Dip Switch Setup for SD/MMC normal boot and fast boot**

SW1	5
Regular	OFF
Fast	ON

**Table 2.3.1.7: Dip Switch Setup for SPI NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.1.8: Dip Switch Setup for One-Nand Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.1.9: Dip Switch Setup for SATA Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.1.10: Dip Switch Setup for PATA Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

## 2.3.2 i.MX53 arm2 board dip switch settings

**Table 2.3.2.1: Dip Switch Setup for SD Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.2.2: Dip Switch Setup for SD bit width**

SW2	6
1-bit	OFF

<b>SW2</b>	<b>6</b>
<b>4-bit</b>	ON

**Table 2.3.2.3: Dip Switch Setup for MMC Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
<b>SW1</b>	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
<b>SW2</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
<b>SW3</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.2.4: Dip Switch Setup for MMC bus width**

SW2	6	7	8
<b>1-bit</b>	OFF	OFF	OFF
<b>4-bit</b>	ON	OFF	OFF
<b>8-bit</b>	OFF	ON	OFF
<b>4-bit DDR</b>	ON	OFF	ON
<b>8-bit DDR</b>	ON	ON	OFF

**Table 2.3.2.5: Dip Switch Setup for ESDHC Slot Selection**

SW3	5	6
<b>Slot 1</b>	OFF	OFF
<b>Slot 2</b>	ON	OFF
<b>Slot 3</b>	OFF	ON
<b>Slot 4</b>	ON	ON

**Table 2.3.2.6: Dip Switch Setup for SD/MMC normal boot and fast boot**

SW1	5
<b>Regular</b>	OFF
<b>Fast</b>	ON

**Table 2.3.2.7: Dip Switch Setup for SPI NOR Boot**

Switch	1	2	3	4	5	6	7	8
<b>SW1</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
<b>SW2</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
<b>SW3</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.2.8: Dip Switch Setup for One-Nand Boot**

Switch	1	2	3	4	5	6	7	8
<b>SW1</b>	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
<b>SW2</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
<b>SW3</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.2.9: Dip Switch Setup for SATA Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.2.10: Dip Switch Setup for PATA Boot**

Switch	1	2	3	4	5	6	7	8
SW1	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

### 2.3.3 i.MX53 smd board dip switch settings

**Table 2.3.3.1: Dip Switch Setup for SD Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
SW26	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
SW28	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.3.2: Dip Switch Setup for SD bit width**

SW26	1
1-bit	OFF
4-bit	ON

**Table 2.3.3.3: Dip Switch Setup for MMC Slot1 Normal Boot**

Switch	1	2	3	4	5	6	7	8
SW26	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
SW28	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.3.4: Dip Switch Setup for MMC bus width**

SW26	1	2	3
1-bit	OFF	OFF	OFF
4-bit	ON	OFF	OFF
8-bit	OFF	ON	OFF
4-bit DDR	ON	OFF	ON
8-bit DDR	ON	ON	OFF

**Table 2.3.3.5: Dip Switch Setup for ESDHC Slot Selection**

SW28	7	8
Slot 1	OFF	OFF

SW28	7	8
Slot 2	ON	OFF
Slot 3	OFF	ON
Slot 4	ON	ON

**Table 2.3.3.6: Dip Switch Setup for SD/MMC normal boot and fast boot**

SW26	5
Regular	OFF
Fast	ON

**Table 2.3.3.7: Dip Switch Setup for SATA Boot**

Switch	1	2	3	4	5	6	7	8
SW26	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
SW28	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.3.3.8: Dip Switch Setup for PATA Boot**

Switch	1	2	3	4	5	6	7	8
SW26	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
SW28	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

## 2.4 i.MX53 START Switch Settings

The default boot mode is micro SD boot.

## 2.5 i.MX50 arm2 Switch Settings

**Table 2.5.0.1: Dip Switch Setup for 1-bit SD Slot 1 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.2: Dip Switch Setup for 1-bit MMC Slot 1 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.3: Dip Switch Setup for 1-bit SD Slot 2 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF

Switch	1	2	3	4	5	6	7	8
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.4: Dip Switch Setup for 1-bit MMC Slot 2 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.5: Dip Switch Setup for 4-bit SD Slot 2 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.6: Dip Switch Setup for 4-bit MMC Slot 2 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.7: Dip Switch Setup for 8-bit MMC Slot 2 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
SW3	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.8: Dip Switch Setup for CSPI NOR SS1 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF

**Table 2.5.0.9: Dip Switch Setup for ECSPI-1 NOR SS1 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF

**Table 2.5.0.10: Dip Switch Setup for ECSPi-2 NOR SS1 Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
SW3	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF

**Table 2.5.0.11: Dip Switch Setup for I2C3 EEPROM Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.12: Dip Switch Setup for I2C1 EEPROM Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.13: Dip Switch Setup for I2C2 EEPROM Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF

**Table 2.5.0.14: Dip Switch Setup for WEIM A/D-MUX NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.15: Dip Switch Setup for WEIM A/D-NON-MUX NOR Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW3	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.16: Dip Switch Setup for WEIM A/D-MUX OneNAND Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF

Switch	1	2	3	4	5	6	7	8
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.17: Dip Switch Setup for WEIM A/D--NON-MUX OneNAND Boot**

Switch	1	2	3	4	5	6	7	8
SW4	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
SW3	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

**Table 2.5.0.18: Dip Switch Setup for NAND Boot**

Switch	1	2	3	4	5	6	7	8
SW4	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
SW3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

## 3 Image Install Instructions

### 3.1 Programming U-Boot into MMC

The following steps describe how to program U-Boot into an MMC/SD card using U-Boot:

1. Insert a MMC/SD card into the slot and follow the instructions in **Section 2 “Board Dip Switches Setup”** to setup the board in bootstrap mode.
2. Use ATK to download the U-Boot binary with MMC boot to address 0.

### 3.2 Starting U-Boot from MMC

If U-Boot is already programmed into the MMC/SD card, follow the instructions in **Section 2 “Board Dip Switches Setup”** to setup the board in internal MMC boot mode. The U-Boot prompt should come up from the HyperTerminal after reset.

### 3.3 Starting U-Boot from MMC fastboot

eMMC 4.3 and 4.4 card support fastboot. To boot from fastboot, please follow below steps:

1. Make sure the slot can support fastboot.  
Please check spec for this information. On most of our boards, Slot3 support eMMC fastboot.
2. Program u-boot image to eMMC boot partition.  
Normal boot from SD first and program u-boot image to boot partition.

e.g

- Insert normal SD card to slot1 and eMMC 4.3/4.4 card to slot3.
- Normal boot from SD slot1.
- Write u-boot.bin to eMMC card boot partition.

e.g

```
> mmc read 0 ${loadaddr} 0 0x200
MMC read: dev # 0, block # 0, count 512 ...
512 blocks read: OK
> mmc write 1 ${loadaddr} 0 0x200 1
```

```
MMC read: dev # 1, block # 0, count 512 ... partition 1
512 blocks write: OK
```

### 3. Get eMMC bus width.

Get boot bit bus mode. Use command “mmcinfo <dev>” to get bus width.

```
> mmcinfo 1
Device: FSL_ESDHC
Manufacturer ID: 3
OEM: 5344
Name: SD04G
Tran Speed: 25000000
Rd Block Len: 512
SD version 2.0
High Capacity: Yes
Capacity: 3965190144
Bus Width: 4-bit
```

### 4. Set eMMC fast boot dip and boot bits.

- Set eMMC fast boot dip.
  - Set bus width to the bus width we got from step 3.
- ### 5. Reset board for booting.

## 3.4 Programming U-Boot to SATA device

The following steps describe how to program U-Boot to a SATA device.

1. Booting from MMC first.
2. Read u-boot.bin from mmc.  

```
mmc read 0 ${loadaddr} 0 0x200
```
3. Write to SATA device.  

```
sata write ${loadaddr} 0 0x200
```
4. Set SATA boot dip setting.
5. Reset board and check output from terminal.

## 3.5 Programming the U-Boot into SPI-NOR Flash

1. Boot board with nand boot or mmc boot first.
2. Upload u-boot.bin to tftp root directory.
3. Load U-Boot Image to ram.  

```
U-Boot> setenv serverip 10.193.100.158
U-Boot> setenv ethaddr 00:04:9F:00:EA:D7
U-Boot> setenv ipaddr 10.193.102.93
U-Boot> tftpboot ${loadaddr} u-boot.bin
```
4. Program u-boot.bin to spi-nor with address 0.

Initial SPI-NOR:

```
U-Boot> sf probe 1
```

Erase SPI-NOR before writing.

```
U-Boot> sf erase 0 0x40000
```

Erase is built in program.

Write data to SPI-NOR

```
U-Boot> sf write ${loadaddr} 0 0x40000
```

```
Writing SPI NOR flash 0x0 [0x40000 bytes] <- ram 0XXXXXXXXX
.....SUCCESS
```

## 3.6 Booting the system with an NFS filesystem

By default, U-Boot is configured to boot from NFS. To boot from NFS, some configurations need to be set first. Press any key to break the boot progress and set configurations.

Setup boot arguments:

```
U-Boot > setenv bootargs 'console=ttyAM0,115200n8'
```

Setup boot command:

```
U-Boot > setenv bootcmd 'run bootcmd_net'
```

Setup NFS boot arguments:

```
U-Boot > setenv bootargs_nfs 'setenv bootargs ${bootargs} root=/dev/nfs
```

```
ip=dhcp nfsroot=${serverip}:${nfsroot}Setup net boot command:
```

```
U-Boot > setenv bootcmd_net 'run bootargs_nfs; dhcp; bootm'
```

Setup tftp server IP:

```
U-Boot> setenv serverip 10.193.100.158
```

Setup board mac address:

```
U-Boot> setenv ethaddr 00:04:9F:00:EA:D7
```

Setup board IP address:

```
U-Boot> setenv ipaddr 10.193.102.93
```

Setup kernel name:

```
U-Boot> setenv kernel uImage
```

Setup rootfs path:

```
U-Boot> setenv nfsroot /data/rootfs_home/rootfs
```

Save configurations:

```
U-Boot> saveenv
```

*Note:*

*To avoid a conflict of IP address, the dhcp command can be used for a valid IP address.*

Reset board and kernel will be launched.

## **3.7 Booting kernel from Nand**

### **3.7.1 Programming kernel and rootfs to nand**

You need to use ATK tool to program kernel image to 0x300000 and rootfs image to 0x800000 first.

Other methods to program kernel image and rootfs image to nand:

- (1) Use serial download to load image to ram, then use nand command in U-Boot to program image to nand.
- (2) Use tftpboot command to load image to ram, then use nand command in U-Boot to program image to nand.

### **3.7.2 Environment settings**

Setup configurations:

```
U-Boot> setenv bootargs_nand 'setenv bootargs ${bootargs} root=/dev/mtdblock2
```

```
ip=dhcp rootfstype=jffs2'
```

```
U-Boot> setenv bootcmd_nand 'run bootargs_base bootargs_nand;nand read
```

```
${loadaddr} 0x300000 0x200000;bootm'
```

```
U-Boot> setenv
```

```
U-Boot> saveenv
```

```
U-Boot> setenv bootcmd 'run bootcmd_nand'
```

Reset board.

## **3.8 Booting kernel from MMC**

### **3.8.1 Formatting mmc card**

1. Insert mmc card into a Linux machine.

The card will be /dev/mmcblkx, e.g /dev/mmcblk0. (You can use command `dmesg` to get the detailed information.).

**2. Use command `fdisk` to format the mmc card to 2 partitions.**

```
root@freescale ~$ fdisk /dev/mmcblk0
```

**3. Type `p` in `fdisk` prompt to know the size of a cylinder.**

```
Command (m for help): p
```

```
Disk /dev/mmcblk0: 3965 MB, 3965190144 bytes
4 heads, 16 sectors/track, 121008 cylinders
Units = cylinders of 64 * 512 = 32768 bytes
So the cylinder size is 32768Bytes = 0x8000.
```

**4. Caculate the start cylinder of first partition.**

The boot area consists of three parts, MBR, u-boot.bin and uImage. Normally the MBR is 512 Bytes. u-boot.bin is about 180KB, uImage is 2MB. So we can use the first 4MBytes (3MB > 2MB + 180KB + 512B) in mmc card as boot area.

So the begin cylinder for first partition is from  $0x400000 / 0x8000 = 128$ .

**5. Caculate the end cylinder of first partition.**

Get rootfs.ext2.gz from release and uncompress it. The ext2 rootfs is about 380MB. So we choose 500MB (500MB > 380MB) as the first partition size.

The end cylinder is  $(500 * 0x100000) / 0x80000 = 16000$ .

**6. Create the first partition.**

Type `n` to create a partition.

```
Command (m for help): n
```

```
Command action
```

```
  e   extended
```

```
  p   primary partition (1-4)
```

Type `p` to create a primary partition.

Type `1` as the first partition number.

```
Partition number (1-4): 1
```

Type `96` as the first cylinder.

```
First cylinder (1-121008, default 1): 128
```

Type `16000` as the last cylinder.

```
Last cylinder or +size or +sizeM or +sizeK (96-121008, default 121008): 16000
```

**7. Create the second partition.**

Type `n` to create a partition.

```
Command (m for help): n
```

```
Command action
```

```
  e   extended
```

```
  p   primary partition (1-4)
```

Type `p` to create a primary partition.

Type `2` as the second partition number.

```
Partition number (1-4): 2
```

Type `16001` as the first cylinder.

```
First cylinder (1-121008, default 1): 16001
```

Type enter directly to use the default cylinder as the last cylinder.

```
Last cylinder or +size or +sizeM or +sizeK (16001-121008, default 121008): Using
default value 121008
```

**8. Verify and write the partition information.**

Type `p` to show the partition information.

Command (m for help): `p`

Disk /dev/mmcblk0: 3965 MB, 3965190144 bytes  
4 heads, 16 sectors/track, 121008 cylinders  
Units = cylinders of 64 \* 512 = 32768 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/mmcblk0p1		96	16000	508960	83	Linux
/dev/mmcblk0p2		16001	121008	3360256	83	Linux

If the information is correct, type `w` to write the partition information to MBR.

Command (m for help): `w`

The partition table has been altered!

Calling mmcblk0: `ioctl()` to re-read partition table  
p2

### 3.8.2 Program u-boot.bin, kernel and rootfs to mmc card

#### 1. Save the MBR.

```
root@freescale /$ dd if=/dev/mmcblk0 of=./mbr.bin bs=512 count=1
```

Note:

*Another way to avoid this step is that you can customize the u-boot.bin image by disabling the flash header in image and in the next step, you should program u-boot.bin to address 0x400.*

#### 2. Program u-boot.bin, kernel and rootfs to mmc card

Use ATK tool to program u-boot.bin to address 0, kernel uImage to 0x100000, rootfs to 0x400000.

Note:

*Another way is download images to ram via tftp and use cp command for programming.*

```
tftpboot <ram_address> <image_name>  
cp.b <ram_address> <card_offset> <len>
```

#### 3. Restore the MBR.

```
root@freescale /$ dd if=./mbr.bin of=/dev/mmcblk0
```

### 3.8.3 Environment settings

```
U-Boot> setenv bootargs_mmc 'setenv bootargs ${bootargs} root=/dev/mmcblk0p1  
ip=dhcp rootfstype=ext2'  
U-Boot> setenv bootcmd_mmc 'run bootargs_base bootargs_mmc;mmc read 0  
${loadaddr} 0x800 0x1000;bootm'  
U-Boot> setenv bootcmd 'run bootcmd_mmc'  
U-Boot> saveenv
```

Reset board.

## 4 Configuring U-Boot

By default, U-Boot is configured to display the command prompt and receive serial keyboard input on certain UART ports with 115,200-8-N-1 settings.

The system configuration also needs to be set using the `setenv` command. The following is one example of how to set it up by assigning a static IP address to the board. If the network supports BOOTP/DHCP and one wants to use it, set “true” when prompted with “Use BOOTP for network configuration” in the following example and

skip the configurations for Gateway IP address, Local IP address and Local IP address mask. Note that the new configuration doesn't take effect until the board is reset (reset button or reset command).

```
U-Boot> setenv serverip 10.193.100.158
U-Boot> setenv ethaddr 00:04:9F:00:EA:D7
U-Boot> setenv ipaddr 10.193.102.93
U-Boot> setenv kernel uImage
U-Boot> setenv nfsroot /data/rootfs_home/rootfs
U-Boot> saveenv
Saving Environment to SPI Flash...
Erasing SPI flash...Erase is built in program.
Writing to SPI flash...Writing SPI NOR flash 0x100000 [0x20000 bytes] <- ram
0x975e06e8
.....SUCCESS

done
U-Boot>
```

Each of the parameters should be modified for the specific network and usage. It is very important that the board specific parameters be set correctly. These parameters are not used by the U-Boot but are used by some operating systems.

Note that some DHCP servers are not configured to support BOOTP requests and as a result a static configuration will be required.

The board specific parameter is a bit mask of board options. At this time, there are no options and board specific should be 0.

The configuration can be listed:

```
U-Boot> printenv
bootdelay=3
baudrate=115200
loadaddr=0x90800000
netdev=eth0
ethprime=FEC0
U-Boot_addr=0xa0000000
U-Boot=u-boot.bin
bootargs_base=setenv bootargs console=ttymxc0,115200
bootargs_nfs=setenv bootargs ${bootargs} root=/dev/nfs ip=dhcp
nfsroot=${serverip}:${nfsroot},v3,tcp
bootcmd=run bootcmd_net
bootcmd_net=run bootargs_base bootargs_nfs; tftpboot ${loadaddr} ${kernel};
bootm
prg_U-Boot=tftpboot ${loadaddr} ${U-Boot}; protect off ${U-Boot_addr}
0xa003ffff; erase ${U-Boot_addr} 0xa003ffff; cp.b ${loadaddr} ${U-Boot_addr}
${filesize}; setenv filesize; saveenv
ethact=FEC0
ethaddr=00:04:9F:00:EA:D7
bootargs=console=ttymxc0,115200 root=/dev/nfs ip=dhcp nfsroot=:/opt/eldk/
arm,v3,tcp
ipaddr=10.193.102.93
serverip=10.193.100.158
nfsroot=/data/rootfs_home/rootfs
```

```
kernel=uImage.r450
stdin=serial
stdout=serial
stderr=serial
```

```
Environment size: 830/131068 bytes
Boot>
```

## 5 Using U-Boot

OS images can be downloaded using U-Boot via Ethernet or the serial port. The downloaded images can be immediately decompressed into SDRAM and executed or they can be stored into flash and decompressed into SDRAM at a later time. All of these instructions assume that U-Boot has been installed onto the board and configured.

### 5.1 Serial Download

To download an image through serial, the terminal should support y modem protocol, e.g. HyperTerminal in windows. Issue the following command under U-Boot prompt:

```
loady
```

U-Boot now is ready to receive data. To send a file, click on “Transfer -> Send File -> Ymodem (under Protocol) -> Send...”, choose the file to download.

### 5.2 Ethernet Download

Note that TFTP is not a reliable protocol and downloads may sometimes fail (with no error message) on busy networks. Always check the byte count of the download to make sure the download is complete. Besides, some EVB/ADS boards don't have the correct MAC address programmed in the EEPROM which is used by the Ethernet controller.

To download a file via the Ethernet:

1. Set up and configure a TFTP server.  
setenv ethaddr <board\_mac\_addr>  
setenv serverip <Server\_IP\_Addr>  
setenv ipaddr <Board\_IP\_Addr> (This address can be retrived by command dhcp)
2. Configure the server to load files from the appropriate directories or copy the desired image to the server directory.
3. Test the network configuration:  
ping <TFTP server IP address>

The following discuss how to download and execute different kinds of images.

- To download and execute an uncompressed image (check that the number of bytes downloaded is correct):  
tftpboot \${loadaddr} <file name>  
bootm

### 5.3 Multi-network support

We can support both smc911x and FEC. But only one can be activated. smc911x is the default network device.

To make sure that both networks are initialized, pls check the bootlog:

```
...
NET: smc911x, FEC0
...
```

To switch to FEC. Pls use environment variable *ethprime*.

```
setenv ethprime FEC0
```

Set mac address for FEC:

```
setenv ethladdr 00:ab:cd:ef:gh:jk
```

## 5.4 Multi-environment store device

If need to modify the environment saving device, pls follow instructions below:

### 1. Environment in SD/MMC:

Normally, if CONFIG\_DYNAMIC\_MMC\_DEVNO is defined, u-boot will use active SD slot for default environment storing device, that is, by default, u-boot will use the SD boot slot as the first choice for locating and saving environment data. Otherwise, SD environment will use CONFIG\_SYS\_MMC\_ENV\_DEV.

Need to modify boards' config files. The config file is under include/configs/<board\_name>.h.

Make sure CONFIG\_FSL\_ENV\_IN\_MMC is not commented.

Make sure other CONFIG\_FSL\_ENV\_IN\_XXX is commented. Or, there will be a compiling error.

e.g.

```
/* #define CONFIG_FSL_ENV_IN_SF */  
#define CONFIG_FSL_ENV_IN_MMC
```

### 2. Environment in SPI Flash:

Need to modify boards' config files. The config file is under include/configs/<board\_name>.h.

Make sure CONFIG\_FSL\_ENV\_IN\_SF is not commented.

Make sure other CONFIG\_FSL\_ENV\_IN\_XXX is commented. Or, there will be a compiling error.

e.g.

```
#define CONFIG_FSL_ENV_IN_SF  
/* #define CONFIG_FSL_ENV_IN_MMC */
```

### 3. Environment in SATA:

Need to modify boards' config files. The config file is under include/configs/<board\_name>.h.

Make sure CONFIG\_FSL\_ENV\_IN\_SATA is not commented.

Make sure other CONFIG\_FSL\_ENV\_IN\_XXX is commented. Or, there will be a compiling error.

e.g.

```
/* #define CONFIG_FSL_ENV_IN_SF */  
#define CONFIG_FSL_ENV_IN_SATA
```

### 4. Environment in NAND:

Need to modify boards' config files. The config file is under include/configs/<board\_name>.h.

Make sure CONFIG\_FSL\_ENV\_IN\_NAND is not commented.

Make sure other CONFIG\_FSL\_ENV\_IN\_XXX is commented. Or, there will be a compiling error.

e.g.

```
/* #define CONFIG_FSL_ENV_IN_SF */  
#define CONFIG_FSL_ENV_IN_NAND
```

All environment settings listed in config files are supported and tested.

To enable them, you just need to enable accordingly configs.

## 5.5 Splash screen support

Splash screen is off by default. If need to show a splash screen on lcd panel, you should add it yourself.

### 1. In config file, enable splash screen.

Add:

```
#define CONFIG_SPLASH_SCREEN  
then splash screen feature is now enabled.
```

### 2. How to change splash image.

Currently, we use converted image in board/freescale/common/fsl\_bmp\_600x400.c.

In order to change splash image, user need to:

- Prepare an bmp image for display, better to be 600x400. Other resolutions need to modify more source.
- Convert it to .c file. Pls ask us for bin2txt.py.
- Put converted bmp.c to board/freescale/common/fsl\_bmp\_600x400.c.
- Modify Makefile to build it.

e.g.

```
COBJS- $\${CONFIG\_VIDEO\_MX5}$  += my_bmp.o
```

## 5.6 EPDC splash screen support

EPDC splash screen is off by default. Thus if you need to show a splash screen on epdc lcd panel, you should add it yourself. The guide is listed below:

1. In config file, enable splash screen.

Find:

```
/*  
#define CONFIG_SPLASH_SCREEN  
*/
```

and remove comments indicator. Then splash screen feature is now enabled.

2. Program waveform file to sd card offset 0x100000.

- The waveform file epdc.fw.ihex is at \firmware\imx in linux-2.6-imx. But you may need another script to convert it to raw waveform binary data.

You should ask freescale for the script ihex2bin.py.

- Use ihex2bin.py to get waveform binary data.

```
./ihex2bin.py -i epdc.fw.ihex -o wv_data.bin
```

- Program wv\_data.bin to sd card offset 0x100000. You can use ATK tool or dd command in Linux for this.

```
root@freescale /$ dd if=./wv_data.bin of=/dev/mmcblk0 bs=1024 seek=1024
```

Note:

You can also program wv\_data.bin to other offset in sd card. But you need to modify CONFIG\_WAVEFORM\_FILE\_OFFSET in config file and rebuild u-boot.

Now we only support waveform data file on sd/mmc card.

If need to access other memory device for waveform data, e.g. spi nor,

CONFIG\_WAVEFORM\_FILE\_IN\_MMC should be removed and CONFIG\_WAVEFORM\_FILE\_IN\_SF should be added.

Codes to access spi nor should be added in function setup\_waveform\_file().

3. Boot your board and you will see splash screen on epdc lcd panel.

## 5.7 IIM fuse support

IIM Fuse is supported. Commands supported is listed below:

```
iim read <bank> <row>  
iim read fecmac  
iim blow <bank> <row> <value>  
iim blow fecmac <0x##:0x##:0x##:0x##:0x##:0x##>
```

Please take care of using this command.

## 5.8 SATA support

SATA is supported. Commands supported is listed below:

```
sata init - init SATA sub system  
sata info - show available SATA devices
```

```
sata device [dev] - show or set current device
sata part [dev] - print partition table
sata read addr blk# cnt
sata write addr blk# cnt
```

## 5.9 eMMC Fastboot

eMMC fastboot is supported.

For fastboot, please note that the bit width of card should match the dip settings.

For example, if mmcinfo shows eMMC 4.4 card is 8Bit DDR, then dip settings should be 8bit DDR. Then fastboot can work. Otherwise, fastboot will fail.

```
MX53-SMD U-Boot > mmcinfo 1
Device: FSL_ESDHC
Manufacturer ID: 45
OEM: 100
Name: SEM08
Tran Speed: 25000000
Rd Block Len: 512
MMC version 4.0
High Capacity: Yes
Capacity: 7944011776
Bus Width: 8-bit DDR
Boot Partition Size: 1024KB
Current Partition for boot: Boot partition 1
```

## 6 Building U-Boot

There are two ways to build U-Boot, from Ltib and from source.

### 6.1 Building U-Boot from Ltib

1. Get Ltib.

```
git clone git://git.am.freescale.net/git/ltib.git
git checkout --track -b branch-imx-sdk origin/branch-imx-sdk
```

*Note:*

*An easier to get ltib is using coltib in linux-infra.*

```
~/linux-infra/tools/coltib
```

2. Get U-Boot source from ltib.

Change into ltib directory.

```
./ltib -m prep -p u-boot
```

*Note:*

*If it is the first time that you run ltib, it will let you to set some configurations.*

*Please set [Freescale iMX reference boards] -> [imx25\_3stack imx233 imx31\_3stack imx35\_3stack imx37\_3stack iMX51\_3stack] in sequence.*

3. Build U-Boot in ltib

```
./ltib -m scbuild -p u-boot
```

4. Install u-boot in ltib

```
./ltib -m scdeploy -p u-boot
```

## 6.2 Then you can get u-boot.bin in ltib/rootfs/boot directory. **Building U-Boot from source**

Building U-Boot can be achieved under either Windows using Cygwin or Linux. Here we only supply files for building under Linux. All the following files are included in release package.

**Table 6.2.0.1: Resources needed for Building U-Boot**

Resource	Description	Source
u-boot-2009.08.tar.bz2	U-Boot base source for Linux	pkgs/
tc-fsl-x86lnx- armeabi-nptl- 4.1.2-3.i386.rpm	Toolchain needed to build U-Boot under Linux	included
u-boot-v2009.08- imx_10.05.02.tar. bz2	Freescale U-Boot source patch and binary files.	pkgs/

Unzip the Freescale U-Boot release package `L2.6.31_10.05.02_source.tar.gz`. You will find the U-Boot source patch files and `u-boot-2009.08.tar.bz2` inside `L2.6.31_10.05.02_source/pkgs`.

The following describes how to setup the build environment first and then gives instructions on how to build the U-Boot images.

### 6.2.1 Setting up U-Boot Build Environment under Linux

To simplify the built process, it is recommended to use Freescale's pre-packaged tools to build U-Boot. The following has been verified working under Redhat 9.0 and Ubuntu 9.10 Linux distribution releases.

1. Locate `u-boot-2009.08.tar.bz2` and `u-boot-v2009.08-imx_10.05.02.tar.bz2` from this package.
2. Under Linux, with root user privilege, install `tc-fsl-x86lnx-armeabi-nptl-4.1.2-3.i386.rpm`. A more simple way is to run `ltib` in release firstly which will install the toolchain for host server.

### 6.2.2 Generating U-Boot Image

After the tools are setup properly, follow these instructions to build the U-Boot image:

1. Decompress the `u-boot-2009.08.tar.bz2` base line source code into some directory, etc, your home directory. There should be a `packages` directory under your home if this is done correctly.  

```
$ tar jxvf u-boot-2009.08.tar.bz2
```
2. Change into the `u-boot-2009.08` subdirectory and apply the patches from the `u-boot-v2009.08-imx_09.12.00.tar.bz2`:  

```
$ cd u-boot-2009.08
```

Under Linux, do:

```
$ tar jxvf u-boot-v2009.08-imx_10.05.02.tar.bz2
```

```
$ ./patches/patch-U-Boot.sh
```
3. Check for a non-zero return value of the patch command (`echo $?`), or check to see if there are any rejected patch fragments (`find . -name '*.rej' -print`). Either of these findings would indicate that the patch did not apply properly.
4. Build U-Boot. The following commands can be done from any directory and it is recommended to create a separate directory from the source in order to have a clean build.

For i.MX51 3-Stack Tapeout, do:

```
make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-  
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-  
mx51_3stack_config
```

```

        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX51 Babbage, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx51_bbg_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX53 evk and arm2 boards, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx53_evk_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX53 SMD board, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx53_smd_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX53 START board, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx53_loco_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX50 arm2 board, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx50_arm2_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
    For i.MX50 rdp board, do:
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-
mx50_rdp_config
        make CROSS_COMPILE=/opt/freescale/usr/local/gcc-4.4.4-glibc-
2.11.1-multilib-1.0/arm-fsl-linux-gnueabi/bin/arm-none-linux-gnueabi-

```

This creates the U-Boot image (u-boot.bin) under U-Boot source directory. This image can run from either SDRAM or flash.

### 6.2.3 Customize U-Boot Image for MMC boot

Change into the u-boot-2009.08 subdirectory and edit the file include/configs/mx25\_3stack\_config.h.

1. Undefine Nand configs.

Comments the Nand command definition.

```

/* #define CONFIG_CMD_NAND */
/* #define CONFIG_MXC_NAND */

```

2. Enable the MMC configs by uncommenting it.

```

/*
* MMC Configs
* */

```

```

#ifdef CONFIG_CMD_MMC
    #define CONFIG_MMC        1
    #define CONFIG_GENERIC_MMC
    #define CONFIG_IMX_MMC
    #define CONFIG_DOS_PARTITION1
    #define CONFIG_CMD_FAT1
#endif

```

## 7 U-Boot Commands

The following commands are supported for various Freescale boards. The intent is to provide a user-friendly and easy-to-use interface for setting up or using certain hardware features such as NAND flash, MAC address in the EEPROM for CS8900A Ethernet controller and reading/writing e-fuses, etc. This section shows these commands and the corresponding help messages.

### 7.1 Run

Run an commands in the environment variable(s) 'var'.

```
run [env_variable]
```

### 7.2 Net commands

Boot image via network using BOOTP/TFTP protocol

```
bootp [loadAddress] [[hostIPaddr:]bootfilename]
```

Boot image via network using TFTP protocol

```
tftpboot [loadAddress] [[hostIPaddr:]bootfilename]
```

Boot image via network using DHCP/TFTP protocol

```
dhcp [loadAddress] [[hostIPaddr:]bootfilename]
```

Boot image via network using RARP/TFTP protocol

```
rarpboot [loadAddress] [[hostIPaddr:]bootfilename]
```

### 7.3 Boot commands

Boot application image from memory

```
bootm [addr [arg ...]]
```

Boot image via network using TFTP protocol

```
tftpboot [loadAddress] [[hostIPaddr:]bootfilename]
```

Boot image via network using DHCP/TFTP protocol

```
dhcp [loadAddress] [[hostIPaddr:]bootfilename]
```

Boot image via network using RARP/TFTP protocol

```
rarpboot [loadAddress] [[hostIPaddr:]bootfilename]
```

### 7.4 Environment commands

Set and save environment variable.Enable either NOR or NAND flash media for U-Boot

```
setenv [env_var] [val]
```

```
saveenv
```

### 7.5 SPI-NOR commands

Initial SPI-NOR flash

```
sf probe
```

Read from SPI-NOR

```
sf read <dest_addr> <src_offset> <length>
```

Erase SPI-NOR

```
sf erase <src_offset> <length>
Write to SPI-NOR
sf write <dest_addr> <src_offset> <length>
```

## **7.6 MMC commands**

```
Display MMC info
mmcinfo <dev num>
Read MMC data from card
mmc read <dev num> addr blk# cnt
Write MMC data to card
mmc write <dev num> addr blk# cnt
Rescan MMC device
mmc rescan <dev num>
Lists available devices
mmc list
```

## **7.7 FAT commands**

```
Load binary file from a dos filesystem
fatload <interface> <dev[:part]> <addr> <filename> [bytes]
List files in a directory (default /)
fatls <interface> <dev[:part]> [directory]
Print information about filesystem
fatinfo <interface> <dev[:part]>
Write to Nand
nand write <dest_addr> <src_offset> <length>
Show bad blocks
nand bad
```

## **7.8 EXT2 commands**

```
List files in a directory (default /)
ext2ls <interface> <dev[:part]> [directory]
Load binary file from a Ext2 filesystem
ext2load <interface> <dev[:part]> [addr] [filename] [bytes]
```

## **7.9 PATA commands**

```
Show available PATA devices
pata info
Show or set current device
pata device [dev]
Print partition table
pata part [dev]
Read data from pata device
pata read addr blk# cnt
Write data to pata device
pata write addr blk# cnt
```

## 7.10 SATA commands

```
init SATA sub system
    sata init
show available SATA devices
    sata info
show or set current device
    sata device [dev]
print partition table
    sata part [dev]
read data from sata
    sata read addr blk# cnt
write data to sata
    sata write addr blk# cnt
```

## 7.11 I2C commands

```
i2c memory display
    imd address[.0, .1, .2] [# of objects]
i2c memory modify (auto-incrementing)
    imm address[.0, .1, .2]
i2c memory modify (constant address)
    imn address[.0, .1, .2]
i2c memory write (fill)
    imm address[.0, .1, .2] value [count]
checksum calculation
    icrc32 address[.0, .1, .2] count
probe to discover valid I2C chip addresses
    iprobe
```

# 8 Frequently Asked Questions

## 8.1 Why there is no U-Boot prompt on an internal UART port?

Double check the dip switch settings as mentioned earlier in this document.

## 8.2 How to make no-padding u-boot images?

Use dd command.

```
dd if=./u-boot.bin of=./u-boot-no-padding.bin bs=1024 skip=1
```

## 8.3 How to set mac address to FEC in boot?

Pls set the fec\_addr environment data.

```
setenv fec_addr 00:ab:cd:df:gf:hj
```

FEC network init code will check fec\_addr. If this environment data is set, the value will be write to FEC registers.