



OpenSDA Interface

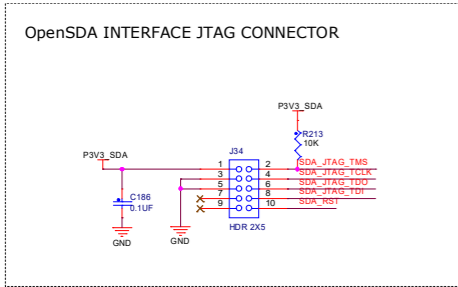

PWR SWITCH
(To enable 5v from USB connector)

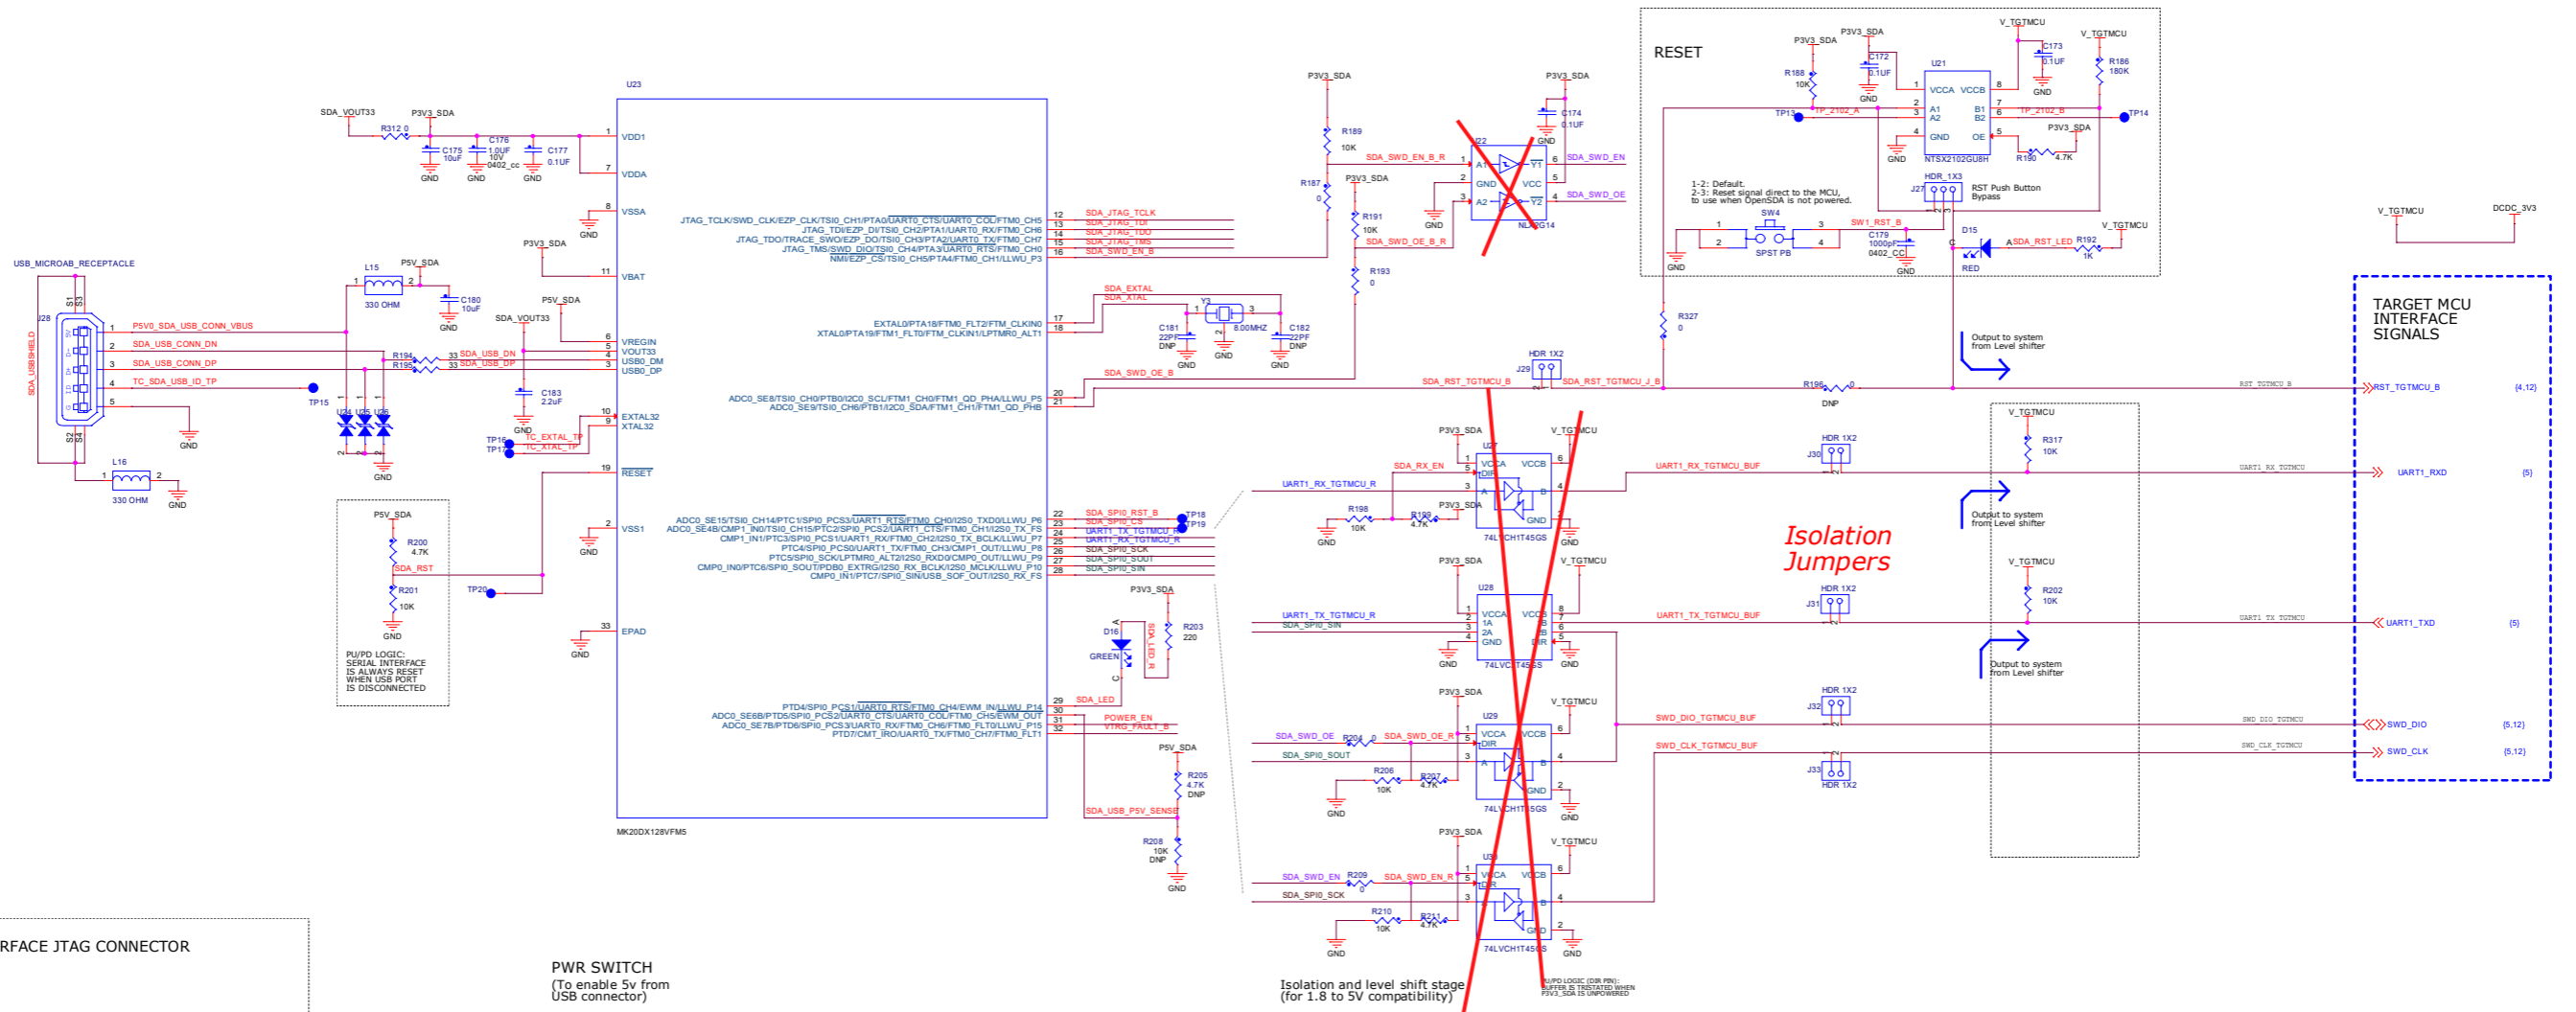