

Parallel NOR Flash Automotive Memory

MT28FW02GBBA1HPC-0AAT, MT28FW02GBBA1LPC-0AAT

Features

- 2Gb stacked device (Two 1Gb die)
- Single-level cell (SLC) process technology
- Supply voltage
 - V_{CC} = 2.7–3.6V (program, erase, read)
 - $V_{CCO} = 1.65 V_{CC}$ (I/O buffers)
- · Asynchronous random/page read
 - Page size: 16 words
 - Page access: 20ns ($V_{CC} = V_{CCO} = 2.7-3.6V$)
 - Random access: $105 \text{ns} (V_{CC} = V_{CCO} = 2.7 3.6 \text{V})$
 - Random access: 110ns ($V_{CCO} = 1.65 V_{CC}$)
- Buffer program (512-word program buffer)
 - 2.0 MB/s (TYP) when using full buffer program
 - $-2.5\,\mbox{MB/s}$ (TYP) when using accelerated buffer program (V $_{HH}$)
- Word program: 25µs per word (TYP)
- Block erase (128KB): 0.2s (TYP)
- Memory organization
 - Uniform blocks: 128KB or 64KW each
 - x16 data bus
- Program/erase suspend and resume capability
 - Read from another block during a PROGRAM SUSPEND operation
 - Read or program another block during an ERASE SUSPEND operation
- Unlock bypass, block erase, die erase, and write to buffer capability


- BLANK CHECK operation to verify an erased block
- CYCLIC REDUNDANCY CHECK (CRC) operation to verify a program pattern
- V_{PP}/WP# protection
 - Protects first or last block regardless of block protection settings
- Software protection
 - Volatile protection
 - Nonvolatile protection
 - Password protection
- · Extended memory block
 - 512-word block for permanent, secure identification
 - Programmed or locked at the factory or by the customer
- JESD47-compliant
 - 100,000 (minimum) ERASE cycles per block
 - Data retention: 20 years (TYP)
- Package
 - 64-ball LBGA, 11mm x 13mm (PC)
- RoHS-compliant, halogen-free packaging
- Automotive operating temperature
 - Ambient: -40°C to 105°C



Part Numbering Information

For available options, such as packages or high/low protection, or for further information, contact your Micron sales representative. Part numbers can be verified at www.micron.com. Feature and specification comparison by device type is available at www.micron.com/products. Contact the factory for devices not found.

Figure 1: Part Number Chart

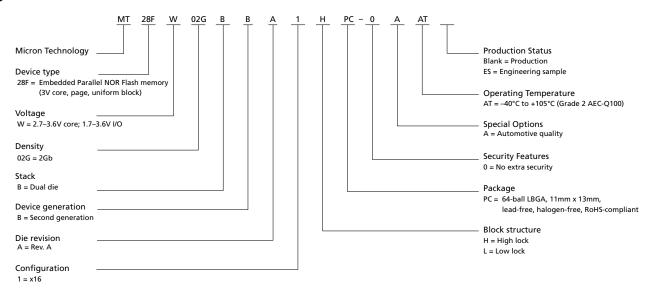



Contents

General Description	
Automatic Power Savings Feature	7
Signal Assignments	9
Signal Descriptions	10
Memory Organization	. 12
Memory Configuration	. 12
Memory Map	. 12
Bus Operations	13
Read	. 13
Write	. 13
Standby	13
Output Disable	. 14
Reset	. 14
Registers	. 15
Data Polling Register	. 15
Read Status Register	. 20
Clear Status Register	. 21
Lock Register	
Standard Command Definitions – Address-Data Cycles	. 24
READ and AUTO SELECT Operations	
READ/RESET Command	
READ CFI Command	
AUTO SELECT Command	
Read Electronic Signature	27
Cyclic Redundancy Check Operation	
CYCLIC REDUNDANCY CHECK Command	
Cyclic Redundancy Check Operation Command Sequence	
Bypass Operations	
UNLOCK BYPASS Command	
UNLOCK BYPASS RESET Command	
Program Operations	
PROGRAM Command	
UNLOCK BYPASS PROGRAM Command	
WRITE TO BUFFER PROGRAM Command	
UNLOCK BYPASS WRITE TO BUFFER PROGRAM Command	
WRITE TO BUFFER PROGRAM CONFIRM Command	
BUFFERED PROGRAM ABORT AND RESET Command	
PROGRAM SUSPEND Command	
PROGRAM RESUME Command	
ACCELERATED BUFFERED PROGRAM Operations	
Erase Operations	
DIE ERASE Command	
UNLOCK BYPASS DIE ERASE Command	
BLOCK ERASE Command	
UNLOCK BYPASS BLOCK ERASE Command	
ERASE SUSPEND Command	
ERASE RESUME Command	
ACCELERATED DIE ERASE Operations	
BLANK CHECK Operation	
Device Protection	41



Hardware Protection	41
Software Protection	41
Volatile Protection Mode	42
Nonvolatile Protection Mode	42
Password Protection Mode	43
Block Protection Command Definitions – Address-Data Cycles	45
Protection Operations	
LOCK REGISTER Commands	48
PASSWORD PROTECTION Commands	
NONVOLATILE PROTECTION Commands	48
NONVOLATILE PROTECTION BIT LOCK BIT Commands	49
VOLATILE PROTECTION Commands	50
EXTENDED MEMORY BLOCK Commands	50
EXIT PROTECTION Command	51
Common Flash Interface	52
Power-Up and Reset Characteristics	57
Absolute Ratings and Operating Conditions	59
DC Characteristics	
Read AC Characteristics	63
Write AC Characteristics	65
Data Polling/Toggle AC Characteristics	70
Program/Erase Characteristics	72
Package Dimensions	73
Revision History	74
Rev. D – 9/17	74
Rev. C – 11/16	74
Rev. B – 10/16	74
Rev A = 05/16	74



List of Figures

Figure 1:	Part Number Chart	2
Figure 2:	Logic Diagram	8
Figure 3:	Dual Die Configuration – 2Gb	8
Figure 4:	64-Ball Fortified BGA	9
Figure 5:	Data Polling Flowchart	17
Figure 6:	Toggle Bit Flowchart	18
Figure 7:	Data Polling/Toggle Bit Flowchart	19
Figure 8:	Lock Register Program Flowchart	23
	Boundary Condition of Program Buffer Size	
Figure 10:	WRITE TO BUFFER PROGRAM Flowchart	34
	Software Protection Scheme	
Figure 12:	Set/Clear Nonvolatile Protection Bit Algorithm Flowchart	49
	Power-Up Timing	
Figure 14:	Reset AC Timing – No PROGRAM/ERASE Operation in Progress	58
	Reset AC Timing During PROGRAM/ERASE Operation	
Figure 16:	AC Measurement Load Circuit	60
Figure 17:	AC Measurement I/O Waveform	60
Figure 18:	Random Read AC Timing	64
Figure 19:	Page Read AC Timing	64
Figure 20:	WE#-Controlled Program AC Timing	66
Figure 21:	CE#-Controlled Program AC Timing	68
Figure 22:	Chip/Block Erase AC Timing	69
Figure 23:	Accelerated Program AC Timing	69
Figure 24:	Data Polling AC Timing	70
Figure 25:	Toggle/Alternative Toggle Bit Polling AC Timing	71
Figure 26:	64-Ball LBGA – 11mm x 13mm (Package Code: PC)	73



List of Tables

	Signal Descriptions	
Table 2: I	Blocks[2047:0]	12
Table 3: I	Bus Operations	13
Table 4: I	Data Polling Register Bit Definitions	15
Table 5: 0	Operations and Corresponding Bit Settings	16
	Status Register Definitions	
Table 7: I	Lock Register Bit Definitions	22
Table 8: S	Standard Command Definitions – Address-Data Cycles	24
	Block Protection	
	Read Electronic Signature – 2Gb	
Table 11:	Command Sequence – Range of Blocks	28
Table 12:	Command Sequence – Entire Chip	30
Table 13:	ACCELERATED PROGRAM Requirements and Recommendations	36
Table 14:	ACCELERATED DIE ERASE Requirements and Recommendations	39
Table 15:	V _{PP} /WP# Functions	41
	Block Protection Status	
Table 17:	Block Protection Command Definitions – Address-Data Cycles	45
	Extended Memory Block Address and Data	
Table 19:	Query Structure Overview	52
Table 20:	CFI Query Identification String	52
	CFI Query System Interface Information	
	Device Geometry Definition	
Table 23:	Primary Algorithm-Specific Extended Query Table	54
	Power-Up Specifications	
Table 25:	Reset AC Specifications	58
Table 26:	Absolute Maximum/Minimum Ratings	59
Table 27:	Operating Conditions	59
Table 28:	Input/Output Capacitance	60
Table 29:	DC Current Characteristics	61
Table 30:	DC Voltage Characteristics	62
Table 31:	Read AC Characteristics – $V_{CC} = V_{CCQ} = 2.7 - 3.6V$	63
Table 32:	Read AC Characteristics – $V_{CCQ} = 1.65V - V_{CC}$	63
Table 33:	WE#-Controlled Write AC Characteristics	65
Table 34:	CE#-Controlled Write AC Characteristics	67
Table 35:	Data Polling/Toggle AC Characteristics	70
	0 00	72

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR General Description

General Description

The device is an asynchronous, uniform block, parallel NOR Flash memory device. It is a 2Gb stacked device that contains two 1Gb dies. It is selected by the A[max]. While A[max] = 0, the lower 1Gb die is selected, and while A[max] = 1, the upper 1Gb die is selected. READ, ERASE, and PROGRAM operations are performed using a single low-voltage supply. Upon power-up, the device defaults to read array mode.

The main memory array is divided into uniform blocks that can be erased independently so that valid data can be preserved while old data is purged. PROGRAM and ERASE commands are written to the command interface of the memory. An on-chip program/ erase controller simplifies the process of programming or erasing the memory by taking care of all special operations required to update the memory contents. The end of a PROGRAM or ERASE operation can be detected and any error condition can be identified. The command set required to control the device is consistent with JEDEC standards.

CE#, OE#, and WE# control the bus operation of the device and enable a simple connection to most microprocessors, often without additional logic.

The device supports asynchronous random read and page read from all blocks of the array. It also features an internal program buffer that improves throughput by programming 512 words via one command sequence. A 512-word extended memory block overlaps addresses with array block 0. Users can program this additional space and then protect it to permanently secure the contents. The device also features different levels of hardware and software protection to secure blocks from unwanted modification.

Automatic Power Savings Feature

The automatic power savings feature provides low power operation during reads.

After data is read from the memory array and the address lines are quiescent, the automatic power savings feature reduces device current to a low value of I_{CCAPS} .

During automatic power savings mode, average current is measured over 5ms time interval 5µs after the following events happen:

- No internal read, program or erase activity occurring
- RST# is deasserted and CE# is asserted
- All other signals are quiescent and at V_{SS} or V_{CCO}



Figure 2: Logic Diagram


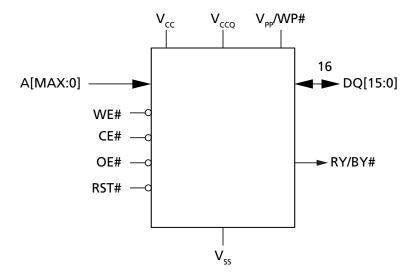


Figure 3: Dual Die Configuration - 2Gb




Note: 1. $A[26] = V_{IH}$ selects the upper die; $A[26] = V_{IL}$ selects the lower die.

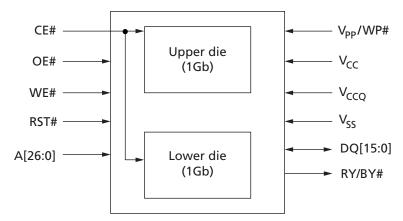

Signal Assignments

Figure 4: 64-Ball Fortified BGA

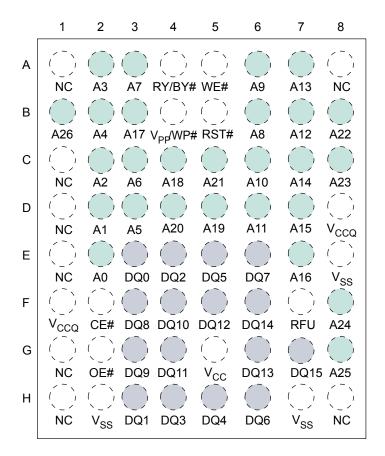

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Signal Descriptions

Signal Descriptions

The signal description table below is a comprehensive list of signals for this device family. All signals listed may not be supported on this device. See Signal Assignments for information specific to this device.

Table 1: Signal Descriptions

Name	Туре	Description
A[MAX:0]	Input	Address: Selects the cells in the array to access during READ operations. During WRITE operations, they control the commands sent to the command interface of the program/erase controller.
		A[max] is used as a virtual CE pin. When A[max] = 0, the lower 1Gb die is selected, When A[max] = 1, the upper 1Gb is selected.
CE#	Input	Chip enable: Activates the device, enabling READ and WRITE operations to be performed. When CE# is HIGH, the device goes to standby and data outputs are High-Z.
OE#	Input	Output enable: Active LOW input. OE# LOW enables the data output buffers during READ cycles. When OE# is HIGH, data outputs are High-Z.
WE#	Input	Write enable: Controls WRITE operations to the device. Address is latched on the falling edge of WE# and data is latched on the rising edge.
V _{PP} /WP#	Input	V_{PP}/Write Protect: Provides WRITE PROTECT function and V _{HH} function. These functions protect the lowest or highest block and enable the device to enter unlock bypass mode, respectively. (Refer to Hardware Protection and Bypass Operations for details.)
RST#	Input	Reset: Applies a hardware reset to the device control logic and places it in standby, which is achieved by holding RST# LOW for at least ^t PLPH. After RST# goes HIGH, the device is ready for READ and WRITE operations (after ^t PHEL or ^t PHWL, whichever occurs last).
DQ[15:0]	I/O	Data I/O: Outputs the data stored at the selected address during a READ operation. During WRITE operations, they represent the commands sent to the command interface of the internal state machine.
RY/BY#	Output	Ready busy: Open-drain output that can be used to identify when the device is performing a PROGRAM or ERASE operation. During PROGRAM or ERASE operations, RY/BY# is LOW, and is High-Z during read mode, auto select mode, and erase suspend mode. The use of an open-drain output enables the RY/BY# pins from several devices to be connected to a single pull-up resistor to V_{CCQ} . A low value will then indicate that one (or more) of the devices is (are) busy. A 10K Ohm or bigger resistor is recommended as pull-up resistor to achieve $0.1V\ V_{OL}$.
V _{CC}	Supply	Supply voltage: Provides the power supply for READ, PROGRAM, and ERASE operations. The device is disabled when $V_{CC} \le V_{LKO}$. If the program/erase controller is programming or erasing during this time, then the operation aborts and the contents being altered will be invalid. A $0.1\mu F$ and $0.01\mu F$ capacitor should be connected between V_{CC} and V_{SS} to decouple the current surges from the power supply. The PCB track widths must be sufficient to carry the currents required during PROGRAM and ERASE operations (see DC Characteristics).
V _{CCQ}	Supply	I/O supply voltage: Provides the power supply to the I/O pins and enables all outputs to be powered independently from V _{CC} . A 0.1µF and 0.01µF capacitor should be connected between V _{CCQ} and V _{SS} to decouple the current surges from the power supply.
V _{SS}	Supply	Ground: All V _{SS} pins must be connected to the system ground.



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Signal Descriptions

Table 1: Signal Descriptions (Continued)

Name	Туре	Description
RFU	_	Reserved for future use: Reserved by Micron for future device functionality and enhancement. Recommend that these be left floating. May be connected internally, but external connections will not affect operation.
DNU	_	Do not use: Do not connect to any other signal, or power supply; must be left floating.
NC	_	No connect: No internal connection; can be driven or floated.



Memory Organization

Memory Configuration

The main memory array is divided into 128KB or 64KW uniform blocks.

Memory Map

Table 2: Blocks[2047:0]

	Address	s Range
Block	Start	End
2047	7FF 0000h	7FF FFFFh
i	:	i i
1023	3FF 0000h	3FF FFFFh
i i	:	i:
511	1FF 0000h	1FF FFFFh
i i	:	i:
255	0FF 0000h	0FF FFFFh
i i	:	i:
127	07F 0000h	07F FFFFh
i i	:	i:
63	03F 0000h	03F FFFFh
:	:	i:
0	000 0000h	000 FFFFh

Note: 1. Block 0-1023 is the lower die, block 1024-2047 is the upper die.

Memory Organization

Bus Operations

Table 3: Bus Operations

Notes 1 and 2 apply to entire table

totes i una L'appi, to citalie table							
Operation	CE#	OE#	WE#	RST#	V _{PP} /WP#	A[MAX:0]	DQ[15:0]
READ	L	L	Н	Н	Х	Address	Data output
WRITE	L	Н	L	Н	H ³	Command address	Data input ⁴
STANDBY	Н	Х	Х	Н	Х	Х	High-Z
OUTPUT DISABLE	L	Н	Н	Н	Х	Х	High-Z
RESET	Х	Х	Х	L	Х	Х	High-Z

Notes

- 1. Typical glitches of less than 3ns on CE#, OE#, and WE# are ignored by the device and do not affect bus operations.
- 2. H = Logic level HIGH (V_{IH}); L = Logic level LOW (V_{IL}); X = HIGH or LOW.
- 3. If WP# is LOW, then the highest or the lowest block remains protected, depending on line item.
- 4. Data input is required when issuing a command sequence or when performing data polling or block protection.

Read

Bus READ operations read from the memory cells, registers, extended memory block, or CFI space. To accelerate the READ operation, the memory array can be read in page mode where data is internally read and stored in a page buffer.

Page size is 16 words and is addressed by address inputs A[3:0]. The extended memory blocks and CFI area support page read mode.

A valid bus READ operation involves setting the desired address on the address inputs, taking CE# and OE# LOW, and holding WE# HIGH. The data I/Os will output the value. If CE# goes HIGH and returns LOW for a subsequent access, a random read access is performed and ^tACC or ^tCE is required. (See AC Characteristics for details about when the output becomes valid.)

Write

Bus WRITE operations write to the command interface. A valid bus WRITE operation begins by setting the desired address on the address inputs. The address inputs are latched by the command interface on the falling edge of CE# or WE#, whichever occurs last. The data I/Os are latched by the command interface on the rising edge of CE# or WE#, whichever occurs first. OE# must remain HIGH during the entire bus WRITE operation (See AC Characteristics for timing requirement details).

Standby

Driving CE# HIGH in read mode causes the device to enter standby and data I/Os to be High-Z (See DC Characteristics).



During PROGRAM or ERASE operations, the device will continue to use the program/ erase supply current (I_{CC3}) until the operation completes. The device cannot be placed into standby mode during a PROGRAM/ERASE operation.

Output Disable

Data I/Os are High-Z when OE# is HIGH.

Reset

During reset mode the device is deselected and the outputs are High-Z. The device is in reset mode when RST# is LOW. The power consumption is reduced to the standby level, independently from CE#, OE#, or WE# inputs.

When RST# is HIGH, a time of ^tPHEL is required before a READ operation can access the device, and a delay of ^tPHWL is required before a write sequence can be initiated. After this wake-up interval, normal operation is restored, the device defaults to read array mode, and the data polling register is reset.

If RST# is driven LOW during a PROGRAM/ERASE operation or any other operation that requires writing to the device, the operation will abort within ^tPLRH, and memory contents at the aborted block or address are no longer valid.

14

Registers

The device features two methods for monitoring internal status during modify operations: data polling status and read status register. Users must not mix the two methods. Only one method at a time must be used to monitor internal operations.

Data Polling Register

The device has two 1Gb dies, the selected die automatically enters data polling status mode upon command issuance. The data polling status information uses the following to indicate information: DQ1, DQ2, DQ3, DQ5, DQ6, and DQ7; DQ[15:8] are reserved and will output 00h. The deselected die is in standby mode.

Table 4: Data Polling Register Bit Definitions

Note 1 applies to entire table

Bit	Name	Settings	Description	Notes
DQ7	Data polling bit	0 or 1, depending on operations	Monitors whether the program/erase controller has successfully completed its operation, or has responded to an ERASE SUSPEND operation.	2, 4
DQ6	Toggle bit	Toggles: 0 to 1; 1 to 0; and so on	Monitors whether the program, erase, or blank check controller has successfully completed its operations, or has responded to an ERASE SUSPEND operation. During a PROGRAM/ERASE/BLANK CHECK operation, DQ6 toggles from 0 to 1, 1 to 0, and so on, with each successive READ operation from any address.	3, 4, 5
DQ5	Error bit	0 = Success 1 = Failure	Identifies errors detected by the program/erase controller. DQ5 is set to 1 when a PROGRAM, BLOCK ERASE, or DIE ERASE operation fails to write the correct data to the memory, or when a BLANK CHECK or CRC operation fails.	4, 6
DQ3	Erase timer bit	0 = Erase not in progress 1 = Erase in progress	Identifies the start of program/erase controller operation during a BLOCK ERASE command. Before the program/erase controller starts, this bit set to 0.	4
DQ2	Alternative toggle bit	Toggles: 0 to 1; 1 to 0; and so on	During DIE ERASE, BLOCK ERASE, and ERASE SUSPEND operations, DQ2 toggles from 0 to 1, 1 to 0, and so on, with each successive READ operation from addresses within the blocks being erased.	3, 4
DQ1	Buffered program abort bit	1 = Abort	Indicates a BUFFER PROGRAM, BLANK CHECK, or CRC operation abort. The BUFFERED PROGRAM ABORT and RESET command must be issued to return the device to read mode (see WRITE TO BUFFER PROGRAM command).	

Notes:

- 1. The data polling register can be read during PROGRAM, ERASE, or ERASE SUSPEND operations; the READ operation outputs data on DQ[7:0].
- 2. For a PROGRAM operation in progress, DQ7 outputs the complement of the bit being programmed. For a READ operation from the address previously programmed successfully, DQ7 outputs existing DQ7 data. For a READ operation from addresses with blocks to be erased while an ERASE SUSPEND operation is in progress, DQ7 outputs 0; upon successful completion of the ERASE SUSPEND operation, DQ7 outputs 1. For an ERASE operation in progress, DQ7 outputs 0; upon ERASE operation's successful completion, DQ7 outputs 1. During a BUFFER PROGRAM operation, the data polling bit is valid only for the last word being programmed in the write buffer.



- 3. After successful completion of a PROGRAM, ERASE, or BLANK CHECK operation, the device returns to read mode.
- 4. During erase suspend mode, READ operations to addresses within blocks not being erased output memory array data as if in read mode. A protected block is treated the same as a block not being erased. See the Toggle Flowchart for more information.
- 5. During erase suspend mode, DQ6 toggles when addressing a cell within a block being erased. The toggling stops when the program/erase controller has suspended the ERASE operation. See the Toggle Flowchart for more information.
- 6. When DQ5 is set to 1, a READ/RESET (F0h) command must be issued before any subsequent command.

Table 5: Operations and Corresponding Bit Settings


Note 1 and 2 apply to entire table

Operation	Address	DQ7	DQ6	DQ5	DQ3	DQ2	DQ1	RY/BY#	Notes
PROGRAM	Any address	DQ7#	Toggle	0	_	-	0	0	3
CRC range of blocks	Any address	1	Toggle	0	_	_	0	0	
CRC chip	Any address	DQ7#	Toggle	0	_	-	0	0	4
DIE ERASE	Any address	0	Toggle	0	1	Toggle	_	0	
BLANK CHECK	Blank-checking block	0	Toggle	0	1	Toggle	-	0	
	Non-blank-check- ing block	0	Toggle	0	1	No toggle	_	0	
BLOCK ERASE	Erasing block	0	Toggle	0	1	Toggle	_	0	
	Non-erasing block	0	Toggle	0	1	No toggle	_	0	
PROGRAM SUSPEND	Programming block				High-Z				
	Nonprogramming block	(Outputs mem	9	High-Z				
ERASE	Erasing block	1	No Toggle	0	_	Toggle	_	High-Z	
SUSPEND	Non-erasing block	Outputs memory array data as if in read mode						High-Z	
PROGRAM during	Erasing block	DQ7#	Toggle	0	_	Toggle	_	0	3
ERASE SUSPEND	Non-erasing block	DQ7#	Toggle	0	_	No Toggle	_	0	3
BUFFERED PROGRAM ABORT	Any address	DQ7#	Toggle	0	-	_	1	High-Z	
PROGRAM Error	Any address	DQ7#	Toggle	1	_	-	_	High-Z	3
ERASE Error	Any address	0	Toggle	1	1	Toggle	_	High-Z	
BLANK CHECK Er- ror	Any address	0	Toggle	1	1	Toggle	-	High-Z	
CRC range of blocks error	Any address	1	Toggle	1	-	_	-	High-Z	
CRC chip error	Any address	DQ7#	Toggle	1	_	_	_	High-Z	4

- Notes: 1. Unspecified data bits should be ignored.
 - 2. The table is only for selected die. The non-select die will output the array content.

- 3. DQ7# for buffer program is related to the last address location loaded.
- 4. DQ7# is the reverse DQ7 of the last word or byte loaded before CRC chip confirm command cycle.

Figure 5: Data Polling Flowchart

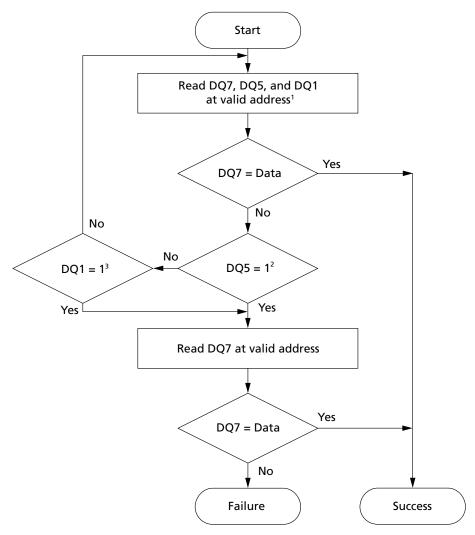


Notes:

- 1. Valid address is the last address being programmed or an address within the block being erased.
- 2. Failure results: DQ5 = 1 indicates an operation error. A READ/RESET (F0h) command must be issued before any subsequent command.
- 3. Failure results: DQ1 = 1 indicates a WRITE TO BUFFER PROGRAM ABORT operation. A full three-cycle RESET (AAh/55h/F0h) command sequence must be used to reset the aborted device.




Figure 6: Toggle Bit Flowchart

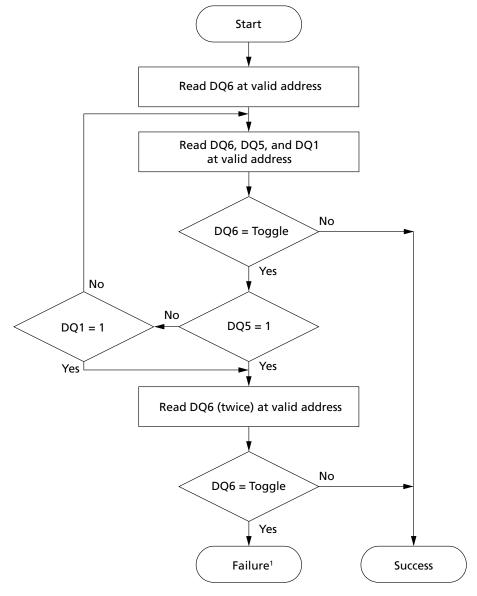

Note: 1. Failure results: DQ5 = 1 indicates an operation error; DQ1 = 1 indicates a WRITE TO BUFFER PROGRAM ABORT operation.



Figure 7: Data Polling/Toggle Bit Flowchart

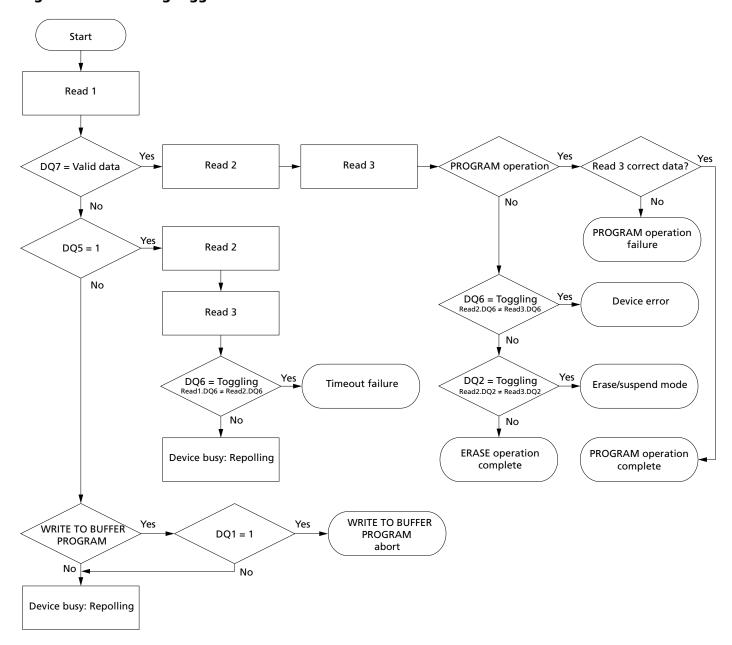

Read Status Register

The device has two status registers: Each die has one status register. The operation initiated in one die must be terminated before attempting to start a new operation in another die. During PROGRAM or ERASE operations in one die, the related status register should be monitored by asserting A[max].

The device's status register displays PROGRAM, ERASE, and BLANK CHECK operations status. A device's status can be read after writing the READ STATUS REGISTER command (70h). When the READ STATUS REGISTER command is issued, the current status is captured by the register and the device is in read status register mode. The first read access in the status register mode exits the mode and returns to the output state when the READ STATUS REGISTER command was issued. No other command should be sent before reading the status register to exit the status register mode.

The status register bits are output on DQ[7:0], while DQ[15:8] outputs are 00h.

Table 6: Status Register Definitions

Bit	Name	Settings	Description
SR[15:8]	_	Reserved	Reserved for future use. Will always be set to 0.
SR7	Device program/ erase/blank check status	0 = Busy 1 = Ready	Indicates erase, program, or blank check completion in the device. $SR[6:1]$ are invalid; $SR7 = 0$.
SR6	Erase suspend status	0 = Erase in progress/ complete 1 = Erase suspended	Indicates whether the device is erase suspended. After issuing an ERASE SUSPEND command, SR7 and SR6 are set to 1. SR6 remains set until the device receives an ERASE RESUME command.
SR5	Erase/blank check status	0 = Erase/blank check successful 1 = Erase/blank check error	Set to 1 if an attempted erase or blank check failed.
SR4	Program status	0 = Program success 1 = Program error	Indicates whether the program failed or the buffer program has aborted.
SR3	Writer buffer abort status	0 = Program not aborted 1 = Program aborted during buffer pro- gram	Indicates whether the buffer program has aborted.
SR2	Program suspend status	0 = Program in pro- gress/complete 1 = Program suspen- ded	Indicates whether the device is program suspended. After receiving a PROGRAM SUSPEND command, SR7 and SR2 are set to 1, and remain set at 1 until a RESUME command is received.
SR1	Device protect status	0 = Unlocked 1 = Aborted erase/ program attempt on a locked block	Indicates whether program or erase was attempted on a locked block. If an ERASE or PROGRAM operation is attempted on a locked block, SR1 is set to 1 and the operation aborts.
SR0	_	Reserved	Reserved for future use. Will always be set to 0.



Clear Status Register

The status register content can be cleared by CLEAR STATUS REGISTER command (71h). The CLEAR STATUS REGISTER command clears the status register bits SR[6:1]. SR7 remains at 0, which indicates the device is busy.

However, for buffer program abort only, the CLEAR STATUS REGISTER command would change also SR7 to 1, which reverts the device to main array read mode. The status register can also be cleared by using RESET Command (F0h).

Lock Register

The device has two lock registers: Each die has one lock register. Micron recommends programming both of the lock registers with the same contents in order to have the same protection scheme for both the upper and lower die.

Table 7: Lock Register Bit Definitions


Note 1 applies to entire table

Bit	Name	Settings	Description	Notes
DQ[15:9]	_	Default value = 1	DQ[15:9] are reserved and are set to a default value of 1.	
DQ8	_	Default value = 0	DQ8 is reserved and is set to a default value of 0.	
DQ[7:3]	_	Default value =1	DQ[7:3] are reserved and are set to a default value of 1.	
DQ2	Password pro- tection mode lock bit	0 = Password protection mode enabled 1 = Password protection mode disabled (default)	Places the device permanently in password protection mode.	2
DQ1	Nonvolatile protection mode lock bit	0 = Nonvolatile pro- tection mode enabled with password protec- tion mode perma- nently disabled 1 = Nonvolatile pro- tection mode enabled (default)	Places the device in nonvolatile protection mode, with password protection mode permanently disabled. When shipped from the factory, the device will operate in nonvolatile protection mode, and the memory blocks are unprotected.	2
DQ0	Extended memory block protec- tion bit	0 = Protected 1 = Unprotected (default)	If the device is shipped with the extended memory block unlocked, the block can be protected by setting this bit to 0. The extended memory block protection status can be read in auto select mode by issuing an AUTO SELECT command.	

- Notes: 1. The lock register is a 16-bit, one-time programmable register. DQ[15:3] are reserved.
 - 2. The password protection mode lock bit and nonvolatile protection mode lock bit cannot both be programmed to 0. Any attempt to program one while the other is programmed causes the operation to abort, and the device returns to read mode. The device is shipped from the factory with the default setting.



Figure 8: Lock Register Program Flowchart

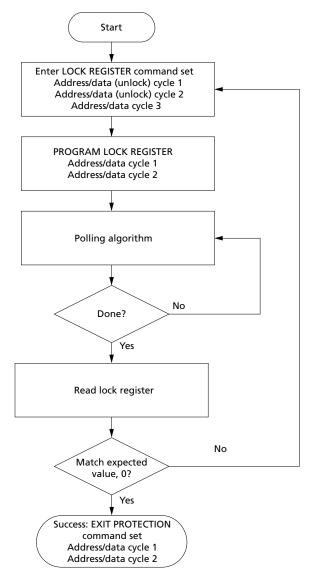

Notes: 1. Each lock register bit can be programmed only once.

2. See the Block Protection Command Definitions table for address-data cycle details.

3. DQ5 and DQ1 are ignored in this algorithm flow.



Standard Command Definitions – Address-Data Cycles

Table 8: Standard Command Definitions - Address-Data Cycles

Note 1 applies to entire table

	Address and Data Cycles												
Command and	1s	t	2n	ıd	3r	d	4	th	51	th	61	th	
Code/Subcode	Α	D	Α	D	Α	D	Α	D	Α	D	Α	D	Notes
READ and AUTO SELECT	Opera	tions	•			1	•		'	•	<u> </u>	•	•
READ/RESET (F0h)	555	AA	2AA	55	Х	F0							2
READ CFI (98h)	555	98			'	'							
EXIT READ CFI (F0h)	Х	F0											
AUTO SELECT (90h)	555	AA	2AA	55	555	90	Note 3	Note 3					4, 5
EXIT AUTO SELECT (F0h)	Х	F0											
READ STATUS (70h)	555	70											
CLEAR STATUS (71h)	555	71											
BYPASS Operations			•										
UNLOCK BYPASS (20h)	555	AA	2AA	55	555	20							
UNLOCK BYPASS	Х	90	Х	00		'							
RESET (90h/00h)													
PROGRAM Operations													
PROGRAM (A0h)	555	AA	2AA	55	555	A0	PA	PD					
UNLOCK BYPASS PROGRAM (A0h)	Х	A0	PA	PD									6
WRITE TO BUFFER PROGRAM (25h)	555	AA	2AA	55	BAd	25	BAd	N	PA	PD			7, 8, 9
UNLOCK BYPASS WRITE TO BUFFER PROGRAM (25h)	BAd	25	BAd	N	PA	PD							6
WRITE TO BUFFER PROGRAM CONFIRM (29h)	BAd	29											7
BUFFERED PROGRAM ABORT and RESET (F0h)	555	AA	2AA	55	555	F0							
PROGRAM SUSPEND (B0h)	Х	В0											
PROGRAM RESUME (30h)	Х	30											
PROGRAM SUSPEND (51h)	Х	51											
PROGRAM RESUME (50h)	Х	50											
ERASE Operations													
DIE ERASE (80/10h)	555	AA	2AA	55	555	80	555	AA	2AA	55	555	10	
UNLOCK BYPASS DIE ERASE (80/10h)	Х	80	Х	10				•	•		•		6



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR **Standard Command Definitions – Address-Data Cycles**

Table 8: Standard Command Definitions - Address-Data Cycles (Continued)

Note 1 applies to entire table

		Address and Data Cycles											
Command and	1s	t	2n	d	3r	d	41	th	5t	h	6t	h	
Code/Subcode	Α	D	Α	D	Α	D	Α	D	Α	D	Α	D	Notes
BLOCK ERASE (80/30h)	555	AA	2AA	55	555	80	555	AA	2AA	55	BAd	30	
UNLOCK BYPASS BLOCK ERASE (80/30h)	Х	80	BAd	30					•				6
ERASE SUSPEND (B0h)	Х	В0											
ERASE RESUME (30h)	Х	30											
BLANK CHECK Operations													
BLANK CHECK	555	33											

- Notes: 1. A = Address; D = Data; X = "Don't Care"; BAd = Any address in the block; N = Number of words to be programmed; PA = Program address; PD = Program data; Gray shading = Not applicable. All values in the table are hexadecimal. Some commands require both a command code and subcode. All the commands are effective for the selected die only.
 - 2. A full three-cycle RESET command sequence must be used to reset the device in the event of a buffered program abort error (DQ1 = 1).
 - 3. These cells represent READ cycles (versus WRITE cycles for the others).
 - 4. AUTO SELECT enables the device to read the manufacturer code, device code, block protection status, and extended memory block protection indicator.
 - 5. AUTO SELECT addresses and data are specified in the Electronic Signature table and the Extended Memory Block Protection table.
 - 6. For any UNLOCK BYPASS ERASE/PROGRAM command, the first two UNLOCK cycles are unnecessary.
 - 7. BAd must be the same as the address loaded during the WRITE TO BUFFER PROGRAM 3rd and 4th cycles.
 - 8. WRITE TO BUFFER PROGRAM operation: maximum cycles = 517. UNLOCK BYPASS WRITE TO BUFFER PROGRAM operation: maximum cycles = 515. WRITE TO BUFFER PROGRAM operation: N + 1 = words to be programmed; maximum buffer size = 512 words.
 - 9. A[MAX:9] address pins should remain unchanged while A[8:0] pins are used to select a word within the N+1 word page.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR READ and AUTO SELECT Operations

READ and AUTO SELECT Operations

READ/RESET Command

The READ/RESET (F0h) command returns the device to read mode and resets the errors in the data polling register. One or three bus WRITE operations can be used to issue the READ/RESET command. Note: A full three-cycle RESET command sequence must be used to reset the device in the event of a buffered program abort error (DQ1 = 1).

Once a PROGRAM, ERASE, or SUSPEND operation begins, RESET commands are ignored until the operation is complete. Read/reset serves primarily to return the device to read mode from a failed PROGRAM or ERASE operation. Read/reset may cause a return to read mode from undefined states that might result from invalid command sequences. A hardware reset may be required to return to normal operation from some undefined states.

To exit the unlock bypass mode, the system must issue a two-cycle UNLOCK BYPASS RESET command sequence. A READ/RESET command will not exit unlock bypass mode.

READ CFI Command

The READ CFI (98h) command puts the device in read CFI mode and is only valid when the device is in read array or auto select mode. One bus WRITE cycle is required to issue the command.

Once in read CFI mode, bus READ operations will output data from the CFI memory area (Refer to the Common Flash Interface for details).

Read CFI mode is exited by performing a READ/RESET command (F0h). The device returns to read mode unless it entered read CFI mode after an ERASE SUSPEND or PROGRAM SUSPEND command, in which case it returns to erase or program suspend mode.

AUTO SELECT Command

At power-up or after a hardware reset, the device is in read mode. It can then be put in auto select mode by issuing an AUTO SELECT (90h) command. Auto select mode enables the following device information to be read:

- Electronic signature, which includes manufacturer and device code information as shown in the Electronic Signature table.
- Block protection, which includes the block protection status and extended memory block protection indicator, as shown in the Block Protection table.

Electronic signature or block protection information is read by executing a READ operation with control signals and addresses set, as shown in the Read Electronic Signature table or the Block Protection table, respectively. In addition, this device information can be read or set by issuing an AUTO SELECT command.

Auto select mode can be used by the programming equipment to automatically match a device with the application code to be programmed.

Three consecutive bus WRITE operations are required to issue an AUTO SELECT command. The device remains in auto select mode until a READ/RESET or READ CFI command is issued.



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR READ and AUTO SELECT Operations

The device cannot enter auto select mode when a PROGRAM or ERASE operation is in progress (RY/BY# LOW). However, auto select mode can be entered if the PROGRAM or ERASE operation has been suspended by issuing a PROGRAM SUSPEND or ERASE SUSPEND command.

Auto select mode is exited by performing a READ/RESET command (F0h). The device returns to read mode unless it entered auto select mode after an ERASE SUSPEND or PROGRAM SUSPEND command, in which case it returns to erase or program suspend mode.

Table 9: Block Protection

Note 1 applies to entire table

					Address II	Data Input/Output			
READ Cycle	CE#	OE#	WE#	A[MAX:16]	A[15:2]	A1	A0	DQ[15:0]	
128-bit (0x0~0	128-bit (0x0~0x7) Factory-Programmable Extended Memory Protection Indicator (Bit DQ7)								
Low lock	L	L	Н	L	L	Н	Н	0009h ²	
								0089h ³	
High lock	L	L	Н	L	L	Н	Н	0019h ²	
								0099h ³	
Block protection status									
Protected	L	L	Н	Block base	L	Н	L	0001h	
Unprotected	L	L	Н	address	L	Н	L	0000h	

Notes: 1. $H = Logic level HIGH (V_{IH})$; $L = Logic level LOW (V_{IL})$; X = HIGH or LOW.

2. Customer-lockable (default).

3. Micron prelocked.

Read Electronic Signature

Table 10: Read Electronic Signature - 2Gb

Note 1 applies to entire table

				A	ddress	Input			Data Input/ Output
READ Cycle	CE#	OE#	WE#	A[MAX:4]	А3	A2	A1	A0	DQ[15:0]
Manufacturer code	L	L	Н	L	L	L	L	L	0089h
Device code 1	L	L	Н	L	L	L	L	Н	227Eh
Device code 2	L	L	Н	L	Н	Н	Н	L	2248h
Device code 3	L	L	Н	L	Н	Н	Н	Н	2201h

Note: 1. H = Logic level HIGH (V_{IH}) ; L = Logic level LOW (V_{IL}) ; X = HIGH or LOW.

Cyclic Redundancy Check Operation

The device has two dies, and the CRC command is only effective for one die at one time.

CYCLIC REDUNDANCY CHECK Command

The CYCLIC REDUNDANCY CHECK (CRC) command is a nonsecure hash function designed to detect accidental changes to raw data. Typically, it is used in digital networks and storage devices such as hard disk drives. A CRC-enabled device calculates a short, fixed-length binary sequence known as the CRC code (or CRC). The device CRC operation will generate the CRC result of the whole device or of an address range specified by the operation. Then the CRC result is compared with the expected CRC data provided in the sequence. Finally, the device indicates a pass or fail through the data polling register. If the CRC fails, corrective action is possible, such as re-verifying with a normal READ mode or rewriting the array data.

CRC is a higher performance alternative to reading data directly to verify recently programmed data, or as a way to periodically check the data integrity of a large block of data against a stored CRC reference over the life of the product.

CRC helps improve test efficiency for programmer or burn-in stress tests. No system hardware changes are required to enable CRC.

The CRC-64 operation follows the ECMA standard; the generating polynomial is:

$$G(x) = x^{64} + x^{62} + x^{57} + x^{55} + x^{54} + x^{53} + x^{52} + x^{47} + x^{46} + x^{45} + x^{40} + x^{39} + x^{38} + x^{37} + x^{35} + x^{33} + x^{32} + x^{31} + x^{29} + x^{27} + x^{24} + x^{23} + x^{22} + x^{21} + x^{19} + x^{17} + x^{13} + x^{12} + x^{10} + x^9 + x^7 + x^4 + x + 1$$

Note: The data stream sequence is from LSB to MSB and the default initial CRC value is all zeros.

The CRC command sequences are shown in the tables below, for an entire die or for a selected range, respectively.

Cyclic Redundancy Check Operation Command Sequence

Table 11: Command Sequence - Range of Blocks

Note 1 and 2 apply to entire table.

Address	DQ[15:0]	Description	Notes
0000555	00AAh	UI unlock cycle 1	
00002AA	0055h	UI unlock cycle 2	
0000000	00EBh	Extended function interface command	
0000000	0027h	CRC sub-op code	
0000000	000Ah	N-1 data count	
0000000	FFFEh	CRC operation option data	
000001	Data	1st word of 64-bit expected CRC	
0000002	Data	2nd word of 64-bit expected CRC	
0000003	Data	3rd word of 64-bit expected CRC	
000004	Data	4th word of 64-bit expected CRC	

Table 11: Command Sequence - Range of Blocks (Continued)

Note 1 and 2 apply to entire table.

Address	DQ[15:0]	Description	Notes
0000005	DQ15 = A14	Byte address to start	3
	DQ14 = A13		
	DQ2 = A1		
	DQ1 = A0		
	DQ0 = set to zero		
0000006	A ₃₀ -A ₁₅	Byte address to start	3
0000007	Reserved	Default as 0000h	
0000008	DQ15 = A14	Byte address to stop	3
	DQ14 = A13		
	DQ2 = A1		
	DQ1 = A0		
	DQ0 = set to zero		
0000009	A ₃₀ -A ₁₅	Byte address to stop	3
000000A	Reserved	Default as 0000h	
0000000	0029h	Confirm command	
0000000	Read	Continue data polling to wait for device to be ready	

- Notes: 1. If the CRC check fails, a check error is generated by setting DQ5 = 1.
 - 2. This is a byte-aligned operation.
 - 3. The stop address must be bigger than the start address; otherwise, the algorithm will take no action.
 - 4. The start address and stop address must be within one die range.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Cyclic Redundancy Check Operation

Table 12: Command Sequence - Entire Chip

Address	DQ[15:0]	Description
0000555	00AAh	UI unlock cycle 1
00002AA	0055h	UI unlock cycle 2
0000000	00EBh	Extended function interface command
0000000	0027h	CRC sub-op code
0000000	0004h	N-1 data count
0000000	FFFFh	CRC operation option data
0000001	Data	1st word of 64-bit expected CRC
0000002	Data	2nd word of 64-bit expected CRC
0000003	Data	3rd word of 64-bit expected CRC
0000004	Data	4th word of 64-bit expected CRC
0000000	0029h	Confirm command
0000000	Read	Continue data polling to wait for device to be ready

Note: 1. Applies to entire table: If the CRC check fails, a check error is generated by setting DQ5

Bypass Operations

UNLOCK BYPASS Command

The UNLOCK BYPASS (20h) command is only effective for the selected die. If customer wants to program/erase the other die with the UNLOCK BYPASS command, the UNLOCK BYPASS command should be entered again.

The UNLOCK BYPASS command is used to place the device in unlock bypass mode. Three bus WRITE operations are required to issue the UNLOCK BYPASS command.

When the device enters unlock bypass mode, the two initial UNLOCK cycles required for a standard PROGRAM or ERASE operation are not needed, thus enabling faster total program or erase time.

The UNLOCK BYPASS command is used in conjunction with UNLOCK BYPASS PRO-GRAM or UNLOCK BYPASS ERASE commands to program or erase the device faster than with standard PROGRAM or ERASE commands. Using these commands can save considerable time when the cycle time to the device is long. When in unlock bypass mode, only the following commands are valid:

- The UNLOCK BYPASS PROGRAM command can be issued to program addresses within the device.
- The UNLOCK BYPASS BLOCK ERASE command can then be issued to erase one or more memory blocks.
- The UNLOCK BYPASS DIE ERASE command can be issued to erase the whole memory array.
- The UNLOCK BYPASS WRITE TO BUFFER PROGRAM and UNLOCK BYPASS EN-HANCED WRITE TO BUFFER PROGRAM commands can be issued to speed up the programming operation.
- The UNLOCK BYPASS RESET command can be issued to return the device to read mode.

In unlock bypass mode, the device can be read as if in read mode.

In addition to the UNLOCK BYPASS command, when $V_{PP}/WP\#$ is raised to V_{HH} , the device automatically enters unlock bypass mode. When $V_{PP}/WP\#$ returns to V_{IH} or V_{IL} , the device is no longer in unlock bypass mode, and normal operation resumes. The transitions from V_{IH} to V_{HH} and from V_{HH} to V_{IH} must be slower than tVHVPP . (See the Accelerated Program, Data Polling/Toggle AC Characteristics.)

Note: Micron recommends entering and exiting unlock bypass mode using the ENTER UNLOCK BYPASS and UNLOCK BYPASS RESET commands rather than raising $V_{PP}/WP\#$ to V_{HH} . $V_{PP}/WP\#$ should never be raised to V_{PPH} from any mode except read mode; otherwise, the device may be left in an indeterminate state. $V_{PP}/WP\#$ should not remain at V_{HH} for than 80 hours cumulative.

UNLOCK BYPASS RESET Command

The UNLOCK BYPASS RESET (90/00h) command is used to return to read/reset mode from unlock bypass mode. Two bus WRITE operations are required to issue the UNLOCK BYPASS RESET command. The READ/RESET command does not exit from unlock bypass mode.

Program Operations

PROGRAM Command

The PROGRAM (A0h) command can be used to program a value to one address in the memory array. The command requires four bus WRITE operations, and the final WRITE operation latches the address and data in the internal state machine and starts the program/erase controller. After programming has started, bus READ operations output the data polling register content.

Programming can be suspended and then resumed by issuing a PROGRAM SUSPEND command and a PROGRAM RESUME command, respectively.

If the address falls in a protected block, the PROGRAM command is ignored, and the data remains unchanged. The data polling register is not read, and no error condition is given.

After the PROGRAM operation has completed, the device returns to read mode, unless an error has occurred. When an error occurs, bus READ operations to the device continue to output the data polling register. A READ/RESET command must be issued to reset the error condition and return the device to read mode.

The PROGRAM command cannot change a bit set to 0 back to 1, and an attempt to do so is masked during a PROGRAM operation. Instead, an ERASE command must be used to set all bits in one memory block or in the entire memory from 0 to 1.

The PROGRAM operation is aborted by performing a hardware reset or by powering down the device. In this case, data integrity cannot be ensured, and it is recommended that the words or bytes that were aborted be reprogrammed.

UNLOCK BYPASS PROGRAM Command

When the device is in unlock bypass mode, the UNLOCK BYPASS PROGRAM (A0h) command can be used to program one address in the memory array. The command requires two bus WRITE operations instead of four required by a standard PROGRAM command; the final WRITE operation latches the address and data and starts the program/erase controller (The standard PROGRAM command requires four bus WRITE operations). The PROGRAM operation using the UNLOCK BYPASS PROGRAM command behaves identically to the PROGRAM operation using the PROGRAM command. The operation cannot be aborted. A bus READ operation to the memory outputs the data polling register.

WRITE TO BUFFER PROGRAM Command

The WRITE TO BUFFER PROGRAM (25h) command makes use of the program buffer to speed up programming and dramatically reduces system programming time compared to the standard non-buffered PROGRAM command. This product supports a 512-word maximum program buffer.

When issuing a WRITE TO BUFFER PROGRAM command, $V_{PP}/WP\#$ can be held HIGH or raised to V_{HH} . Also, it can be held LOW if the block is not the lowest or highest block, depending on the part number.

The following successive steps are required to issue the WRITE TO BUFFER PROGRAM command:



First, two UNLOCK cycles are issued. Next, a third bus WRITE cycle sets up the WRITE TO BUFFER PROGRAM command. The set-up code can be addressed to any location within the targeted block. Then, a fourth bus WRITE cycle sets up the number of words to be programmed. Value n is written to the same block address, where n+1 is the number of words to be programmed. Value n+1 must not exceed the size of the program buffer, or the operation will abort. A fifth cycle loads the first address and data to be programmed. Last, n bus WRITE cycles load the address and data for each word into the program buffer. Addresses must lie within the range from *the start address* +1 to *the start address* +(n-1).

Optimum programming performance and lower power usage are achieved by aligning the starting address at the beginning of a 512-word boundary (A[8:0] = 0x000h). Any buffer size smaller than 512 words is allowed within a 512-word boundary, while all addresses used in the operation must lie within the 512-word boundary. In addition, any crossing boundary buffer program will result in a program abort.

To program the content of the program buffer, this command must be followed by a WRITE TO BUFFER PROGRAM CONFIRM command.

If an address is written several times during a WRITE TO BUFFER PROGRAM operation, the address/data counter will be decremented at each data load operation, and the data will be programmed to the last word loaded into the buffer.

Invalid address combinations or the incorrect sequence of bus WRITE cycles will abort the WRITE TO BUFFER PROGRAM command.

The data polling register bits DQ1, DQ5, DQ6, DQ7 can be used to monitor the device status during a WRITE TO BUFFER PROGRAM operation.

The WRITE TO BUFFER PROGRAM command should not be used to change a bit set to 0 back to 1, and an attempt to do so is masked during the operation. Rather than the WRITE TO BUFFER PROGRAM command, the ERASE command should be used to set memory bits from 0 to 1.

Figure 9: Boundary Condition of Program Buffer Size


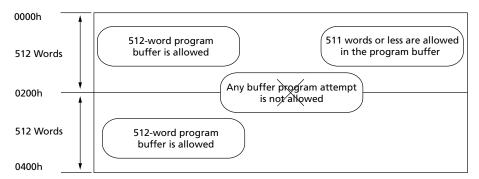




Figure 10: WRITE TO BUFFER PROGRAM Flowchart

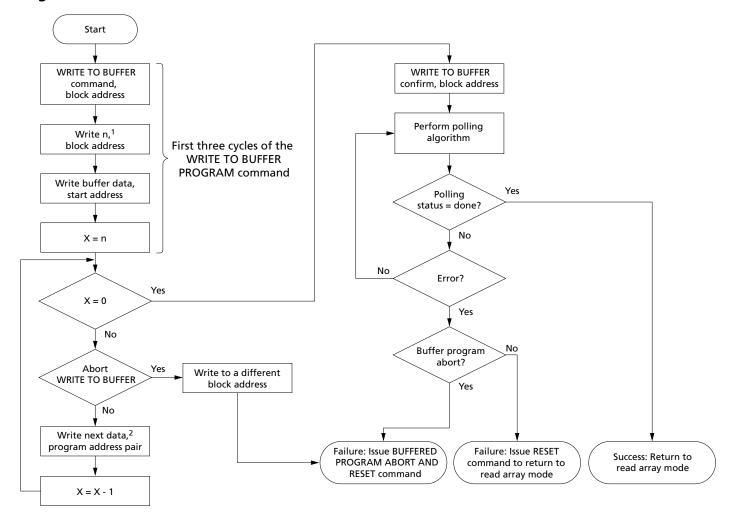

- Notes: 1. n + 1 is the number of addresses to be programmed.
 - 2. The BUFFERED PROGRAM ABORT AND RESET command (3 cycles reset) must be issued to return the device to read mode.
 - 3. When the block address is specified, any address in the selected block address space is acceptable. However, when loading program buffer address with data, all addresses must fall within the selected program buffer page.

UNLOCK BYPASS WRITE TO BUFFER PROGRAM Command

When the device is in unlock bypass mode, the UNLOCK BYPASS WRITE TO BUFFER (25h) command can be used to program the device in fast program mode. The command requires two bus WRITE operations fewer than the standard WRITE TO BUFFER PROGRAM command.

The UNLOCK BYPASS WRITE TO BUFFER PROGRAM command behaves the same way as the WRITE TO BUFFER PROGRAM command: the operation cannot be aborted, and a bus READ operation to the memory outputs the data polling register.

The WRITE TO BUFFER PROGRAM CONFIRM command is used to confirm an UNLOCK BYPASS WRITE TO BUFFER PROGRAM command and to program the n+1 words loaded in the program buffer by this command.

WRITE TO BUFFER PROGRAM CONFIRM Command

The WRITE TO BUFFER PROGRAM CONFIRM (29h) command is used to confirm a WRITE TO BUFFER PROGRAM command and to program the n+1 words loaded in the program buffer by this command.

BUFFERED PROGRAM ABORT AND RESET Command

A BUFFERED PROGRAM ABORT AND RESET (F0h) command must be issued to reset the device to read mode when the BUFFER PROGRAM operation is aborted. The buffer programming sequence can be aborted in the following ways:

- Load a value that is greater than the page buffer size during the number of locations to program in the WRITE TO BUFFER PROGRAM command.
- Write to an address in a different block than the one specified during the WRITE BUFFER LOAD command.
- Write an address/data pair to a different write buffer page than the one selected by the starting address during the program buffer data loading stage of the operation.
- Write data other than the CONFIRM command after the specified number of data load cycles.

The abort condition is indicated by DQ1 = 1, DQ7 = DQ7# (for the last address location loaded), DQ6 = toggle, and DQ5 = 0 (all of which are data polling register bits). A BUFFERED PROGRAM ABORT and RESET command sequence must be written to reset the device for the next operation.

Note: The full three-cycle BUFFERED PROGRAM ABORT and RESET command sequence is required when using buffer programming features in unlock bypass mode.

PROGRAM SUSPEND Command

The PROGRAM SUSPEND command can be used to interrupt a program operation so that data can be read from another block. When the PROGRAM SUSPEND command is issued during a program operation, the device suspends the operation within the program suspend latency time and updates the data polling register bits.

After the PROGRAM operation has been suspended, data can be read from any address. However, data is invalid when read from an address where a program operation has been suspended.



The PROGRAM SUSPEND command may also be issued during a PROGRAM operation while an erase is suspended. In this case, data may be read from any address not in erase suspend or program suspend mode. To read from the extended memory block area (one-time programmable area), the ENTER/EXIT EXTENDED MEMORY BLOCK command sequences must be issued.

The system may also issue the AUTO SELECT command sequence when the device is in program suspend mode. The system can read as many auto select codes as required. When the device exits auto select mode, the device reverts to program suspend mode and is ready for another valid operation.

The PROGRAM SUSPEND operation is aborted by performing a device reset or power-down. In this case, data integrity cannot be ensured, and it is recommended that the words that were aborted be reprogrammed. This device has two different command codes for program suspend, B0h and 51h. Code B0h is available for legacy compatibility. Code 51h is recommended for use.

PROGRAM RESUME Command

The PROGRAM RESUME command must be issued to exit a program suspend mode and resume a PROGRAM operation. The controller can use DQ7 or DQ6 data polling bits to determine the status of the PROGRAM operation. After a PROGRAM RESUME command is issued, subsequent PROGRAM RESUME commands are ignored. Another PROGRAM SUSPEND command can be issued after the device has resumed programming. This device has two different command codes for Program Resume (30h or 50h). Code 30h is available for legacy compatibility. Code 50h is recommended to use.

ACCELERATED BUFFERED PROGRAM Operations

ACCELERATED BUFFER PROGRAM operations provides faster performance than standard program command sequences. Operations are enabled through $V_{PP}/WP\#$ under the V_{HH} voltage supply.

When the system asserts V_{HH} on input, the device automatically enters the UNLOCK BYPASS mode, which enables the system to use the UNLOCK BYPASS WRITE TO BUFFER PROGRAM (25h) command sequence.

Removing V_{HH} from the V_{PP} upon completion of the embedded program operation returns the device to normal operation.

Table 13: ACCELERATED PROGRAM Requirements and Recommendations

Device State	Requirements/Recommendations
Device blocks	Requirement: Must be unprotected prior to raising V _{PP} /WP# to V _{HH}
V _{HH} applied to V _{PP} /WP#	Requirement: Maximum cumulative period of 80 hours.
V _{PP} /WP#	Requirement: Must not be at V_{HH} for operations except ACCELERATED BUFFERED PROGRAM and DIE ERASE; otherwise device can be damaged
	Recommendation: Keep stable to V_{HH} during ACCELERATED BUFFERED PROGRAM operation
Power-up	Recommendation: Apply V _{HH} on V _{PP} /WP# after V _{CC} /V _{CCQ} is stable on.
Power-down	Recommendation: Adjust V _{PP} /WP# from V _{HH} to V _{IH} /V _{IL} before V _{CC} /V _{CCQ} goes LOW.

Erase Operations

DIE ERASE Command

The DIE ERASE (80/10h) command erases the selected die. Six bus WRITE operations are required to issue the command and start the program/erase controller.

Protected blocks are not erased. If all blocks are protected, the data remains unchanged. No error is reported when protected blocks are not erased.

During the DIE ERASE operation, the selected die ignores all other commands, including ERASE SUSPEND. It is not possible to abort the operation. All bus READ operations during DIE ERASE output the data polling register on the data I/Os. See the Data Polling Register section for more details.

After the DIE ERASE operation completes, the device returns to read mode, unless an error has occurred. If an error occurs, the device will continue to output the data polling register.

When the operation fails, a READ/RESET command must be issued to reset the error condition and return to read mode. The status of the array must be confirmed through the BLANK CHECK operation and the BLOCK ERASE command re-issued to the failed block.

The DIE ERASE command sets all of the bits in unprotected blocks of the device to 1. All previous data is lost.

The operation is aborted by performing a reset or by powering down the device. In this case, data integrity cannot be ensured, and it is recommended that the entire chip be erased again.

To erase the whole 2Gb array, two DIE ERASE operations are required. No parallel ERASE is allowed. The second DIE ERASE command must be issued after the completion of the first one.

UNLOCK BYPASS DIE ERASE Command

When the device is in unlock bypass mode, the UNLOCK BYPASS DIE ERASE (80/10h) command can be used to erase all memory blocks at one time. The command requires only two bus WRITE operations instead of six using the standard DIE ERASE command. The final bus WRITE operation starts the program/erase controller.

The UNLOCK BYPASS DIE ERASE command behaves the same way as the DIE ERASE command: the operation cannot be aborted, and a bus READ operation to the memory outputs the data polling register.

BLOCK ERASE Command

The BLOCK ERASE (80/30h) command erase one block. It sets all bits in the unprotected selected block to 1. All previous data in the selected block are lost. Six bus WRITE operations are required to select the block to be erased.

After the sixth bus WRITE operation, a bus READ operation outputs the data polling register. See the WE#-Controlled Program waveforms for details on how to identify if the program/erase controller has started the BLOCK ERASE operation.



After the BLOCK ERASE operation completes, the device returns to read mode, unless an error has occurred. If an error occurs, bus READ operations will continue to output the data polling register. A READ/RESET command must be issued to reset the error condition and return to read mode.

If the selected block is protected, it is ignored and the data remains unchanged. No error condition is given when protected block is not erased.

During the BLOCK ERASE operation, the device ignores all commands except the ERASE SUSPEND command and the READ STATUS command. The operation is aborted by performing a hardware reset or powering down the device. In this case, data integrity cannot be ensured, and it is recommended that the aborted blocks be erased again.

UNLOCK BYPASS BLOCK ERASE Command

When the device is in unlock bypass mode, the UNLOCK BYPASS BLOCK ERASE (80/30h) command can be used to erase one memory block. The command requires two bus WRITE operations instead of six using the standard BLOCK ERASE command. The final bus WRITE operation latches the address of the block and starts the program/erase controller.

The UNLOCK BYPASS BLOCK ERASE command behaves the same way as the BLOCK ERASE command: the operation cannot be aborted, and a bus READ operation to the memory outputs the data polling register. See the BLOCK ERASE Command section for details.

ERASE SUSPEND Command

The ERASE SUSPEND (B0h) command temporarily suspends a BLOCK ERASE operation. One bus WRITE operation is required to issue the command. The block address is "Don't Care."

The program/erase controller suspends the ERASE operation within the erase suspend latency time of the ERASE SUSPEND command being issued. However, when the ERASE SUSPEND command is written during the block erase timeout, the device immediately terminates the timeout period and suspends the ERASE operation. After the program/erase controller has stopped, the device operates in read mode, and the erase is suspended.

During an ERASE SUSPEND operation, it is possible to execute these operations in arrays that are not suspended:

- READ (main memory array)
- PROGRAM
- WRITE TO BUFFER PROGRAM
- AUTO SELECT
- READ CFI
- UNLOCK BYPASS
- · Extended memory block commands
- READ/RESET

Reading from a suspended block will output the data polling register. If an attempt is made to program in a protected or suspended block, the PROGRAM command is ignor-



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR ACCELERATED DIE ERASE Operations

ed and the data remains unchanged; also, the data polling register is not read and no error condition is given.

Before the RESUME command is initiated, the READ/RESET command must to issued to exit AUTO SELECT and READ CFI operations. In addition, the EXIT UNLOCK BYPASS and EXIT EXTENDED MEMORY BLOCK commands must be issued to exit unlock bypass and the extended memory block modes.

An ERASE SUSPEND command is ignored if it is written during a DIE ERASE operation.

If the ERASE SUSPEND operation is aborted by performing a device hardware reset or power-down, data integrity cannot be ensured, and it is recommended that the suspended blocks be erased again.

ERASE RESUME Command

The ERASE RESUME (30h) command restarts the program/erase controller after an ERASE SUSPEND operation.

The device must be in read array mode before the RESUME command will be accepted. An erase can be suspended and resumed more than once.

ACCELERATED DIE ERASE Operations

The ACCELERATED DIE ERASE operation provides faster performance than the standard DIE ERASE command sequence. Operations are enabled through $V_{PP}/WP\#$ under the V_{HH} voltage supply. Note that the command is effective for the selected die only.

When the system asserts V_{HH} on input, the device automatically enters the UNLOCK BYPASS mode, which enables the system to use the UNLOCK BYPASS DIE ERASE (80/30h) command sequence.

When a block is protected, the DIE ERASE command skips the protected block and continues with next block erase. The command algorithm skips a block that failed to erase and continues with the remaining blocks. The fail flag will be set for the operation.

Removing V_{HH} from the $V_{PP}/WP\#$ upon completion of the embedded erase operation returns the device to normal operation. When an error occurs or when the operation fails, the array status should be confirmed through the BLANK CHECK operation and the BLOCK ERASE command re-issued to the failed block.

Table 14: ACCELERATED DIE ERASE Requirements and Recommendations

Device Component/State	Requirements/Recommendations
V _{PP} /WP#	Requirement: Must not be at V _{HH} for operations except ACCELERATED PROGRAM and DIE ERASE; otherwise device can be damaged.
V _{HH} applied to V _{PP} /WP#	Requirement: Maximum cumulative period of 80 hours.
Power-up	Recommendation: Apply V _{HH} on V _{PP} /WP# after V _{CC} /V _{CCQ} is stable on.
Power-down	Recommendation: Adjust $V_{PP}/WP\#$ from V_{HH} to V_{IH}/V_{IL} before V_{CC}/V_{CCQ} goes LOW.

BLANK CHECK Operation

The BLANK CHECK operation determines whether a specified block is blank (that is, completely erased). It can also be used to determine whether a previous ERASE opera-



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR BLANK CHECK Operation

tion was successful, including ERASE operations that might have been interrupted by power loss.

The BLANK CHECK operation checks for cells that are programmed or over-erased. If it finds any, it returns a failure status, indicating that the block is not blank. If it returns a passing status, the block is guaranteed blank (all 1s) and is ready to program.

Before executing, the ERASE operation initiates an embedded BLANK CHECK operation, and if the target block is blank, the ERASE operation is skipped, benefitting overall cycle performance; otherwise, the ERASE operation continues.

The BLANK CHECK operation can occur in only one block at a time, and during its execution, reading the data polling register is the only other operation allowed. Reading from any address in the device enables reading the data polling register to monitor blank check progress or errors. Operations such as READ (array data), PROGRAM, ERASE, and any suspended operation are not allowed.

After the BLANK CHECK operation has completed, the device returns to read mode unless an error has occurred. When an error occurs, the device continues to output data polling register data. A READ/RESET command must be issued to reset the error condition and return the device to read mode.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Device Protection

Device Protection

Hardware Protection

The $V_{PP}/WP\#$ function provides a hardware method of protecting either the highest or lowest block. When $V_{PP}/WP\#$ is LOW, PROGRAM and ERASE operations on either of these block options is ignored to provide protection. When $V_{PP}/WP\#$ is HIGH, the device reverts to the previous protection status for the highest or lowest block. PROGRAM and ERASE operations can modify the data in either of these block options unless block protection is enabled.

Note: Micron highly recommends driving $V_{PP}/WP\#$ HIGH or LOW. If a system needs to float the $V_{PP}/WP\#$ pin, without a pull-up/pull-down resistor and no capacitor, then an internal pull-up resistor is enabled.

Table 15: V_{PP}/WP# Functions

V _{PP} /WP# Settings	Function
V_{IL}	Highest or lowest block is protected.
V _{IH}	Highest or lowest block is unprotected unless software protection is activated.

Software Protection

The following software protection modes are available:

- Volatile protection
- Nonvolatile protection
- Password protection

The device is shipped with all blocks unprotected. On first use, the device defaults to the nonvolatile protection mode but can be activated in either the nonvolatile protection or password protection mode.

The desired protection mode is activated by setting either the nonvolatile protection mode lock bit or the password protection mode lock bit of the lock register (see the Lock Register section). Both bits are one-time-programmable and nonvolatile; therefore, after the protection mode has been activated, it cannot be changed, and the device is set permanently to operate in the selected protection mode. It is recommended that the desired software protection mode be activated when first programming the device.

For the highest or lowest block, a higher level of block protection can be achieved by locking the block using nonvolatile protection mode and holding V_{PP} /WP# LOW.

Blocks with volatile protection and nonvolatile protection can coexist within the memory array. If the user attempts to program or erase a protected block, the device ignores the command and returns to read mode.

The block protection status can be read by performing a read electronic signature or by issuing an AUTO SELECT command (see the Block Protection table).

Refer to the Block Protection Status table and the Software Protection Scheme figure for details on the block protection scheme. Refer to the Protection Operations section for a description of the command sets.



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Device Protection

The device is two die stacked, so following command is only effective for the selected die,

- CLEAR VOLATILE PROTECTION BIT command
- CLEAR ALL NONVOLATILE PROTECTION BITS command

And the pass word protection is valid for one die only, therefore customer should set the full chip password protection to each die. Micron recommends customer to use the same password.

Volatile Protection Mode

Volatile protection enables the software application to protect blocks against inadvertent change and can be disabled when changes are needed. Volatile protection bits are unique for each block and can be individually modified. Volatile protection bits control the protection scheme only for unprotected blocks whose nonvolatile protection bits are cleared to 1. Issuing a PROGRAM VOLATILE PROTECTION BIT or CLEAR VOLATILE PROTECTION BIT command sets to 0 or clears to 1 the volatile protection bits and places the associated blocks in the protected (0) or unprotected (1) state, respectively. The volatile protection bit can be set or cleared as often as needed.

When the device is first shipped, or after a power-up or hardware reset, the volatile protection bits default to 1 (unprotected).

Nonvolatile Protection Mode

A nonvolatile protection bit is assigned to each block. Each of these bits can be set for protection individually by issuing a PROGRAM NONVOLATILE PROTECTION BIT command. Also, each device has one global volatile bit called the nonvolatile protection bit lock bit; it can be set to protect all nonvolatile protection bits at once. This global bit must be set to 0 only after all nonvolatile protection bits are configured to the desired settings. When set to 0, the nonvolatile protection bit lock bit prevents changes to the state of the nonvolatile protection bits. When cleared to 1, the nonvolatile protection bits can be set and cleared using the PROGRAM NONVOLATILE PROTECTION BIT and CLEAR ALL NONVOLATILE PROTECTION BITS commands, respectively.

No software command unlocks the nonvolatile protection bit lock bit unless the device is in password protection mode; in nonvolatile protection mode, the nonvolatile protection bit lock bit can be cleared only by taking the device through a hardware reset or power-up.

Nonvolatile protection bits cannot be cleared individually; they must be cleared all at once using a CLEAR ALL NONVOLATILE PROTECTION BITS command. They will remain set through a hardware reset or a power-down/power-up sequence.

If one of the nonvolatile protection bits needs to be cleared (unprotected), additional steps are required: First, the nonvolatile protection bit lock bit must be cleared to 1, using either a power-cycle or hardware reset. Then, the nonvolatile protection bits can be changed to reflect the desired settings. Finally, the nonvolatile protection bit lock bit must be set to 0 to lock the nonvolatile protection bits. The device now will operate normally.

To achieve the best protection, the PROGRAM NONVOLATILE PROTECTION LOCK BIT command should be executed early in the boot code, and the boot code should be protected by holding $V_{\rm PP}/WP\#$ LOW.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Device Protection

Nonvolatile protection bits and volatile protection bits have the same function when $V_{PP}/WP\#$ is HIGH or when $V_{PP}/WP\#$ is at the voltage for program acceleration (V_{HH}).

Password Protection Mode


The password protection mode provides a higher level of security than the nonvolatile protection mode by requiring a 64-bit password to unlock the nonvolatile protection bit lock bit. In addition to this password requirement, the nonvolatile protection bit lock bit is set to 0 after power-up and reset to maintain the device in password protection mode.

Executing the UNLOCK PASSWORD command by entering the correct password clears the nonvolatile protection bit lock bit, enabling the block nonvolatile protection bits to be modified. If the password provided is incorrect, the nonvolatile protection bit lock bit remains locked, and the state of the nonvolatile protection bits cannot be modified.

To place the device in password protection mode, the following two steps are required: First, before activating the password protection mode, a 64-bit password must be set and the setting verified. Password verification is allowed only before the password protection mode is activated. Next, password protection mode is activated by programming the password protection mode lock bit to 0. This operation is irreversible. After the bit is programmed, it cannot be erased, the device remains permanently in password protection mode, and the 64-bit password can be neither retrieved nor reprogrammed. In addition, all commands to the address where the password is stored are disabled.

Note: There is no means to verify the password after password protection mode is enabled. If the password is lost after enabling the password protection mode, there is no way to clear the nonvolatile protection bit lock bit.

Figure 11: Software Protection Scheme

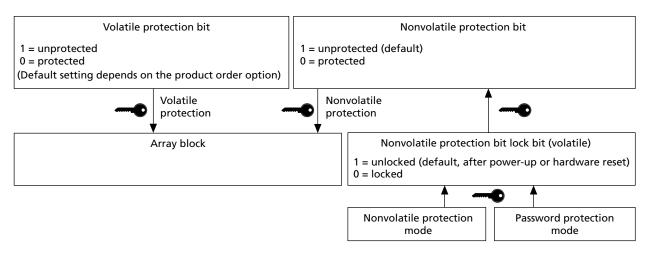

Notes: 1. Volatile protection bits are programmed and cleared individually. Nonvolatile protection bits are programmed individually and cleared collectively.

2. Once programmed to 0, the nonvolatile protection bit lock bit can be reset to 1 only by taking the device through a power-up or hardware reset.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR **Device Protection**

Table 16: Block Protection Status

Nonvolatile Protection Bit Lock Bit ¹	Nonvolatile Protection Bit ²	Volatile Protection Bit ³	Block Protection Status ⁴	Block Protection Status
1	1	1	00h	Block unprotected; nonvolatile protection bit changeable.
1	1	0	01h	Block protected by volatile protection bit; nonvolatile protection bit changeable.
1	0	1	01h	Block protected by nonvolatile protection bit; nonvolatile protection bit changeable.
1	0	0	01h	Block protected by nonvolatile protection bit and volatile protection bit; nonvolatile protection bit changeable.
0	1	1	00h	Block unprotected; nonvolatile protection bit unchangeable.
0	1	0	01h	Block protected by volatile protection bit; nonvolatile protection bit unchangeable.
0	0	1	01h	Block protected by nonvolatile protection bit; nonvolatile protection bit unchangeable.
0	0	0	01h	Block protected by nonvolatile protection bit and volatile protection bit; nonvolatile protection bit unchangeable.

- Notes: 1. Nonvolatile protection bit lock bit: when cleared to 1, all nonvolatile protection bits are unlocked; when set to 0, all nonvolatile protection bits are locked.
 - 2. Block nonvolatile protection bit: when cleared to 1, the block is unprotected; when set to 0, the block is protected.
 - 3. Block volatile protection bit: when cleared to 1, the block is unprotected; when set to 0, the block is protected.
 - 4. Block protection status is checked under AUTO SELECT mode.



Block Protection Command Definitions – Address-Data Cycles

Table 17: Block Protection Command Definitions - Address-Data Cycles

Notes 1 and 2 apply to entire table

Notes 1 and 2 apply to en	Address and Data Cycles											
Command and	1:	st	21	nd	3	rd	41	th		n	th	
Code/Subcode	Α	D	A	D	Α	D	Α	D		Α	D	Notes
LOCK REGISTER Comma	nds											
ENTER LOCK REGISTER COMMAND SET (40h)	555	AA	2AA	55	555	40						3
PROGRAM LOCK REGISTER (A0h)	Х	A0	Х	Data								5
READ LOCK REGISTER	Х	Data										4, 5, 6
EXIT LOCK REGISTER (90h/00h)	Х	90	Х	00								3
PASSWORD PROTECTION	N Comm	ands										
ENTER PASSWORD PROTECTION COMMAND SET (60h)	555	AA	2AA	55	555	60						3
PROGRAM PASSWORD (A0h)	Х	A0	PWAn	PWDn								7
READ PASSWORD	00	PWD0	01	PWD1	02	PWD2	03	PWD3				4, 6, 8
UNLOCK PASSWORD (25h/03h)	00	25	00	03	00	PWD0	01	PWD1		00	29	8
EXIT PASSWORD PROTECTION (90h/00h)	Х	90	Х	00					•			3
NONVOLATILE PROTECT	ION Com	mands										
ENTER NONVOLATILE PROTECTION COMMAND SET (C0h)	555	AA	2AA	55	555	C0						3
PROGRAM NONVOLATILE PROTECTION BIT (A0h)	Х	A0	BAd	00								9
READ NONVOLATILE PROTECTION BIT STATUS	BAd	READ (DQ0)										4, 6, 9
CLEAR ALL NONVOLATILE PROTECTION BITS (80h/30h)	Х	80	00	30								10
EXIT NONVOLATILE PROTECTION (90h/00h)	Х	90	Х	00								3
NONVOLATILE PROTECT	ION BIT I	LOCK BIT	Comma	ands								

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Block Protection Command Definitions – Address-Data Cycles

Table 17: Block Protection Command Definitions - Address-Data Cycles (Continued)

Notes 1 and 2 apply to entire table

Notes 1 and 2 apply to en				Addı	ress and	Data Cy	ycles					
Command and	15	t	2r	nd	3	rd	4t	h		n	th	_
Code/Subcode	Α	D	Α	D	Α	D	Α	D	 	Α	D	Notes
ENTER NONVOLATILE PROTECTION BIT LOCK BIT COMMAND SET (50h)	555	AA	2AA	55	555	50						3
PROGRAM NONVOLATILE PROTECTION BIT LOCK BIT (A0h)	X	A0	X	00								9
READ NONVOLATILE PROTECTION BIT LOCK BIT STATUS	Х	READ (DQ0)										4, 6, 9
EXIT NONVOLATILE PROTECTION BIT LOCK BIT (90h/00h)	Х	90	Х	00								3
VOLATILE PROTECTION	Comman	ds										
ENTER VOLATILE PROTECTION COMMAND SET (E0h)	555	AA	2AA	55	555	E0						3
PROGRAM VOLATILE PROTECTION BIT (A0h)	Х	A0	BAd	00								9
READ VOLATILE PROTECTION BIT STATUS	BAd	READ (DQ0)										4, 6
CLEAR VOLATILE PROTECTION BIT (A0h)	Х	A0	BAd	01								9
EXIT VOLATILE PROTECTION (90h/00h)	Х	90	Х	00								3
EXTENDED MEMORY BI	OCK Ope	rations										
ENTER EXTENDED MEMORY BLOCK (88h)	555	AA	2AA	55	555	88						
PROGRAM EXTENDED MEMORY BLOCK (A0h)	555	AA	2AA	55	555	A0	Word address	data				
READ EXTENDED MEMORY BLOCK	Word address	data										
EXIT EXTENDED MEMORY BLOCK (90h/00h)	555	AA	2AA	55	555	90	Х	00				

Notes: 1. Key: A = Address and D = Data; X = "Don't Care;" BAd = Any address in the block; PWDn = Password words, n = 0 to 3; PWAn = Password address, n = 0 to 3; Gray = Not applicable. All values in the table are hexadecimal.



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Block Protection Command Definitions – Address-Data Cycles

- DQ[15:8] are "Don't Care" during UNLOCK and COMMAND cycles. A[MAX:16] are "Don't Care" during UNLOCK and COMMAND cycles, unless an address is required.
- 3. The ENTER command sequence must be issued prior to any operation. It disables READ and WRITE operations from and to block 0. READ and WRITE operations from and to any other block are allowed. Also, when an ENTER COMMAND SET command is issued, an EXIT COMMAND SET command must be issued to return the device to READ mode.
- 4. READ REGISTER/PASSWORD commands have no command code; CE# and OE# are driven LOW and data is read according to a specified address.
- 5. Data = Lock register content.
- 6. All address cycles shown for this command are READ cycles.
- 7. Only one portion of the password can be programmed or read by each PROGRAM PASS-WORD command.
- 8. Each portion of the password can be entered or read in any order as long as the entire 64-bit password is entered or read.
- 9. Both nonvolatile and volatile protection bit settings are as follows: Protected state = 00; Unprotected state = 01.
- 10. The CLEAR ALL NONVOLATILE PROTECTION BITS command programs all nonvolatile protection bits before erasure. This prevents over-erasure of previously cleared nonvolatile protection bits.

Protection Operations

Blocks can be protected individually against accidental PROGRAM or ERASE operations. The block protection scheme is shown in the Software Protection Scheme figure. Memory block and extended memory block protection is configured through the lock register.

LOCK REGISTER Commands

After the ENTER LOCK REGISTER COMMAND SET (40h) command has been issued, all bus READ or PROGRAM operations can be issued to the lock register.

The PROGRAM LOCK REGISTER (A0h) command allows the lock register to be configured. The programmed data can then be checked with a READ LOCK REGISTER command by driving CE# and OE# LOW with the appropriate address data on the address bus.

PASSWORD PROTECTION Commands

After the ENTER PASSWORD PROTECTION COMMAND SET (60h) command has been issued, the commands related to password protection mode can be issued to the device.

The PROGRAM PASSWORD (A0h) command is used to program the 64-bit password used in the password protection mode. To program the 64-bit password, the complete command sequence must be entered four times at four consecutive addresses selected by A[1:0]. By default, all password bits are set to 1. The password can be checked by issuing a READ PASSWORD command.

Note: A password must be programmed per Flash memory die to enable password protection.

The READ PASSWORD command is used to verify the password used in password protection mode. To verify the 64-bit password, the complete command sequence must be entered four times at four consecutive addresses selected by A[1:0]. If the password mode lock bit is programmed and the user attempts to read the password, the device will output 00h onto the I/O data bus.

The UNLOCK PASSWORD (25/03h) command is used to clear the nonvolatile protection bit lock bit, allowing the nonvolatile protection bits to be modified. The UNLOCK PASSWORD command must be issued, along with the correct password, and requires a 6µs delay between successive UNLOCK PASSWORD commands in order to prevent hackers from cracking the password by trying all possible 64-bit combinations. If this delay does not occur, the latest command will be ignored. Approximately 6µs is required for unlocking the device after the valid 64-bit password has been provided.

NONVOLATILE PROTECTION Commands


After the ENTER NONVOLATILE PROTECTION COMMAND SET (C0h) command has been issued, the commands related to nonvolatile protection mode can be issued to the device.

A block can be protected from program or erase by issuing a PROGRAM NONVOLATILE PROTECTION BIT (A0h) command, along with the block address. This command sets the nonvolatile protection bit to 0 for a given block.

The status of a nonvolatile protection bit for a given block or group of blocks can be read by issuing a READ NONVOLATILE MODIFY PROTECTION BIT command, along with the block address.

The nonvolatile protection bits are erased simultaneously by issuing a CLEAR ALL NONVOLATILE PROTECTION BITS (80/30h) command. No specific block address is required. If the nonvolatile protection bit lock bit is set to 0, the command fails.

Figure 12: Set/Clear Nonvolatile Protection Bit Algorithm Flowchart

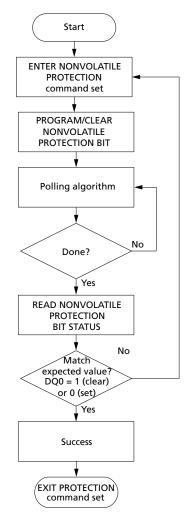

Notes: 1. See the Block Protection Command Definitions table for address-data cycle details.

2. DQ5 and DQ1 are ignored in this algorithm flow.

NONVOLATILE PROTECTION BIT LOCK BIT Commands

After the ENTER NONVOLATILE PROTECTION BIT LOCK BIT COMMAND SET (50h) command has been issued, the commands that allow the nonvolatile protection bit lock bit to be set can be issued to the device.



The PROGRAM NONVOLATILE PROTECTION BIT LOCK BIT (A0h) command is used to set the nonvolatile protection bit lock bit to 0, thus locking the nonvolatile protection bits and preventing them from being modified.

The READ NONVOLATILE PROTECTION BIT LOCK BIT STATUS command is used to read the status of the nonvolatile protection bit lock bit.

VOLATILE PROTECTION Commands

After the ENTER VOLATILE PROTECTION COMMAND SET (E0h) command has been issued, commands related to the volatile protection mode can be issued to the device.

The PROGRAM VOLATILE PROTECTION BIT (A0h) command individually sets a volatile protection bit to 0 for a given block. If the nonvolatile protection bit for the same block is set, the block is locked regardless of the value of the volatile protection bit (see the Block Protection Status table).

The status of a volatile protection bit for a given block can be read by issuing a READ VOLATILE PROTECTION BIT STATUS command along with the block address.

The CLEAR VOLATILE PROTECTION BIT (A0h) command individually clears (sets to 1) the volatile protection bit for a given block. If the nonvolatile protection bit for the same block is set, the block is locked regardless of the value of the volatile protection bit (see the Block Protection Status table).

EXTENDED MEMORY BLOCK Commands

The device has one extra 512-word extended memory block that can be accessed only by the ENTER EXTENDED MEMORY BLOCK (88h) command. It is used as a security block to provide a permanent 128-bit secure ID number or to store additional information. The device can be shipped with the extended memory block prelocked permanently by Micron, including the 128-bit security identification number. Or, the device can be shipped with the extended memory block unlocked, enabling customers to permanently program and lock it (default) (see Lock Register, the AUTO SELECT command, and the Block Protection table.)

Table 18: Extended Memory Block Address and Data

	Data				
Address	Micron Prelocked	Customer Lockable			
000000h- 000007h	Secure ID number	Determined by customer (default)			
000008h- 0001FFh	Protected and unavailable				

After the ENTER EXTENDED MEMORY BLOCK command has been issued, the device enters the extended memory block mode. All bus READ or PROGRAM operations are conducted on the extended memory block, and the extended memory block is addressed using the addresses occupied by block 0 in the other operating modes (see the Memory Map table).

In extended memory block mode, ERASE, DIE ERASE, ERASE SUSPEND, and ERASE RESUME commands are not allowed. The extended memory block cannot be erased, and each bit of the extended memory block can only be programmed once.



The extended memory block is protected from further modification by programming lock register bit 0. Once invoked, this protection cannot be undone.

The device remains in extended memory block mode until the EXIT EXTENDED MEMORY BLOCK (90/00h) command is issued, which returns the device to read mode, or until power is removed from the device. After a power-up sequence or hardware reset, the device will revert to reading memory blocks in the main array.

EXIT PROTECTION Command

The EXIT PROTECTION COMMAND SET (90/00h) command is used to exit the lock register, password protection, nonvolatile protection, volatile protection, and nonvolatile protection bit lock bit command set modes and return the device to read mode.

Note that the READ/RESET command (F0h) is ignored under these modes.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Common Flash Interface

Common Flash Interface

The common Flash interface (CFI) is a JEDEC-approved, standardized data structure that can be read from the Flash memory device. It allows a system's software to query the device to determine various electrical and timing parameters, density information, and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the READ CFI command is issued, the device enters CFI query mode and the data structure is read from memory. The following tables show the addresses (A[7:0]) used to retrieve the data. The query data is always presented on the lowest order data outputs (DQ[7:0]), and the other data outputs (DQ[15:8]) are set to 0.

Table 19: Query Structure Overview

Note 1 applies to the entire table

Address	Subsection Name	Description
10h	CFI query identification string	Command set ID and algorithm data offset
1Bh	System interface information	Device timing and voltage information
27h	Device geometry definition	Flash device layout
40h	Primary algorithm-specific extended query table	Additional information specific to the primary algorithm (optional)

Note: 1. Query data are always presented on the lowest order data outputs (DQ[7:0]). DQ[15:8] are set to 0.

Table 20: CFI Query Identification String

Note 1 applies to the entire table

Address	Data	Description	Value
10h	0051h	Query unique ASCII string "QRY"	"Q"
11h	0052h		"R"
12h	0059h		"Y"
13h 14h	0002h 0000h	Primary algorithm command set and control interface ID code 16-bit ID code defining a specific algorithm	-
15h 16h	0040h 0000h	Address for primary algorithm extended query table (see the Primary Algorithm- Specific Extended Query Table)	P = 40h
17h 18h	0000h 0000h	Alternate vendor command set and control interface ID code second vendor-specified algorithm supported	-
19h 1Ah	0000h 0000h	Address for alternate algorithm extended query table	_

Note: 1. Query data are always presented on the lowest order data outputs (DQ[7:0]). DQ[15:8] are set to 0.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Common Flash Interface

Table 21: CFI Query System Interface Information

Note 1 applies to the entire table

Address	Data	Description	Value
1Bh	0027h	V _{CC} logic supply minimum program/erase voltage Bits[7:4] BCD value in volts Bits[3:0] BCD value in 100mV	2.7V
1Ch	0036h	V _{CC} logic supply maximum program/erase voltage Bits[7:4] BCD value in volts Bits[3:0] BCD value in 100mV	3.6V
1Dh	0085h	V _{HH} (programming) supply minimum program/erase voltage Bits[7:4] hex value in volts Bits[3:0] BCD value in 100mV	8.5V
1Eh	0095h	V _{HH} (programming) supply maximum program/erase voltage Bits[7:4] hex value in volts Bits[3:0] BCD value in 10mV	9.5V
1Fh	0005h	Typical timeout for single byte/word program = 2 ⁿ µs	32µs
20h	0009h	Typical timeout for maximum size buffer program = 2 ⁿ µs	512µs
21h	0008h	Typical timeout per individual block erase = 2 ⁿ ms	256ms
22h	0011h	Typical timeout for full die erase = 2 ⁿ ms	131s
23h	0003h	Maximum timeout for byte/word program = 2 ⁿ times typical	256µs
24h	0002h	Maximum timeout for buffer program = 2 ⁿ times typical	2048µs
25h	0002h	Maximum timeout per individual block erase = 2 ⁿ times typical	1100ms
26h	0003h	Maximum timeout for die erase = 2 ⁿ times typical	1048s

Note: 1. The values in this table are valid for all packages.

Table 22: Device Geometry Definition

Address	Data	Description	Value
27h	001Ch	Device size = 2 ⁿ in number of bytes	256MB
28h 29h	0001h 0000h	Flash device interface code description	x16 asynchronous
2Ah 2Bh	000Ah 0000h	Maximum number of bytes in multi-byte program or page = 2 ⁿ	1024
2Ch	0001h	Number of erase block regions. It specifies the number of regions containing contiguous erase blocks of the same size.	1
2Dh 2Eh	00FFh 0007h	Erase block region 1 information Number of identical-size erase blocks = 07FFh + 1	2048
2Fh 30h	0000h 0002h	Erase block region 1 information Block size in region 1 = 0200h × 256 bytes	128KB
31h 32h 33h 34h	0000h 0000h 0000h 0000h	Erase block region 2 information	0

Table 22: Device Geometry Definition (Continued)

Address	Data	Description	Value
35h	0000h	Erase block region 3 information	0
36h	0000h		
37h	0000h		
38h	0000h		
39h	0000h	Erase block region 4 information	0
3Ah	0000h		
3Bh	0000h		
3Ch	0000h		
3Dh	FFFFh	Reserved	_
3Eh	FFFFh		
3Fh	FFFFh		

Table 23: Primary Algorithm-Specific Extended Query Table

Note 1 applies to the entire table

Address	Data	Description	Value
40h	0050h	Primary algorithm extended query table unique ASCII string "PRI"	"P"
41h	0052h		"R"
42h	0049h		" "
43h	0031h	Major version number, ASCII	"1"
44h	0035h	Minor version number, ASCII	"5"
45h	001Ch	Address sensitive unlock (bits[1:0]): 00 = Required 01 = Not required Process technology (bits [7:2]) 0111b: Second generation	Required
46h	0002h	Erase suspend: 00 = Not supported 01 = Read only 02 = Read and write	2
47h	0001h	Block protection: 00 = Not supported x = Number of blocks per group	1
48h	0000h	Temporary block unprotect scheme: 00 = Not supported 01 = Supported	Not supported
49h	0008h	Protect/unprotect scheme: 08 = Advanced sector protection method	8
4Ah	0000h	Simultaneous operations: Not supported	-
4Bh	0000h	Burst mode: 00 = Not supported 01 = Supported	Not supported

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Common Flash Interface

Table 23: Primary Algorithm-Specific Extended Query Table (Continued)

Note 1 applies to the entire table

Address	Data	Description	Value
4Ch	0003h	Page mode: 00 = Not supported 01 = 4-word page 02 = 8-word page 03 = 16-word page	16-word page
4Dh	0085h	V _{HH} supply minimum program/erase voltage: Bits[7:4] hex value in volts Bits[3:0] BCD value in 100mV	8.5V
4Eh	0095h	V _{HH} supply maximum program/erase voltage: Bits[7:4] hex value in volts Bits[3:0] BCD value in 100mV	9.5V
4Fh	00xxh	WP# protection: xx = 04h: Uniform device, HW protection for lowest block xx = 05h: Uniform device, HW protection for highest block	Uniform + V _{PP} /WP# protecting highest or lowest block
50h	0001h	Program suspend: 00 = Not supported 01 = Supported	Supported
51h	0001h	Unlock bypass: 00 = Not supported 01 = Supported	Supported
52h	000Ah	Extended memory block (customer OTP area): 2 ⁿ bytes	1024 bytes

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Common Flash Interface

Table 23: Primary Algorithm-Specific Extended Query Table (Continued)

Note 1 applies to the entire table

Address	Data	Description	Value
53h	008Fh	Software Features	-
		bit 0: Status register polling	
		00 = Not supported	
		01 = Supported)	
		bit 1: DQ polling	
		00 = Not supported	
		01 = Supported)	
		bit 2: Program suspend/resume commands	
		00 = Not supported	
		01 = Supported)	
		bit 3: Word programming	
		00 = Not supported	
		01 = Supported)	
		bit 4: Bit-field programming	
		00 = Not supported	
		01 = Supported)	
		bit 5: Autodetect programming	
		00 = Not supported	
		01 = Supported)	
		bit 6: RFU	
		bit 7: Multiple writes per line	
		00 = Not supported	
		01 = Supported)	
54h	0005h	Page size: 2 ⁿ bytes	32 bytes
55h	0005h	Erase suspend timeout maximum: 2 ⁿ (μs)	32µs
56h	0004h	Program suspend timeout maximum: 2 ⁿ (µs)	16µs
57h to 77h	FFFFh	Reserved	_
78h	0005h	^t PLRH maximum: 2 ⁿ (μs)	32µs
79h	0009h	^t VCCPH maximum: 2 ⁿ (µs)	512µs
		Power-on reset	

Note: 1. The values in this table are valid for both packages.



Power-Up and Reset Characteristics

Table 24: Power-Up Specifications

Note 1 applies to entire table.

	Symbol				
Parameter	Legacy JEDEC		Min	Unit	Notes
V _{CC} HIGH to V _{CCQ} HIGH	_	^t VCHVCQH	0	μs	2
V _{CC} HIGH to rising edge of RST#	tVCS	tVCHPH	300	μs	3, 4
V _{CCQ} HIGH to rising edge of RST#	tVIOS	^t VCQHPH	0	μs	3, 4
RST# HIGH to chip enable LOW	^t RH	^t PHEL	50	ns	
RST# HIGH to write enable LOW	_	^t PHWL	150	ns	

- Notes: 1. Sampled only; not 100% tested.
 - 2. V_{CC} should attain V_{CC,min} from V_{SS} simultaneously with or prior to applying V_{CCQ} during power up. V_{CC} should attain V_{SS} during power down.
 - 3. If RST# is not stable for ^tVCS or ^tVIOS, the device will not allow any READ or WRITE operations, and a hardware reset is required.
 - 4. Power supply transitions should only occur when RST# is LOW.

Figure 13: Power-Up Timing

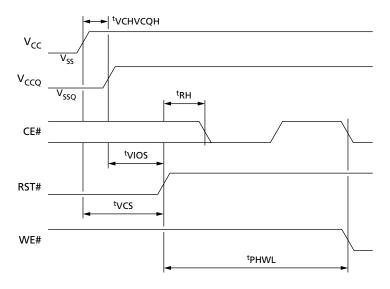




Table 25: Reset AC Specifications

	Symbol					
Condition/Parameter	Legacy	JEDEC	Min	Max	Unit	Notes
RST# LOW to read mode during program or erase	^t READY	^t PLRH	-	25	μs	1
RST# pulse width	^t RP	^t PLPH	100	_	ns	
RST# HIGH to CE# LOW, OE# LOW	^t RH	^t PHEL, ^t PHGL	50	-	ns	1
RST# LOW to standby mode during read mode	^t RPD	_	0	-	μs	
RST# LOW to standby mode during program or erase			0	_	μs	
RY/BY# HIGH to CE# LOW, OE# LOW	^t RB	^t RHEL, ^t RHGL	0	_	ns	1

Note: 1. Sampled only; not 100% tested.

Figure 14: Reset AC Timing - No PROGRAM/ERASE Operation in Progress


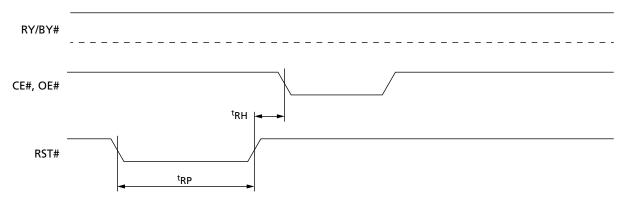


Figure 15: Reset AC Timing During PROGRAM/ERASE Operation

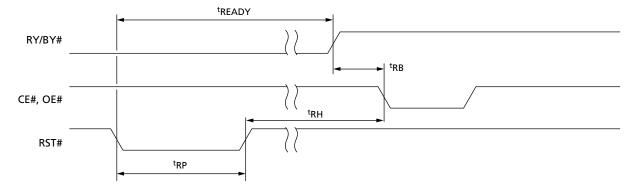

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR **Absolute Ratings and Operating Conditions**

Absolute Ratings and Operating Conditions

Stresses greater than those listed may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions outside those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may adversely affect reliability.

Table 26: Absolute Maximum/Minimum Ratings

Parameter	Symbol	Min	Max	Unit	Notes
Temperature under bias	T _{BIAS}	-50	125	°C	
Storage temperature	T _{STG}	-65	150	°C	
Supply voltage	V _{CC}	-0.6	V _{CC} + 2	V	1, 2
Input/output supply voltage	V _{CCQ}	-0.6	V _{CCQ} + 2	V	1, 2
Program/erase voltage	V _{PP}	-0.6	9.5	V	3

- 1. During signal transitions, minimum voltage may undershoot to -2V for periods less than
- 2. During signal transitions, maximum voltage may overshoot to V_{CC} + 2V for periods less
- 3. V_{PP} must not remain at 9.5V for more than 80 hours cumulative.


Table 27: Operating Conditions

Parameter	Symbol	Min	Max	Unit	Notes
Supply voltage	V _{CC}	2.7	3.6	V	
Input/output supply voltage ($V_{CCQ} \le V_{CC}$)	V _{CCQ}	1.65	3.6	V	
Accelerated buffered program/die erase voltage	V _{HH}	8.5	9.5	V	
Ambient operating temperature	T _A	-40	105	°C	
Load capacitance	C _L	3	0	pF	
Input rise and fall times (V _{IL} to V _{IH})	_	0.3	2.5	ns	1, 2
Input pulse voltages	_	0 to	V _{CCQ}	V	
Input and output timing reference voltages	_	V _{CC}	_{:Q} /2	V	
Address to address skew	_	_	3	ns	

- Notes: 1. If the rise/fall time is slower than 2.5ns, all timing specs must be derated by 0.5ns for every nanosecond push-out in rise/fall time. (Example: for a 10ns rise/fall time, all timing specs must be derated by $(10 - 2.5) \times (0.5 \text{ns}) = 3.75 \text{ns}$.
 - 2. Applies to Address, CE#, OE#, and WE# signals.



Figure 16: AC Measurement Load Circuit

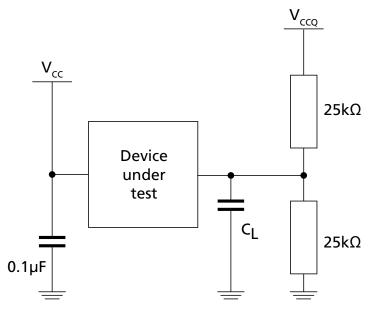

Note: 1. C_L includes jig capacitance.

Figure 17: AC Measurement I/O Waveform



Table 28: Input/Output Capacitance

Parameter	Symbol	Test Condition	Min	Max	Unit
Input capacitance	C _{IN}	$V_{IN} = 0V$	5	13	pF
RST# input capacitance	C _{IN_RST#}	$V_{IN} = 0V$	18	22	pF
Output capacitance	C _{OUT}	V _{OUT} = 0V	5	12	pF



DC Characteristics

Table 29: DC Current Characteristics

Parameter		Symbol	Cond	itions	Min	Тур	Max	Unit	Notes
Input load cu	rrent	ILI	0V ≤ V	_N ≤ V _{CC}	-	-	±1	μΑ	1
Output leaka	ge current	I _{LO}	0V ≤ V _O	_{UT} ≤ V _{CC}	_	_	±1	μΑ	
V _{CC} read current	Random read	I _{CC1}	CE# = V_{IL} , OE# = V_{IH} , f = 5 MHz		-	26	31	mA	
	Page read			OE# = V _{IH} , B MHz	-	12	16	mA	
V _{CC} standby current		I _{CC2}	$CE# = V_{CCQ} \pm 0.2V,$ $RST# = V_{CCQ} \pm 0.2V$		-	150	460	μΑ	
V _{CC} automati power saving current		I _{CC} APS	,		-	_	4	mA	
V _{CC} program/ check current		I _{CC3}	Program/ $V_{PP}/WP\# = V_{IL}$ erase or V_{IH}		-	35	50	mA	2
			controller active	$V_{PP}/WP# = V_{HH}$	-	35	50	mA	
V _{PP} current	Read	I _{PP1}	V _{PP} /WP	°# ≤ V _{CC}	_	4	30	μΑ	
	Standby	I _{PP2}			_	0.4	10	μΑ	
	PROGRAM operation	I _{PP3}	V _{PP} /WP	# = V _{HH}	_	5	10	mA	
	ongoing		$V_{PP}/WP\# = V_{CC}$		_	0.1	0.2	mA	1
	ERASE operation	I _{PP4}	V _{PP} /WP	# = V _{HH}	_	5	10	mA	1
	ongoing		$V_{PP}/WP\# = V_{CC}$		_	0.1	0.2	mA	

Notes: 1. The maximum input load current is $\pm 5\mu A$ on the $V_{PP}/WP\#$ pin.

2. Sampled only; not 100% tested.

2Gb: x16, 3V, MT28FW, Automotive Parallel NOR DC Characteristics

Table 30: DC Voltage Characteristics

Parameter	Symbol	Conditions	Min	Тур	Max	Unit	Notes
Input LOW voltage	V _{IL}	V _{CC} ≥ 2.7V	-0.5	_	0.3 × V _{CCQ}	V	
Input HIGH voltage	V _{IH}	V _{CC} ≥ 2.7V	0.7 × V _{CCQ}	_	V _{CCQ} + 0.4	V	
Output LOW voltage	V _{OL}	$I_{OL} = 100 \mu A,$ $V_{CC} = V_{CC,min},$ $V_{CCQ} = V_{CCQ,min}$	-	_	0.15 × V _{CCQ}	V	
Output HIGH voltage	V _{OH}	$I_{OH} = 100 \mu A$, $V_{CC} = V_{CC,min}$, $V_{CCQ} = V_{CCQ,min}$	0.85 × V _{CCQ}	_	-	V	
Voltage for V _{PP} /WP# program acceleration	V _{PP}	-	8.5	_	9.5	V	1
Program/erase lockout supply voltage	V _{LKO}	-	2.0	_	_	V	2, 3

- Notes: 1. V_{PP} must not remain at 9.5V for more than 80 hours cumulative.
 - 2. Sampled only; not 100% tested.
 - 3. WRITE operations are not valid when V_{CC} supply drops below V_{LKO} .



Read AC Characteristics

Table 31: Read AC Characteristics – $V_{CC} = V_{CCQ} = 2.7-3.6V$

	Symbol						
Parameter	Legacy JEDEC		Condition	Min	Max	Unit	Notes
Address valid to next address valid	^t RC	^t AVAV	CE# = V _{IL} , OE# = V _{IL}	105	-	ns	
Address valid to output valid	^t ACC	^t AVQV	CE# = V _{IL} , OE# = V _{IL}	-	105	ns	
Address valid to output valid (page)	^t PAGE	^t AVQV1	CE# = V _{IL} , OE# = V _{IL}	-	20	ns	
CE# LOW to output valid	^t CE	^t ELQV	OE# = V _{IL}	_	105	ns	
OE# LOW to output valid	^t OE	^t GLQV	CE# = V _{IL}	_	25	ns	
CE# HIGH to output High-Z	^t HZ	tEHQZ	OE# = V _{IL}	_	20	ns	1
OE# HIGH to output High-Z	^t DF	^t GHQZ	CE# = V _{IL}	_	15	ns	1
CE# HIGH, OE# HIGH, or address transition to output transition	tOH	^t EHQX, ^t GHQX, ^t AXQX	-	0	-	ns	

Note: 1. Sampled only; not 100% tested.

Table 32: Read AC Characteristics – V_{CCQ} = 1.65V– V_{CC}

	Syn	nbol					
Parameter	Legacy	JEDEC	Condition	Min	Max	Unit	Notes
Address valid to next address valid	^t RC	^t AVAV	CE# = V _{IL} , OE# = V _{IL}	110	-	ns	
Address valid to output valid	^t ACC	^t AVQV	CE# = V _{IL} , OE# = V _{IL}	_	110	ns	
Address valid to output valid (page)	^t PAGE	^t AVQV1	CE# = V _{IL} , OE# = V _{IL}	_	25	ns	
CE# LOW to output valid	^t CE	^t ELQV	OE# = V _{IL}	_	110	ns	
OE# LOW to output valid	^t OE	^t GLQV	CE# = V _{IL}	_	25	ns	
CE# HIGH to output High-Z	^t HZ	^t EHQZ	OE# = V _{IL}	_	20	ns	1
OE# HIGH to output High-Z	^t DF	^t GHQZ	CE# = V _{IL}	_	15	ns	1
CE# HIGH, OE# HIGH, or address transition to output transition	tOH	^t EHQX, ^t GHQX, ^t AXQX	-	0	-	ns	

Note: 1. Sampled only; not 100% tested.



Figure 18: Random Read AC Timing


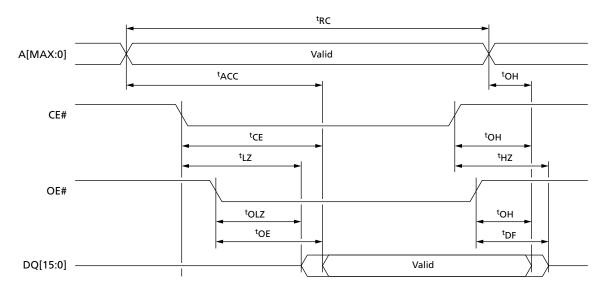


Figure 19: Page Read AC Timing



Note: 1. Page size is 16 words and is addressed by address inputs A[3:0].

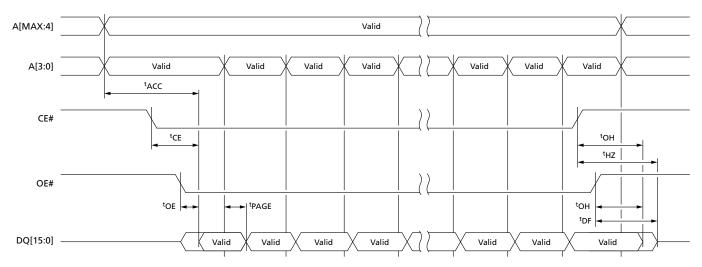

Write AC Characteristics


Table 33: WE#-Controlled Write AC Characteristics

	Syn	nbol					
Parameter	Legacy	JEDEC	Min	Тур	Max	Unit	Notes
WRITE cyle time	^t WC	_	60	-	_	ns	
CE# LOW to WE# LOW	^t CS	^t ELWL	0	-	_	ns	
WE# LOW to WE# HIGH	^t WP	tWLWH	35	-	_	ns	
Input valid to WE# HIGH	^t DS	^t DVWH	30	-	_	ns	1
WE# HIGH to input transition	^t DH	tWHDX	0	-	_	ns	
WE# HIGH to CE# HIGH	^t CH	tWHEH	0	ı	_	ns	
WE# HIGH to WE# LOW	tWPH	tWHWL	20	ı	_	ns	
Address valid to WE# LOW	^t AS	^t AVWL	0	ı	_	ns	
WE# LOW to address transition	^t AH	tWLAX	45	ı	_	ns	
OE# HIGH to WE# LOW	-	^t GHWL	0	ı	_	ns	
WE# HIGH to OE# LOW	^t OEH	tWHGL	0	ı	_	ns	
Program/erase valid to RY/BY# LOW	^t BUSY	tWHRL	_	ı	90	ns	2
WE# HIGH to OE# valid	-	tWHQV	^t AVQV + 30	-	-	ns	
V _{HH} rise or fall time on V _{PP} /WP#	_	^t VHVPP	250	-	_	ns	

- Notes: 1. The user's write timing must comply with this specification. Any violation of this write timing specification may result in permanent damage to the NOR Flash device.
 - 2. Sampled only; not 100% tested.



Figure 20: WE#-Controlled Program AC Timing

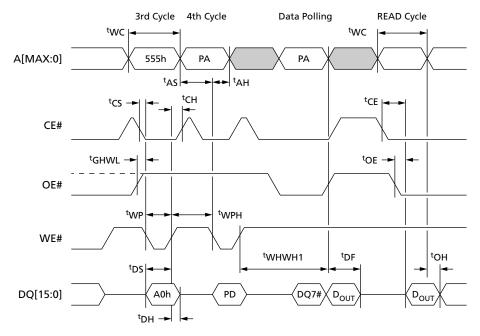

- 1. Only the third and fourth cycles of the PROGRAM command are represented. The PROGRAM command is followed by checking of the status register data polling bit and by a READ operation that outputs the data (D_{OUT}) programmed by the previous PROGRAM command.
- 2. PA is the address of the memory location to be programmed. PD is the data to be programmed.
- 3. DQ7 is the complement of the data bit being programmed to DQ7 (See Data Polling Bit [DQ7]).
- 4. See the following tables for timing details: Read AC Characteristics, WE#-Controlled Write AC Characteristics, and CE#-Controlled Write AC Characteristics.
- 5. For ^tWHWH1 timing details, see the Program/Erase Characteristics table.


Table 34: CE#-Controlled Write AC Characteristics

	Symbol						
Parameter	Legacy	JEDEC	Min	Тур	Max	Unit	Notes
WRITE cycle time	tWC	-	60	-	_	ns	
WE# LOW to CE# LOW	tWS	tWLEL	0	_	_	ns	
CE# LOW to CE# HIGH	^t CP	^t ELEH	35	_	_	ns	
Input valid to CE# HIGH	^t DS	^t DVEH	30	_	_	ns	1
CE# HIGH to input transition	^t DH	^t EHDX	0	_	_	ns	
CE# HIGH to WE# HIGH	tWH	^t EHWH	0	_	_	ns	
CE# HIGH to CE# LOW	^t CPH	^t EHEL	20	_	_	ns	
Address valid to CE# LOW	^t AS	^t AVEL	0	_	_	ns	
CE# LOW to address transition	^t AH	^t ELAX	45	_	_	ns	
OE# HIGH to CE# LOW	_	^t GHEL	0	_	_	ns	
V _{HH} rise or fall time on V _{PP} /WP#	_	^t VHVPP	250	_	_	ns	
Program/erase valid to RY/BY# LOW	^t BUSY	tWHRL	_	_	90	ns	2
WE# HIGH to OE# valid	-	tWHQV	^t AVQV +	_	_	ns	

- Notes: 1. The user's write timing must comply with this specification. Any violation of this write timing specification may result in permanent damage to the NOR Flash device.
 - 2. Sampled only; not 100% tested.




Figure 21: CE#-Controlled Program AC Timing

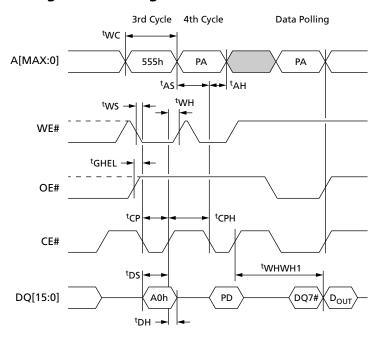

- 1. Only the third and fourth cycles of the PROGRAM command are represented. The PRO-GRAM command is followed by checking of the status register data polling bit.
- 2. PA is the address of the memory location to be programmed. PD is the data to be programmed.
- 3. DQ7 is the complement of the data bit being programmed to DQ7 (See Data Polling Bit [DQ7]).
- 4. See the following tables for timing details: Read AC Characteristics, WE#-Controlled Write AC Characteristics, and CE#-Controlled Write AC Characteristics.
- 5. For ^tWHWH1 timing details, see the Program/Erase Characteristics table.




Figure 22: Chip/Block Erase AC Timing

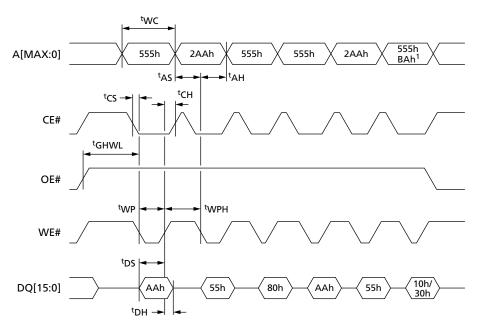

- 1. For a DIE ERASE command, the address is 555h, and the data is 10h; for a BLOCK ERASE command, the address is BAd, and the data is 30h.
- 2. BAd is the block address.
- 3. See the following tables for timing details: Read AC Characteristics, WE#-Controlled Write AC Characteristics, and CE#-Controlled Write AC Characteristics.
- 4. For ^tWHWH1 timing details, see the Program/Erase Characteristics table.

Figure 23: Accelerated Program AC Timing





Data Polling/Toggle AC Characteristics


Table 35: Data Polling/Toggle AC Characteristics

Note 1 applies to entire table

	Syn				
Parameter	Legacy	JEDEC	Min	Max	Unit
Address setup time to CE# or OE# LOW	^t ASO	^t AXGL	15	_	ns
Address hold time from OE# or CE# HIGH	^t AHT	^t GHAX, ^t EHAX	0	-	ns
CE# HIGH time	^t EPH	^t EHEL2	20	_	ns
OE# HIGH time	^t OPH	^t GHGL2	20	_	ns
WE# HIGH to OE# LOW (toggle and data polling)	^t OEH	^t WHGL2	10	_	ns

Note: 1. Sampled only; not 100% tested.


Figure 24: Data Polling AC Timing

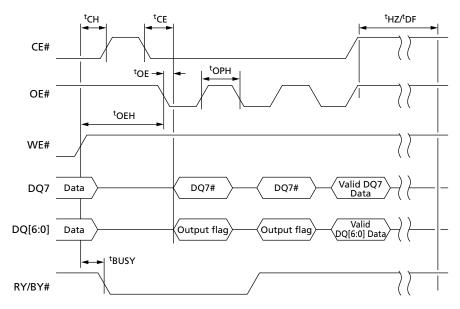

- 1. DQ7 returns a valid data bit when the PROGRAM or ERASE command has completed.
- 2. See the following tables for timing details: Read AC Characteristics and Data Polling/ Toggle AC Characteristics.



Figure 25: Toggle/Alternative Toggle Bit Polling AC Timing

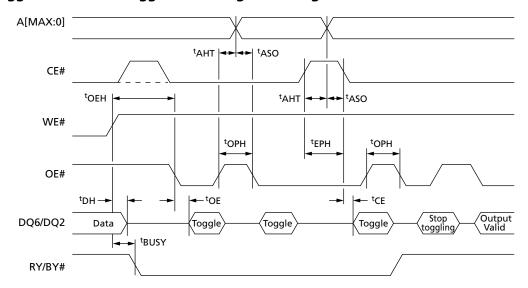

- 1. DQ6 stops toggling when the PROGRAM or ERASE command has completed. DQ2 stops toggling when the DIE ERASE or BLOCK ERASE command has completed.
- 2. See the following tables for timing details: Read AC Characteristics and Data Polling/ Toggle AC Characteristics.



Program/Erase Characteristics

Table 36: Program/Erase Characteristics

Notes 1 and 2 apply to entire table


Buffer								
Size Byte	arameter	Byte	Word	Min	Тур	Max	Unit	Notes
	rase							
	lock erase (128KB)	-	-	_	200	1100	ms	_
	ie erase	-	-	-	208	_	S	_
	rase suspend latency time	-	-	-	_	20	μs	_
	rase or erase resume to suspend	-	-	-	100	_	μs	3, 4
	ccelerated die erase	-	-	-	190	_	S	_
	rogram							
	ngle-word program	_	-	_	25	200	μs	_
	uffer Program							
32 –	/ord write to buffer program (^t WHWH1)	_	32	_	92	460	μs	_
64 –		_	64	-	117	600	μs	_
128 –		_	128	_	171	900	μs	_
256 –		_	256	-	285	1500	μs	_
512 –		_	512	_	512	2000	μs	_
32 –	Effective write to buffer program per word (tWHWH1)	_	1	_	2.88	14.38	μs	_
64 –		_	1	_	1.83	9.38	μs	_
128 –		_	1	-	1.34	7.03	μs	_
256 –		_	1	-	1.11	5.86	μs	_
512 –		_	1	_	1.0	3.90	μs	_
	ccelerated full buffer program time	_	_	_	410	_	μs	_
	rogram suspend latency time	_	-	-	-	15	μs	_
	onvolatile protection							
	et nonvolatile protection bit time	_	-	_	25	320	μs	_
	lear nonvolatile protection bit time	-	_	_	80	1100	ms	_
urance	lank Check, CRC, and Program/Erase Endurar							
	lank check: main block	-	_	_	3.2	_	ms	_
	RC check time: main block	_	_	_	5	_	ms	_
	RC check time: full die (1Gb)	_	_	_	10	_	S	_
	ROGRAM/ERASE cycles (per block)	_	_	100,000	_	_	cycles	_
	RC check time: main block RC check time: full die (1Gb)	_	-	-	5 10	-	ms s	


- Notes: 1. Typical values measured at room temperature and nominal voltages ($V_{CC} = 3V$).
 - 2. Typical and maximum values are sampled, but not 100% tested.
 - 3. Erase to suspend is the time between an initial BLOCK ERASE or ERASE RESUME command and a subsequent ERASE SUSPEND command.
 - 4. This typical value allows an ERASE operation to progress to completion--it is important to note that the algorithm might never finish if the ERASE operation is always suspended less than this specification.



Package Dimensions

Figure 26: 64-Ball LBGA - 11mm x 13mm (Package Code: PC)



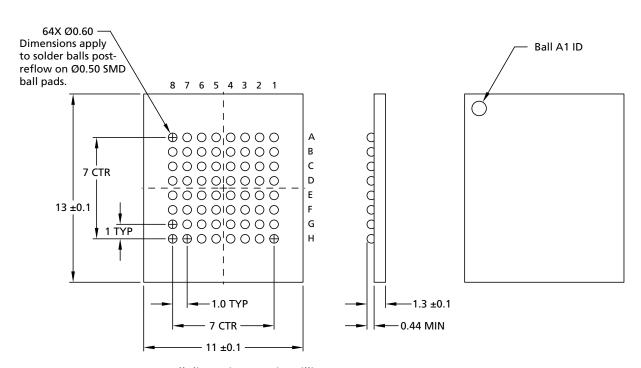

Note: 1. All dimensions are in millimeters.



2Gb: x16, 3V, MT28FW, Automotive Parallel NOR Revision History

Revision History

Rev. D - 9/17

• Updated BGA signal assignments to allow usage of unused balls

Rev. C - 11/16

• Updated DC Voltage Characteristics table in DC Characteristics

Rev. B - 10/16

- Updated legal status to Production
- Updated Input/Output Capacitance table in Absolute Ratings and Operating Conditions section

Rev. A - 05/16

· Initial release

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-4000 www.micron.com/products/support Sales inquiries: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners.

This data sheet contains minimum and maximum limits specified over the power supply and temperature range set forth herein. Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.