



MOTOROLA
intelligence everywhere™

digital dna™

56F8300 *Hybrid Controller*

56F83xx
SCI/CAN
Bootloader
User
Manual

MC56F83xxBLUM/D
Rev. 1, 09/15/2003

MOTOROLA.COM/SEMICONDUCTORS

Contents

About This Document

Audience	vii
Organization	vii
Suggested Reading	vii
Conventions	viii
Definitions, Acronyms, and Abbreviations	ix
References.	ix

Chapter 1 Bootloader

1.1	Bootloaders	1-1
1.1.1	Concept	1-1
1.1.2	Bootloader Version and Checksum Information	1-2
1.1.3	BootLoader Clock Generation	1-2
1.1.4	Start-up Sequence	1-3
1.1.5	Device Peripheral Usage.	1-4
1.1.6	Files.	1-4
1.1.7	Configuration of the Bootloaders	1-5
1.1.8	Error Processing	1-8
1.1.9	Requirements for a User Application	1-8
1.1.10	S-Record Generation.	1-9
1.2	SCI Bootloader	1-9
1.2.1	Serial Terminal Programs	1-10
1.2.2	56F83xxEVM Jumper Settings.	1-11
1.2.3	Loading an Application with the SCI Bootloader	1-12
1.3	CAN Bootloader	1-13
1.3.1	CAN Bootloader Protocol.	1-13
1.3.2	CAN Bus Installation	1-15
1.3.3	PC CAN Board	1-16
1.3.4	Loading Application with CAN Bootloader.	1-18

Chapter 2 License

2.1	Limited Use License Agreement	2-1
-----	---	-----

Appendix A
SCI Bootloader Test Applications

A.1 LoadPDFlash Test. A-1
A.1.1 Test Procedure A-1
A.2 SCI Bootloader Performance A-2

Appendix B
CAN Bootloader Test Applications

B.1 LoadPDFlash Test. B-1
B.1.1 Test Procedure B-1
B.2 CAN Bootloader Performance B-2

List of Tables

Table 1-1 Bootloader Configuration via User’s Application 1-5

Table 1-2 Boot Start Delay Value..... 1-6

Table 1-3 Bootloader Configuration via Bootloader appconfig.h..... 1-7

Table 1-4 Error Codes for the Bootloader Applications..... 1-8

Table 1-5 Bootloader CAN Protocol Frames Format..... 1-14

Table A-1 SCI Bootloader Performance A-2

Table B-1 CAN Bootloader Performance B-2

List of Figures

Figure 1-1	Programming Flash on a 56F83xx Device	1-1
Figure 1-2	56F83xx Boot Sequence with Bootloader	1-3
Figure 1-3	S-Record Settings in User Application's Project Settings	1-9
Figure 1-4	Loading a User's Application via SCI	1-9
Figure 1-5	Loading User Code/Data via CAN Interface	1-13
Figure 1-6	The CAN Bootloader Message Flow and Protocol	1-14
Figure 1-7	Typical Can Bus	1-15
Figure 1-8	CAN Termination Selected Jumper for 56F8346EVM	1-15
Figure 1-9	Connections Between the 56F83xxEVM (Jumper J5/J12) and PC Host	1-16
Figure 1-10	Location of NI-CAN Software	1-17
Figure 1-11	NI-CAN Software Configuration	1-18

About This Document

This manual describes the 56F83xx SCI/CAN Bootloaders application.

Audience

This manual targets software developers utilizing the 56F83xx Bootloaders applications.

Organization

This User's Manual consists of the following sections:

- **Chapter 1, Bootloader** -- describes the serial and CAN Bootloaders applications provided with the FlexCAN driver
- **Chapter 2, License** -- provides the license required to use this product
- **Appendix A, SCI Bootloader Test Applications** -- describes the tests and performance of the SCI Bootloader
- **Appendix B, CAN Bootloader Test Applications** -- describes the tests and performance of the CAN Bootloader

Suggested Reading

We recommend that you have a copy of the following references:

- *DSP56800E Reference Manual*, Motorola, DSP56800ERM/D
- *56F8300 Peripheral User Manual*, Motorola, MC56F8300UM/D
- *Inside CodeWarrior: Core Tools*, Metrowerks Corp.
- *NI-CAN User Manual*, National Instruments

Conventions

This document uses the following notational conventions:

Typeface, Symbol or Term	Meaning	Examples
Courier Monospaced Type	Code examples	<code>//Process command for line flash</code>
<i>Italic</i>	Directory names, project names, calls, functions, statements, procedures, routines, arguments, file names, applications, variables, directives, code snippets in text	...and contains these core directories: <i>applications</i> contains applications software... ...CodeWarrior project, <i>3des.mcp</i> is... ...the <i>pConfig</i> argument... ...defined in the C header file, <i>aec.h</i> ...
Bold	Reference sources, paths, emphasis	...refer to the Targeting DSP56F80x Platform manual... ...see: C:\Program Files\Motorola\help\tutorials
Blue Text	Linkable on-line	...refer to Chapter 7 , License...
Number	Any number is consid- ered a positive value, unless preceded by a minus symbol to signify a negative value	3V -10 DES ⁻¹
ALL CAPITAL LETTERS	# defines/ defined constants	# define INCLUDE_STACK_CHECK
Brackets [...]	Function keys	...by pressing function key [F7]
Quotation marks, "..."	Returned messages	...the message, "Test Passed" is displayed.... ...if unsuccessful for any reason, it will return "NULL"...

Definitions, Acronyms, and Abbreviations

The following list defines the acronyms and abbreviations used in this document. As this template develops, this list will be generated from the document. As we develop more group resources, these acronyms will be easily defined from a common acronym dictionary. Please note that while the acronyms are in solid caps, terms in the definition should be initial capped ONLY IF they are trademarked names or proper nouns.

CAN	Controller Area Network
CAN ID	CAN Identifier
IDE	Identifier Extension
FlexCAN	Motorola Flexible Controller Area Network
RAM	Random Access (read/write) Memory

References

The following sources were used to produce this book:

1. *DSP56800E Reference Manual*, Motorola, DSP56800ERM/D
2. *CAN Specifications*, Version 2.0, 1991, Robert Bosch GmbH
3. *NI-CAN User Manual*, National Instruments

Chapter 1

Bootloader

1.1 Bootloaders

The Bootloaders for the 56F83xx devices were developed to load and run a user's application by parsing an S-Record file, then copying the parsed S-Record file into the appropriate Program and Data memory.

Figure 1-1 illustrates the S-Record flow.

The Bootloader supports two communication methods:

- via SCI peripheral
- via CAN bus peripheral

1.1.1 Concept

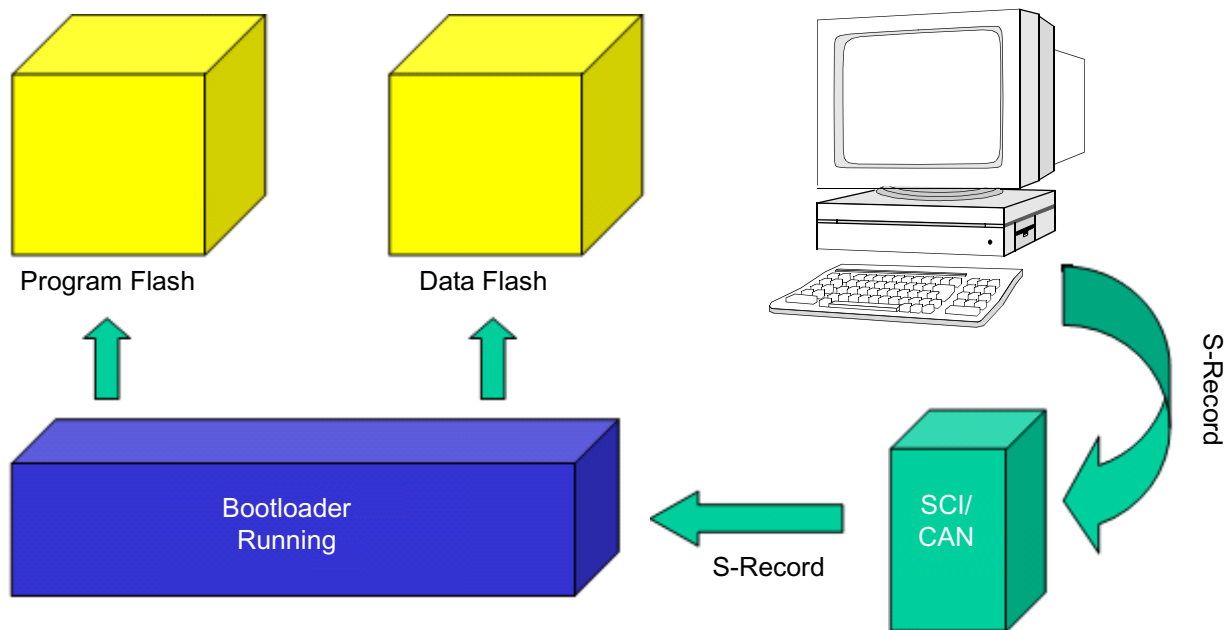


Figure 1-1. Programming Flash on a 56F83xx Device

Bootloader

The Bootloaders are located in a dedicated Program Memory region of the 56F83xx device called Boot Flash. The Bootloaders application first performs a mass erase of the entire program Flash. The Bootloaders application then reads the S-Record file of the user's application (generated by CodeWarrior, for example) via an SCI or CAN interface, parses the S-Record lines and stores code and data in Program and Data Flash memory.

When the processing of the S-Record file is finished, the Bootloaders launch the loaded application. If an error occurs during the loading of the S-Record file, the Bootloader outputs an error message with an error number via the serial connection and waits for a processor reset.

1.1.2 Bootloader Version and Checksum Information


The version of the Bootloader software is located at 0x20004 in Program memory. Checksum information for the Bootloader software is found at 0x20005 and 0x20006 in Program memory. See [Figure 1-2](#).

1.1.3 BootLoader Clock Generation

The 56F8346 Bootloaders use an off chip crystal to generate the clock for the processor. The 56F8323 Bootloader can use either its internal relaxation oscillator or an off-chip crystal for processor clock generation. In all cases, the Bootloader determines how the clock is generated and makes the necessary adjustments.

1.1.4 Start-up Sequence

Figure 1-2 illustrates the Start-up Sequence with the Bootloaders.

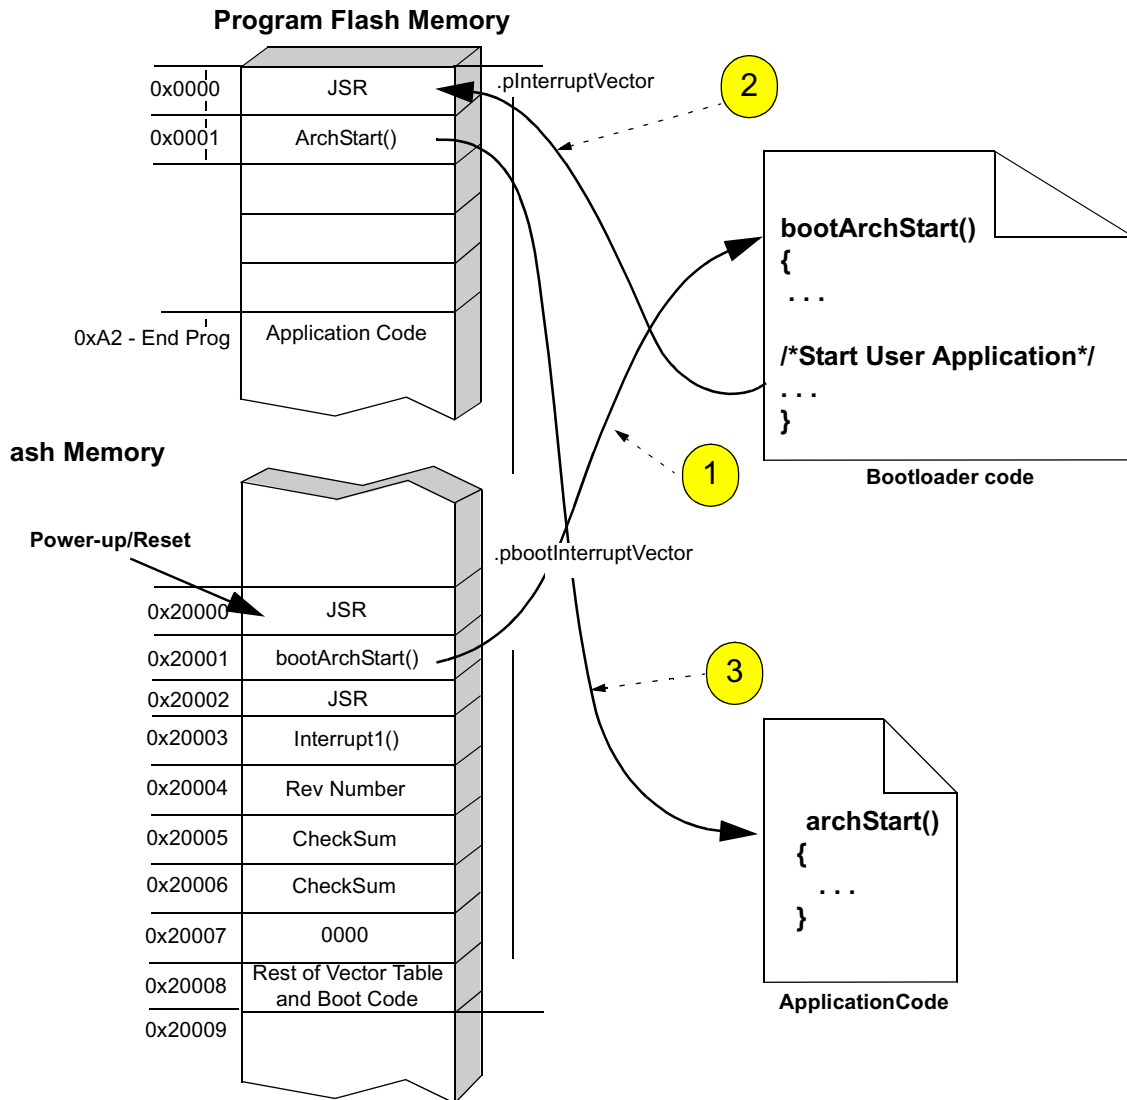

- 1. Power-up/Reset --** The hardware reset vector identifies the address that the processor accesses when it recognizes a power-up or power reset. When the 56F83xx Bootloader is present, the **Bootloader Code** is executed first.
- 2. Bootloading Process --** When the 56F83xx Bootloader completes its execution, it transfers control to the **Application Code** by performing a JMP instruction to an address specified in the corresponding S-record file (default 0x0000).
- 3. Jump to the User Application Code --** The Application Code entry point is called by the JMP instruction from the 0x0000 address.

Figure 1-2. 56F83xx Boot Sequence with Bootloader

1.1.5 Device Peripheral Usage

The Bootloaders are used with the 56F83xx device configured in MODE 0 (MA = 0).

The Bootloaders use only internal Data RAM from 0x0000 to 0x0FFF and internal Program RAM for data buffering.

The Bootloaders initialize only the following 56F83xx device peripherals:

- SCI 0 for the 56F8346
- SCI 1 for the 56F8323
- CAN
- Timer A
- PLL initialization

Each peripheral is set to its default state when loading is complete.

1.1.6 Files

The Bootloader applications for the 56F8346 and 56F8323 targets are found in the following directory locations:

- CAN version of Bootloader:
`..\bootloader\CAN\`
- SCI version of Bootloader:
`..\bootloader\SCI\`

Each version of the Bootloaders' software includes the following files:

- Project file:
`bootloader.mcp`
- Main program:
`bootloader.c`
- Header file with common parameters:
`bootloader.h`
- Support file, `appconfig.c`:
`..\appconfig\appconfig.c`
- Support file, `appconfig.h`:
`..\appconfig\appconfig.h`
- Linker Command files:
`..\appconfig\56F8346_boot_flash_linker.cmd`
`..\appconfig\56F8323_boot_flash_linker.cmd`

1.1.6.1 Building and Loading the Bootloader

- To build and link a Bootloader application, open the `bootloader.mcp` project file for either the SCI or CAN Bootloader in the CodeWarrior IDE. Select either the **56F8346** or **56F8323** target and execute the `Project/Make` command
- To build and download this application, open the `bootloader.mcp` project file for either the SCI or CAN Bootloader in the CodeWarrior IDE. Select either the **56F8346** or **56F8323** target and execute the `Project/Debug` command

1.1.7 Configuration of the Bootloaders

The Bootloaders can be configured in two ways:

- **User's application** - The user's application can modify certain Data Flash Addresses at **run-time** to modify the configuration of the Bootloaders. These are described in more detail in [Section 1.1.7.1](#).
- **Modifying the Bootloader application's *appconfig.h* file** - The *appconfig.h* file for the Bootloaders' project can be modified to change the Bootloader's configuration before burning the Bootloader into the 56F83xx device's Flash. This is described in more detail in [Section 1.1.7.2](#).

1.1.7.1 User's Application Bootloader Configuration

The Bootloaders allow a user's application to configure certain parameters within the Bootloader during the **run-time** of the user's application. They are described in [Table 1-1](#).

Note: The last 16 cells in the Data Flash memory are **reserved** for Bootloader configuration.

Table 1-1. Bootloader Configuration via User's Application

Parameter	Data Flash Address	Default Setting	Description
BOOT_START_DELAY	0x1FFD (low byte)	#define BOOT_START_DELAY 30	This macro defines the Bootloader inactivity interval in seconds, after which time the Bootloader passes control to the user's application. See Table 1-2 .
BOOT_VERSION_PROMPT	0x1FFD (high byte)	#define BOOT_VERSION_PROMPT 0xFF	This macro defines whether the Bootloader displays a version prompt after reset. To turn off the version prompt, #define BOOT_VERSION_PROMPT to 0x00.

Note: The setting of Bootloader configuration parameters by an application is optional, except **BOOT_START_DELAY**. This parameter **must** be defined by the user's application.

Note: Data Flash locations 0x1FFE and 0x1FFF are used by the Bootloader to store the starting address of the user application.

Bootloader

The following example illustrates how a user configures his application to modify the delay start time to 20 seconds from the default of 30 seconds. Upon a power-on reset, the Bootloader application reads the **BOOT_START_DELAY** and **BOOT_VERSION_PROMPT** values and behaves according to [Table 1-2](#).

The user's application *linker.cmd* file must contain the following:

```
...
.xBootCfg          (R)   : ORIGIN = 0x1FF2,  LENGTH = 0x0002
...
FORCE_ACTIVE {FCfg_StartDelay}
...
.ApplicationConfiguration :
{
    * (appconst.data)
} > .xBootCfg
...
```

The user's application code must contain the following:

```
#define BOOT_START_DELAY 20
#define BOOT_VERSION_PROMPT 0xFF

#pragma define_section bootcfg_section "appconst.data" R

#pragma section bootcfg_section begin
const unsigned short Cfg_StartDelay = (BOOT_VERSION_PROMPT << 8) |
                                       BOOT_START_DELAY;
#pragma section bootcfg_section end
```

Note: A user's application could easily incorporate a function that could change the current delay time by writing to 0x1FF2.

Table 1-2. Boot Start Delay Value

BOOT_START_DELAY	Result
0	Jumps immediately to the application's Start Address
1-254	Waits a specified number of seconds before the S-Record begins to download. If a message is not received before the delay time has expired, the Bootloader jumps to the application's Start Address.
255	Waits forever before the S-Record begins downloading

1.1.7.2 Bootloader *Appconfig.h* Configuration

The Bootloaders have certain parameters that can be set and configured from their default values by modifying the Bootloader application's *appconfig.h* file. These parameters are described in [Table 1-3](#).

Table 1-3. Bootloader Configuration via Bootloader *appconfig.h*

Parameter	Default Setting	Description	Bootloader
BOOT_SCI_BAUD_RATE	<code>#define BOOT_SCI_BAUD_RATE 115200 bps</code>	Sets the SCI baud rate NOTE: Maximum rate is 115200 bps	SCI
BOOT_INDICATION_SYMBOL	<code>#define BOOT_INDICATION_SYMBOL '!</code>	Enables/disables the progress indicator. To disable progression indicator, set: <code>#undef BOOT_INDICATION_SYMBOL</code>	SCI/CAN
BOOT_CAN_ID_CODE	<code>#define BOOT_CAN_ID_CODE 0x01L</code>	This macro defines the CAN ID to transmit the S-Records packet from the PC host application to the Bootloader through the CAN bus. It corresponds to the “-r” option for the PC host loader. See Note	CAN
BOOT_CAN_ID_REPLY	<code>#define BOOT_CAN_ID_REPLY 0x02L</code>	This macro defines the CAN ID the Bootloader uses to reply to the PC host application. It corresponds to the “-a” option for the PC host loader. See Note	CAN

Note: The CAN Bootloader uses extended IDs associated with the CAN 2.0B spec. This is explained in detail in the **NI-CAN User Manual**.

1.1.8 Error Processing

The following table describes possible error messages received when utilizing the Bootloaders

Table 1-4. Error Codes for the Bootloader Applications

Error Code	Error Title	Possible Reasons	What to Do
02	Invalid Character	The character received is not "S" or any hexadecimal digit	<ul style="list-style-type: none"> •Verify that S-Record file does not contain any inaccurate characters •Check connections and send mode in terminal program
03	Invalid S-Record Format	<ul style="list-style-type: none"> •Invalid record type; permitted types are 0,3,7 •The S-Record length is less than the address plus checksum length 	<ul style="list-style-type: none"> •Verify S-Record file
04	Wrong S-Record Checksum	The checksum calculated around the S-Record received did not match the one received	<ul style="list-style-type: none"> •Check the S-Record file •Check connections and send mode in terminal program
06	Flash Programming Error	After programming a word into Flash, the programmed word read back is not equal to the expected value	<ul style="list-style-type: none"> •The Bootloader tries to program Flash only once and performs a read back / verification of the value
0C	CAN Error	CAN communication error	<ul style="list-style-type: none"> •Check the CAN connections and try to repeat download
0D	Low Voltage Interrupt	Low Voltage Interrupt occurred	<ul style="list-style-type: none"> •Check power and try to repeat download

1.1.9 Requirements for a User Application

The following restrictions apply if an application is loaded via the Bootloader:

- An application cannot place code into the **Boot Flash** memory area of the 56F83xx device
- Initialized variables from an application **cannot** be placed into internal Data RAM or into internal Program RAM while loading. Therefore, the user's application is responsible for initializing data after loading is complete.
- The user's application **must** fit within Program and Data Flash of the 56F83xx device

1.1.10 S-Record Generation

Figure 1-3 illustrates how a user's application can set up CodeWarrior to generate an S-Record needed by the Bootloaders to program the user's application into the 56F83xx device's Flash.

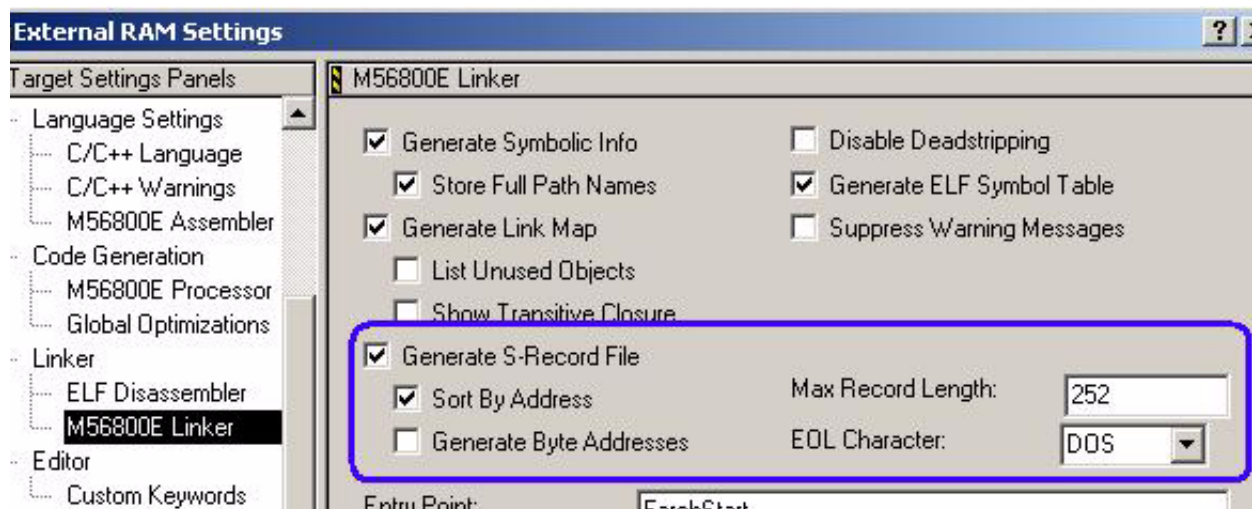


Figure 1-3. S-Record Settings in User Application's Project Settings

Note: "Max Record Length" and "EOL Character" are set to the default values shown in Figure 1-3. "Max Record Length" can be modified to up to 252. "EOL Character" can be changed to "Mac" or "UNIX" with no effect.

1.2 SCI Bootloader

The SCI Bootloader supports loading a user application presented as S-record file via SCI by using a standard serial terminal program on a host PC (see Figure 1-4).

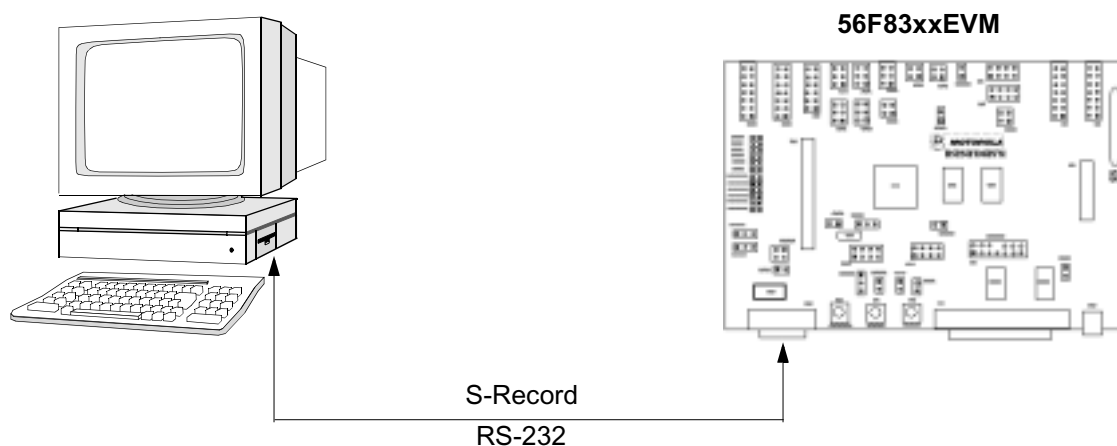


Figure 1-4. Loading a User's Application via SCI

1.2.1 Serial Terminal Programs

Most serial terminal programs can be used to download an S-Record file from a host to an 56F83xx device via the SCI Bootloader.

A PC Serial Host Loader utility has been developed for both the SCI and CAN Bootloaders. This utility is optimized to speed up the download time of the user's application S-Record. SCI options and use are described in [Section 1.2.1.2](#).

1.2.1.1 Host Serial Terminal Program Configuration

A host serial terminal program must be configured as follows:

Baud rate	115200 bps
8N1	8 data bits, no parity, 1 stop bit character format
Flow Control Protocol	Xon/Xoff

1.2.1.2 PC Host Loader Utility - SCI

The utility can be found at this location:

x86\win32\applications\srec\srecLoad.exe

SCI options for the command-line PC Host Loader utility include:

-i: <Interface>	The COM port used for download - (COM1, COM2)
-s: <S-Record file>	The name of the S-Record file to download
-l: <logfile>	The name of the log file to log utility operations
-b: <baudrate>	The baud rate value for SCI (RS-232) Default = 115200 bps

The following example shows how to use the utility with the SCI Bootloader:

```
srecLoad -i:COM1 -s:56F8346_flash.elf.S -b:115200 -l:log.txt
```

1.2.1.3 PC Host Loader Utility - CAN

The utility can be found at this location:

`x86\win32\applications\srec\srecLoad.exe`

SCI options for the command-line PC Host Loader utility include:

-i: <Interface>	The CAN device name used for download (CAN0, CAN1)
-s: <S-Record file>	The name of the S-Record file to download
-l: <logfile>	The name of the log file to log utility operations
-b: <baudrate>	The baud rate value defines SCI or CAN speed to communicate with the Bootloader in bits per second (bps) Default = 500000 bps
-r: <CAN ID>	The host request CAN ID to transmit S-record Default = 20000001
-a: <CAN ID>	Bootloader reply (acknowledgement) CAN ID Default = 20000002

The following example shows how to use the utility with the CAN Bootloader:

```
srecLoad -i:CAN1 -s:56F8346_flash.elf.S -b:500000 -r:20000001 -a:20000002
```

1.2.2 56F83xxEVM Jumper Settings

1.2.2.1 56F8346EVM Jumper Settings

To load the Bootloader into the 56F8346EVM device, the following jumper settings are needed:

- **Set Jumper JG3** - “Int BOOT”, (EXTBOOT pin on chip)
- **Do not connect Jumper JG7** - “RS-232 Disable”
- **Do not connect Jumper JG9** - “CC Disable”

To start a previously loaded Bootloader on the 56F8346EVM board while the parallel cable is connected to the EVM board, the following jumper settings are needed:

- **Set Jumper JG3** - “Int BOOT”, (EXTBOOT pin on chip)
- **Do not connect Jumper JG7** - “RS-232 Disable”
- **Do not connect Jumper JG9** - “CC Disable”

To start a previously loaded Bootloader on the 56F8346EVM board while the parallel cable is not connected to the EVM board, use these jumper settings:

- **Set Jumper JG3** - “Int BOOT”, (EXTBOOT pin on chip)
- **Do not connect Jumper JG7** - “RS-232 Disable”
- **Set Jumper JG9** - “CC Disable”

Note: All other 56F8346EVM jumper settings should be set to default values.

1.2.2.2 56F8323EVM Jumper Settings

To load the Bootloader into the 56F8323EVM device, the following jumper settings are needed:

- **Do not connect Jumper JG4** - “RS-232 Disable”
- **Do not connect Jumper JG3** - “CC Disable”

To start a previously loaded Bootloader on the 56F8323EVM board while the parallel cable is connected to the EVM board, the following jumper settings are needed:

- **Do not connect Jumper JG4** - “RS-232 Disable”
- **Do not connect Jumper JG3** - “CC Disable”

To start a previously loaded Bootloader on the 56F8323EVM board while the parallel cable is not connected to the EVM board, use these jumper settings:

- **Do not connect Jumper JG4** - “RS-232 Disable”
- **Set Jumper JG3** - “CC Disable”

All other 56F83xxEVM jumper settings should be set to default values.

1.2.3 Loading an Application with the SCI Bootloader

- Set jumpers as described in [Section 1.2.2](#)
- Connect a parallel cable from the Host to the 56F83xxEVM (P1)
- Connect a serial cable from the Host to the 56F83xxEVM (P2)
- Apply power to the 56F83xxEVM (P3)
- Build and load the SCI Bootloader into Flash as described in [Section 1.1.6.1](#)
- Press the RESET button (S1) on the 56F83xxEVM
- Use the PC Host Loader utility as described in [Section 1.2.1.2](#)

If loading is successful, something similar to the following should be displayed in the command window:

```
Loading in progress .....  
Loaded 0x0000266C bytes.  
Data in RAM or BootFlash were ignored!  
Application started from address 0x00000136  
Loading time 2093 ms
```

All data from the S-Record file that addresses a restricted area will be ignored. In this case, the Bootloader displays the following message:

```
Data in RAM or BootFlash were ignored!
```

The message “Data in RAM or BootFlash were ignored!” is displayed because when the user’s application generates and downloads an S-record file, it includes unneeded data for the RAM and Boot Flash; this data will be ignored.

If any error is detected while loading the S-Record file, the Bootloader displays an error message; see [Table 1-4](#) for a detailed list of error messages. For example, if an S-record file contains a character that is not permitted for S-Records, the following message is displayed:

```
“Error # 02”
```

After an error message is displayed, the Bootloader waits for a processor reset.

1.3 CAN Bootloader

The CAN Bootloader allows a user to load his application via an S-Record and CAN interface; see [Figure 1-5](#).

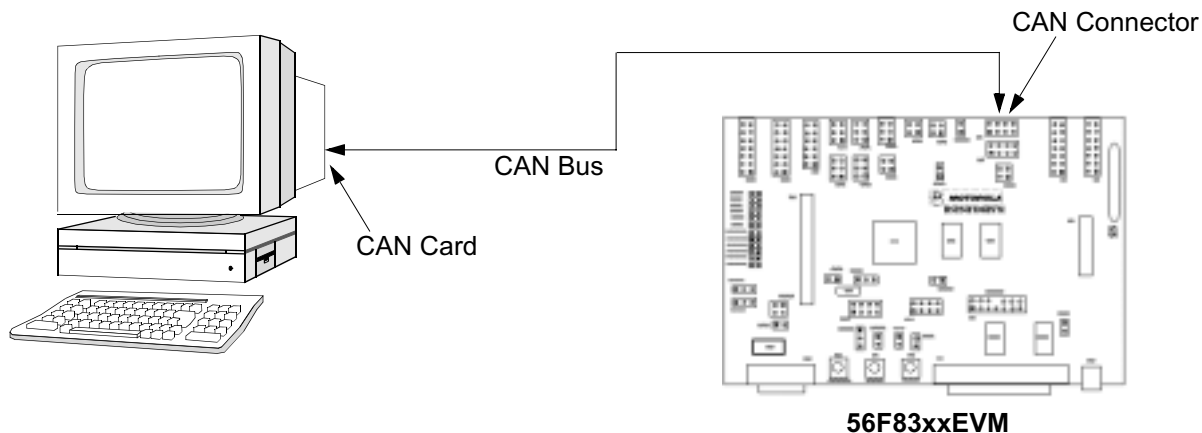


Figure 1-5. Loading User Code/Data via CAN Interface

1.3.1 CAN Bootloader Protocol

The CAN Bootloader supports the loading of a user's application via the CAN bus. A PC Host Loader utility sends an S-Record image file through a CAN bus in accordance with the CAN Bootloader protocol.

The entire S-Record image file may contain several S-Records. Each S-Record is transmitted according to the protocol presented in [Table 1-5](#) and [Figure 1-6](#).

The CAN Bootloader protocol is based on two frames:

- **S-Record Segment frames** contain at least 8 bytes of the loaded S-Record
- **Acknowledgement frames** contain the target S-Record counter and the error field

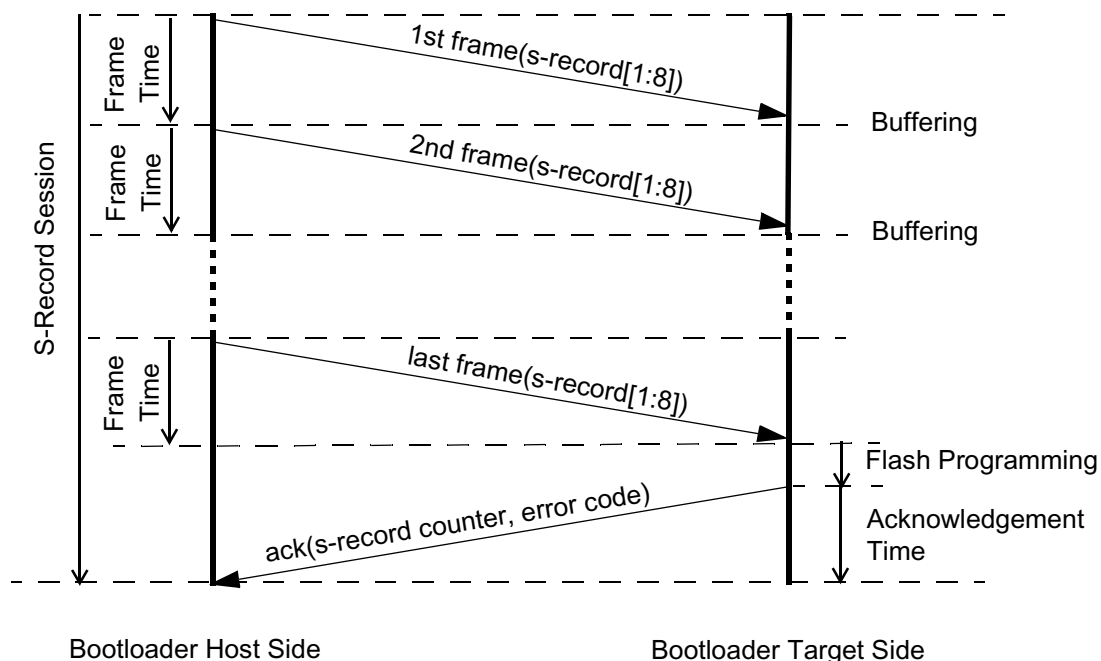


Figure 1-6. The CAN Bootloader Message Flow and Protocol

Table 1-5. Bootloader CAN Protocol Frames Format

CAN Frame	S-Record Segment	Last S-Record Segment	Data Reply
CAN ID	CAN_ID_CODE	CAN_ID_CODE	CAN_ID_REPLY
Length	8	1:8	6
Data 0	S-Record	S-Record	S-Record Counter ¹
Data 1			
Data 2			
Data 3			
Data 4			Error Code
Data 5			
Data 6			
Data 7			

1. The Bootloader version is located in the acknowledgement frame in response to the first S-Record line; the application's Start Address is located in the acknowledgement frame in response to the last S-Record line.

1.3.2 CAN Bus Installation

The simplest CAN bus is two wires terminated by 124 ohm resistors, as shown in [Figure 1-7](#). The 56F83xxEVM board contains a CAN terminator resistor that can be enabled/disabled via a jumper; see [Figure 1-8](#).

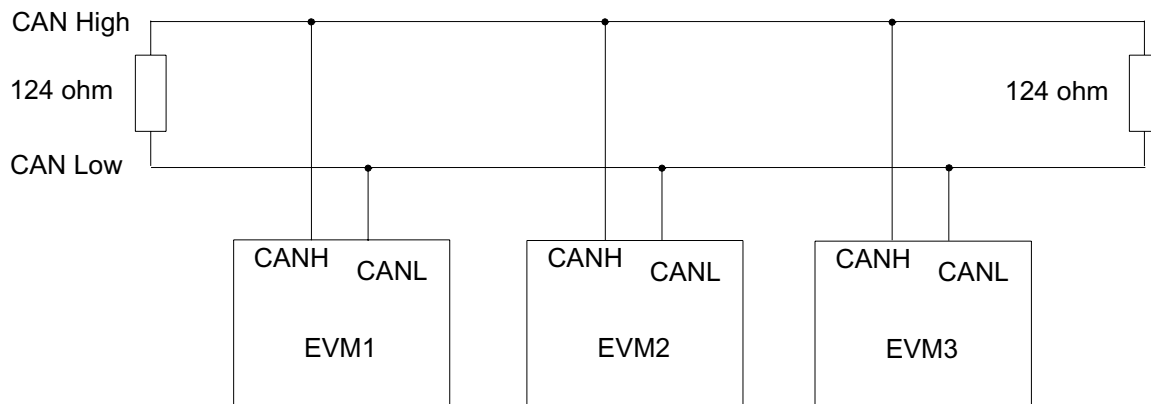


Figure 1-7. Typical Can Bus

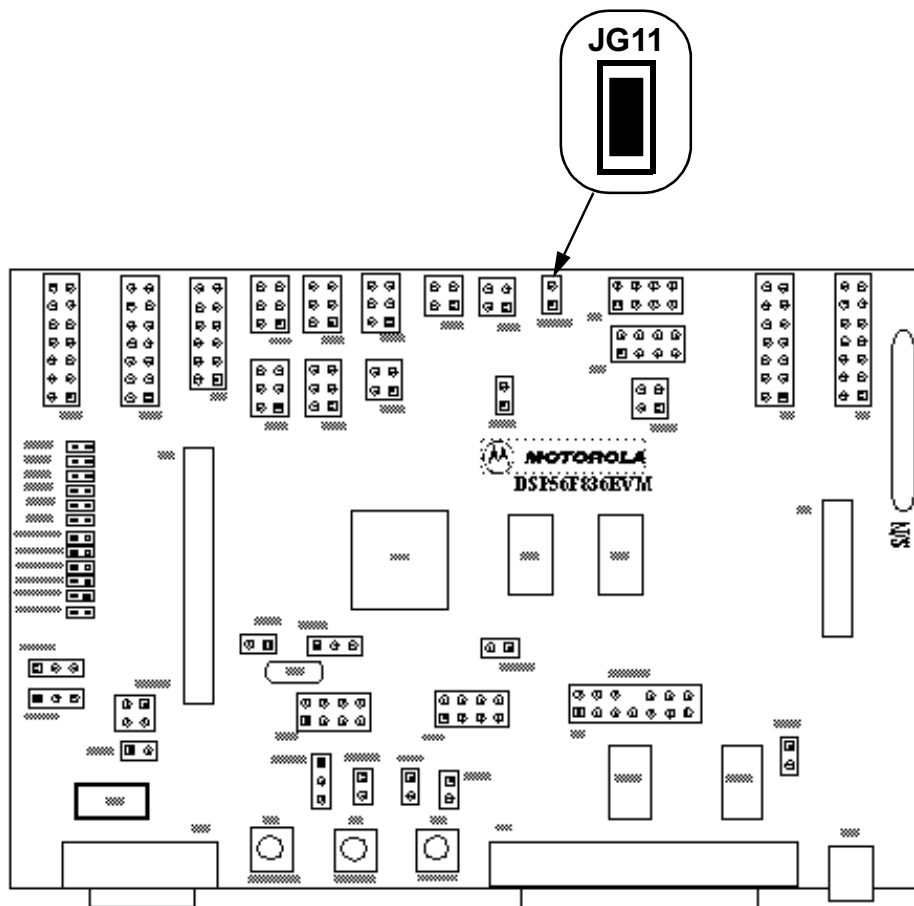


Figure 1-8. CAN Termination Selected Jumper for 56F8346EVM

Bootloader

To enable the CAN termination, place a jumper on **JG11** for the 56F8346EVM and **JG10** for the 56F8323EVM. Removing the jumper (NC) disables the CAN termination.

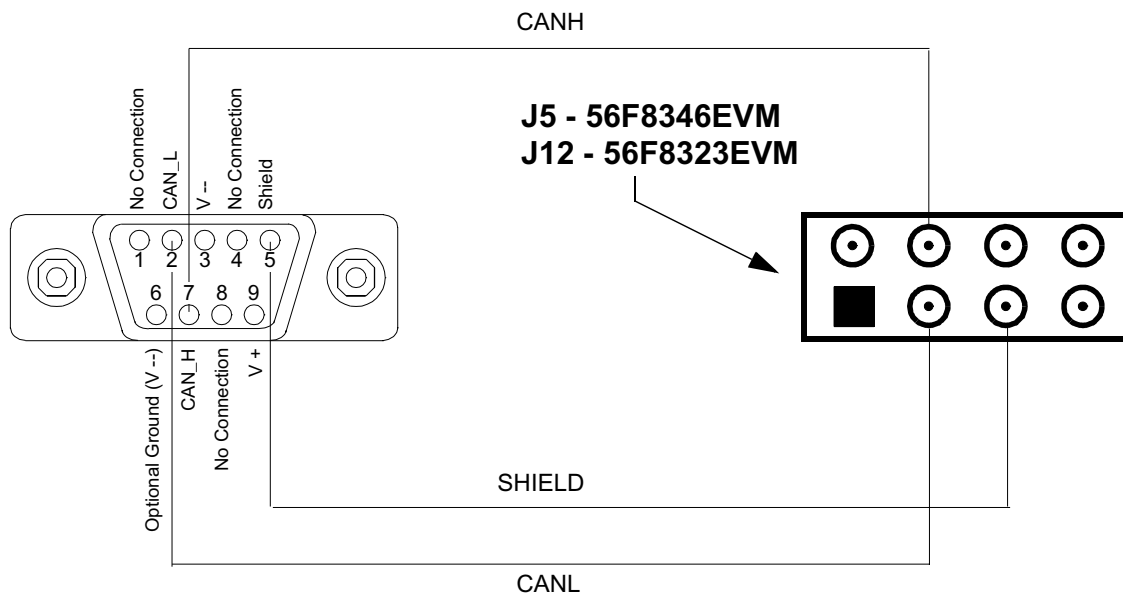


Figure 1-9. Connections Between the 56F83xxEVM (Jumper J5/J12) and PC Host

- Connect Pin 3, CANL, on the 56F83xxEVM to CANL, Pin 2, on the PC CAN card
- Connect Pin 4, CANH, on the 56F83xxEVM to CANH, Pin 7, on the PC CAN card
- Connect Pin 5, GND, on the 56F83xxEVM to Shield, Pin 5, on the PC CAN card

1.3.3 PC CAN Board

The CAN PC Host application uses the National Instruments PCI-CAN/2 board. The software drivers shipped with the board are labeled as: “National Instruments NI-CAN Software for Windows 2000/NT/XP/Me/9x and LabVIEW Real-Time (RT) Version 1.6”.

1.3.3.1 Location of NI-CAN Configuration Software

Figure 1-10 illustrates the location of the NI-CAN software.

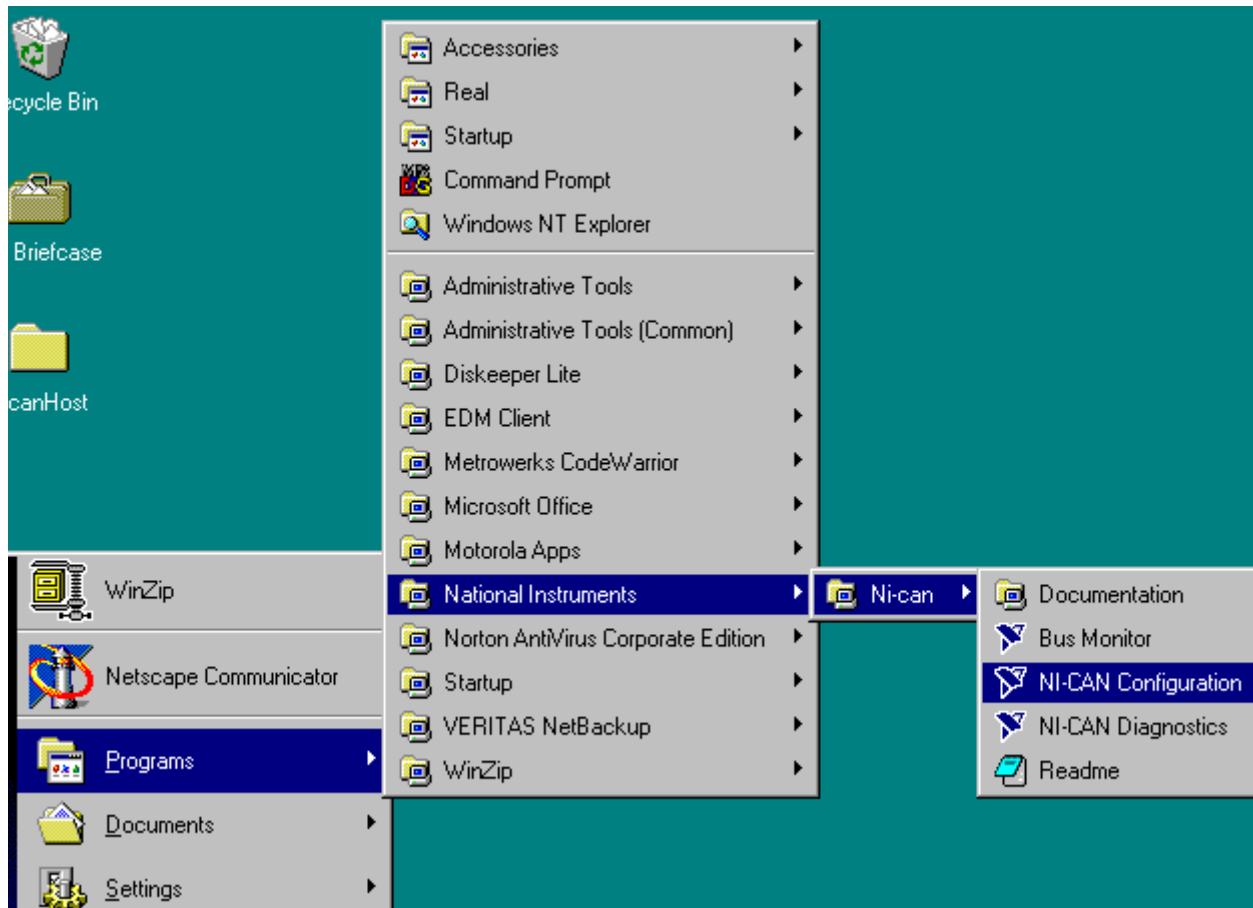


Figure 1-10. Location of NI-CAN Software

1.3.3.2 NI-CAN Software Configuration

Figure 1-11 illustrates what a user would see after the NI-CAN driver software has been successfully installed. Please refer to National Instruments' NI-CAN Software documentation for more details on configuring the driver software.

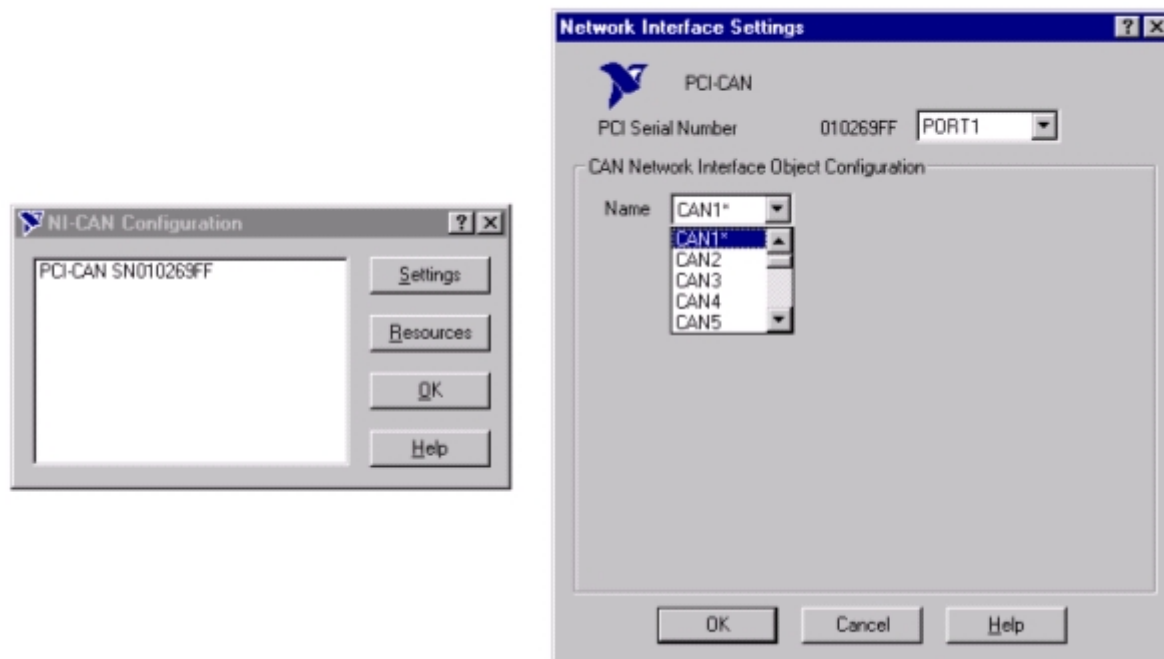


Figure 1-11. NI-CAN Software Configuration

1.3.4 Loading Application with CAN Bootloader

- Configure NiCAN software as described in [Section 1.3.3](#)
- Set jumpers as described in [Section 1.2.2](#)
- Connect a parallel cable from the Host to the 56F83xxEVM (P1)
- Connect the CAN bus as shown in [Figure 1-9](#)
- Apply power to the 56F83xxEVM (P3)
- Build and load the CAN Bootloader into Flash as described in [Section 1.1.6.1](#)
- Push the RESET button (S1) on the 56F83xxEVM board
- Use the PC Host Loader utility as described in [Section 1.2.1.3](#)

If loading is successful, something similar to the following should be displayed in the command window:

```

Loading in progress .....
Loaded 0x0000266C bytes.
Data in RAM or BootFlash were ignored!
Application started from address 0x00000136
Loading time 2093 ms
    
```

All data from the S-Record file that addresses a restricted area will be ignored. In this case, the Bootloader displays the following message:

```
Data in RAM or BootFlash were ignored!
```

The message “Data in RAM or BootFlash were ignored!” is displayed because when the user’s application generates and downloads an S-record file, it includes unneeded data for the RAM and Boot Flash; this data will be ignored.

If any error is detected while loading the S-Record file, the Bootloader displays an error message; see [Table 1-4](#) for a list of error codes. For example, if an S-record file contains a character that is not permitted for S-Records, the following message is displayed:

```
“Error # 02”
```

After an error message is displayed, the Bootloader waits for a processor reset.

Chapter 2

License

2.1 Limited Use License Agreement

LIMITED USE LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THIS SOFTWARE. BY USING OR COPYING THE SOFTWARE, YOU AGREE TO THE TERMS OF THIS AGREEMENT.

The software in either source code form ("Source") or object code form ("Object") (cumulatively hereinafter "Software") is provided under a license agreement ("Agreement") as described herein. Any use of the Software including copying, modifying, or installing the Software so that it is usable by or accessible by a central processing unit constitutes acceptance of the terms of the Agreement by the person or persons making such use or, if employed, the employer thereof ("Licensee") and if employed, the person(s) making such use hereby warrants that they have the authority of their employer to enter this license agreement. If Licensee does not agree with and accept the terms of this Agreement, Licensee must return or destroy any media containing the Software or materials related thereto, and destroy all copies of the Software.

The Software is licensed to Licensee by Motorola Incorporated ("Motorola") for use under the terms of this Agreement. Motorola retains ownership of the Software. Motorola grants only the rights specifically granted in this Agreement and grants no other rights. Title to the Software, all copies thereof and all rights therein, including all rights in any intellectual property including patents, copyrights, and trade secrets applicable thereto, shall remain vested in Motorola.

For the Source, Motorola grants Licensee a personal, non-exclusive, non-assignable, revocable, royalty-free right to use, copy, and make derivatives of the Source solely in a development system environment in order to produce object code solely for operating on a Motorola semiconductor device having a central processing unit ("Derivative Object").

For the Object and Derivative Object, Motorola grants Licensee a personal, non-exclusive, non-assignable, revocable, royalty-free right to copy, use, and distribute the Object and the Derivative Object solely for operating on a Motorola semiconductor device having a central processing unit.

Licensee agrees to: (a) not use, modify, or copy the Software except as expressly provided herein, (b) not distribute, disclose, transfer, sell, assign, rent, lease, or otherwise make available the Software, any derivatives thereof, or this license to a third party except as expressly provided herein, (c) not remove, obliterate, or otherwise defeat any copyright, trademark, patent or proprietary notices, related to the Software (d) not in any form export, re-export, resell, ship or divert or cause to be exported, re-exported, resold, shipped, or diverted, directly or indirectly, the Software or a direct product thereof to any country which the United States government or any agency thereof at the time of export or re-export requires an export license or other government approval without first obtaining such license or approval.

License

THE SOFTWARE IS PROVIDED ON AN "AS IS" BASIS AND WITHOUT WARRANTY OF ANY KIND INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR ANY LIABILITY OR DAMAGES OF ANY KIND INCLUDING, WITHOUT LIMITATION, DIRECT OR INDIRECT OR INCIDENTAL OR CONSEQUENTIAL OR PUNITIVE DAMAGES OR LOST PROFITS OR LOSS OF USE ARISING FROM USE OF THE SOFTWARE OR THE PRODUCT REGARDLESS OF THE FORM OF ACTION OR THEORY OF LIABILITY (INCLUDING WITHOUT LIMITATION, ACTION IN CONTRACT, NEGLIGENCE, OR PRODUCT LIABILITY) EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. THIS DISCLAIMER OF WARRANTY EXTENDS TO LICENSEE OR USERS OF PRODUCTS AND IS IN LIEU OF ALL WARRANTIES WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

Motorola does not represent or warrant that the Software is free of infringement of any third party patents, copyrights, trade secrets, or other intellectual property rights or that Motorola has the right to grant the licenses contained herein. Motorola does not represent or warrant that the Software is free of defect, or that it meets any particular requirements or need of the Licensee, or that it conforms to any documentation, or that it meets any standards.

Motorola shall not be responsible to maintain the Software, provide upgrades to the Software, or provide any field service of the Software. Motorola reserves the right to make changes to the Software without further notice to Licensee.

The Software is not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Software could create a situation where personal injury or death may occur. Should Licensee purchase or use the Software for any such unintended or unauthorized application, Licensee shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the Software.

The term of this Agreement is for as long as Licensee uses the Software for its intended purpose and is not in default of any provisions of this Agreement. Motorola may terminate this Agreement if Licensee is in default of any of the terms and conditions of this Agreement.

This Agreement shall be governed by and construed in accordance with the laws of the State of Arizona and can only be modified in a writing signed by both parties. Licensee agrees to jurisdiction and venue in the State of Arizona.

By using, modifying, installing, compiling, or copying the Software, Licensee acknowledges that this Agreement has been read and understood and agrees to be bound by its terms and conditions. Licensee agrees that this Agreement is the complete and exclusive statement of the agreement between Licensee and Motorola and supersedes any earlier proposal or prior arrangement, whether oral or written, and any other communications relative to the subject matter of this Agreement.

Appendix A

SCI Bootloader Test Applications

A.1 LoadPDFlash Test

This test checks the SCI Bootloader's ability correctly to load data into Program and Data Flash. The Bootloader loads a data array and the test routine in Program and Data Flash. After loading, the test routine verifies the data array was loaded correctly into Data and Program Flash. A **green** LED indicates the test was successful and a **red** LED indicates the test failed.

Because this test utilizes almost the entire the Program and Data Flash, it is largest application possible.

A.1.1 Test Procedure

- Set the 56F83xxEVM's jumpers as described in [Section 1.2.2](#)
- Connect a parallel cable from the Host to the 56F83xxEVM (P1)
- Connect a serial cable from the Host to the 56F83xxEVM (P2)
- Apply power to the 56F83xxEVM (P3)
- Build and load the SCI Bootloader into Flash as described in [Section 1.1.6.1](#)
- Push the RESET button (S1) on the 56F83xxEVM
- Using CodeWarrior, open:
bootloader\LoadPDFlash\LoadPDFlash.mcp
- Select which target to build - **56F8346** or **56F8323**.
- Build the *LoadDataFlash.mcp* project, which creates an S-Record for the test application
- Load:
bootloader\LoadPDFlash\Debug\56F8xxx_flash.elf.S
with the PC Host Loader utility as described in [Section 1.2.1.2](#)
- A **green** LED indicates the test passed and a **red** LED indicates the test failed

If loading was successful, the command window displays something similar to this:

```
Loading in progress .....  
Loaded 0x0000266C bytes.  
Data in RAM or BootFlash were ignored!  
Application started from address 0x00000136  
Loading time 2093 ms
```

A.2 SCI Bootloader Performance

Table A-1. SCI Bootloader Performance

Boot Program Flash Size	Speed (using PC Host Utility)
3017 words	2495 words per second

Appendix B

CAN Bootloader Test Applications

B.1 LoadPDFlash Test

This test checks the CAN Bootloader's ability to correctly load data into Program and Data Flash. The Bootloader loads a data array and the test routine in Program and Data Flash. After loading, the test routine verifies the data array was loaded correctly into Data and Program Flash. A **green** LED indicates the test was successful and a **red** LED indicates the test failed.

Because this test utilizes almost the entire the Program and Data Flash, it is the largest application.

B.1.1 Test Procedure

- Set the 56F83xxEVM's jumpers as described in [Section 1.2.2](#)
- Connect a parallel cable from the Host to the 56F83xxEVM (P1)
- Connect a serial cable from the Host to the 56F83xxEVM (P2)
- Apply power to the 56F83xxEVM (P3)
- Build and load the CAN Bootloader into Flash as described in [Section 1.1.6.1](#)
- Push the RESET button (S1) on the 56F83xxEVM
- Using CodeWarrior, open:
bootloader\LoadPDFlash\LoadPDFlash.mcp
- Select which target to build - **56F8346** or **56F8323**.
- Build the *LoadDataFlash.mcp* project, which creates an S-Record for the test application
- Load:
bootloader\LoadPDFlash\Debug\56F8xxx_flash.elf.S
with the PC Host Loader utility as described in [Section 1.2.1.3](#)
- A **green** LED indicates the test passed and a **red** LED indicates the test failed

If loading is successful, the command window displays something similar to this:

```
Loading in progress .....  
Loaded 0x0000266C bytes.  
Data in RAM or BootFlash were ignored!  
Application started from address 0x00000136  
Loading time 2093 ms
```

B.2 CAN Bootloader Performance

Table B-1. CAN Bootloader Performance

Boot Program Flash Size	Speed (using PC Host Utility)
3852 words	3706 words per second

Index

Numerics

56F8300 Peripheral User Manual [vii](#)

A

appconfig.h [1-7](#)

C

CAN [ix](#)

CAN ID [ix](#)

CAN Identifier

 CAN ID [ix](#)

CAN Specifications [ix](#)

checksum [1-8](#)

Controller Area Network

 CAN [ix](#)

 CAN bus [1-13](#)

D

DP56F800E Reference Manual [ix](#)

DSP56800E Reference Manual [vii](#)

F

FlexCAN [ix](#)

Flexible Controller Area Network

 FlexCAN [ix](#)

I

IDE [ix](#)

Identifier Extension

 IDE [ix](#)

Inside CodeWarrior

 Core Tools [vii](#)

N

NI-CAN [1-16](#)

NI-CAN Software [1-18](#)

NI-CAN User Manual [vii](#), [ix](#)

P

PC Host Loader utility [1-10](#), [1-13](#)

S

S-Record [1-1](#)

HOW TO REACH US:

USA/EUROPE/LOCATIONS NOT LISTED:

Motorola Literature Distribution;
P.O. Box 5405, Denver, Colorado 80217
1-303-675-2140 or 1-800-441-2447

JAPAN:

Motorola Japan Ltd.; SPS, Technical Information Center,
3-20-1, Minami-Azabu Minato-ku, Tokyo 106-8573 Japan
81-3-3440-3569

ASIA/PACIFIC:

Motorola Semiconductors H.K. Ltd.;
Silicon Harbour Centre, 2 Dai King Street,
Tai Po Industrial Estate, Tai Po, N.T., Hong Kong
852-26668334

TECHNICAL INFORMATION CENTER:

1-800-521-6274

HOME PAGE:

<http://motorola.com/semiconductors>

Information in this document is provided solely to enable system and software implementers to use Motorola products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part.



Motorola and the Stylized M Logo are registered in the U.S. Patent and Trademark Office. digital dna is a trademark of Motorola, Inc. This product incorporates SuperFlash® technology licensed from SST. All other product or service names are the property of their respective owners. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

© Motorola, Inc. 2003

MC56F83xxBLUM/D